



Security & Safety

- [IGEL Product Security Information](#) (see page 3)
- [Product Security Archive](#) (see page 126)
- [Reporting Vulnerabilities in IGEL Products](#) (see page 127)
- [UEFI Secure Boot Enabling Guides](#) (see page 128)
- [AMD Secure Processor](#) (see page 191)
- [AMD Memory Guard](#) (see page 194)
- [BSI Grundschutz](#) (see page 196)
- [Xz Backdoor \(CVE-2024-3094\) Does Not Affect IGEL OS 11 and OS 12](#) (see page 217)

## IGEL Product Security Information

Here you find all IGEL Security Notices (ISNs). They inform you of any major vulnerabilities that have been found in IGEL software products and of how to fix or mitigate these. If you have questions or concerns about ISNs, you can contact the IGEL Security Team at [security@igel.com](mailto:security@igel.com)<sup>1</sup>. If you are an IGEL customer, please open a case on the [IGEL Customer Portal](#)<sup>2</sup>.

Besides that, most IGEL software updates fix several minor vulnerabilities. You find information about these in the Release Notes that are published with each release.



### Security Announcements Mailing List

To get new ISNs and ISN updates delivered to your inbox, subscribe to the Security Announcements Mailing List. Go to [igel.com](http://igel.com)<sup>3</sup> and find the "Subscribe for Updates" form at the bottom of the page. This will initially subscribe you to all mailings from IGEL, but using the unsubscribe link at the bottom of a mail, you can select which communications you wish to receive and which not.

## IGEL Security Notices (ISN)

- [ISN 2024-10: Chromium Critical Vulnerability](#) (see page 6)
- [ISN 2024-08: Firefox ESR Vulnerabilities](#) (see page 7)
- [ISN 2024-07: Chromium Vulnerabilities](#) (see page 8)
- [ISN 2024-06: OS 11 Kernel Vulnerabilities](#) (see page 10)
- [ISN 2024-05: OS 12 Kernel Vulnerability](#) (see page 12)
- [ISN 2024-04: Libuv Vulnerability](#) (see page 13)
- [ISN 2024-03: Firefox ESR Vulnerabilities](#) (see page 14)
- [ISN 2024-02: X.org Vulnerabilities](#) (see page 15)
- [ISN 2024-01: Chromium Vulnerabilities](#) (see page 17)
- [ISN 2023-39: SSH Terrapin Vulnerability](#) (see page 18)
- [ISN 2023-38: X.org Vulnerabilities](#) (see page 20)
- [ISN 2023-36: BlueZ Vulnerability](#) (see page 21)
- [ISN 2023-35: GIMP Vulnerabilities](#) (see page 22)
- [ISN 2023-34: Perl Vulnerabilities](#) (see page 23)
- [ISN 2023-33: Zlib Vulnerability](#) (see page 24)
- [ISN 2023-32: Chromium Vulnerabilities](#) (see page 25)
- [ISN 2023-31: Webkit Vulnerabilities](#) (see page 26)
- [ISN 2023-30: Ffmpeg Vulnerabilities](#) (see page 27)
- [ISN 2023-29: Chromium Vulnerabilities](#) (see page 28)
- [ISN 2023-28: Firefox ESR Vulnerabilities](#) (see page 29)
- [ISN 2023-27: ActiveMQ in UMS HA](#) (see page 30)
- [ISN 2023-26: X.org Vulnerabilities](#) (see page 31)
- [ISN 2023-25: Webkit Vulnerabilities](#) (see page 32)
- [ISN 2023-24: Chromium Vulnerability](#) (see page 33)
- [ISN 2023-23: Curl Vulnerability](#) (see page 34)

---

<sup>1</sup> <mailto:security@igel.com>

<sup>2</sup> <https://support.igel.com/>

<sup>3</sup> <http://igel.com>

- [ISN 2023-22: Multiple X11 Vulnerabilities \(see page 35\)](#)
- [ISN 2023-21: Libvpx Vulnerability in Chromium and Firefox \(see page 36\)](#)
- [ISN 2023-20: Firefox Libwebp Vulnerability \(see page 38\)](#)
- [ISN 2023-19: Libwebp Vulnerability in Chromium and Other Software \(see page 39\)](#)
- [ISN-2023-18: SnakeYAML Vulnerability \(see page 40\)](#)
- [ISN 2023-17: AMD Inception CPU Vulnerability \(see page 41\)](#)
- [ISN 2023-16: Intel Downfall CPU Vulnerability \(see page 42\)](#)
- [ISN 2023-15: ZenBleed Vulnerability \(see page 43\)](#)
- [ISN 2023-14: IGEL OS OpenSSH Vulnerability \(see page 44\)](#)
- [ISN 2023-13: IGEL OS Ghostscript Vulnerability \(see page 45\)](#)
- [ISN 2023-12: Citrix Secure Access Client \(see page 47\)](#)
- [ISN 2023-11: “StackRot” in IGEL OS Kernel \(see page 48\)](#)
- [ISN 2023-10: Log4j 1.x in IBM i Access Client \(see page 49\)](#)
- [ISN 2023-09: RCE in CUPS Printing System \(see page 50\)](#)
- [ISN 2023-08: Chromium Critical Vulnerability \(see page 51\)](#)
- [ISN 2023-07: Device Encryption Password Bug \(see page 52\)](#)
- [ISN 2023-06: UEFI Secure Boot Malware and IGEL OS \(see page 53\)](#)
- [ISN 2023-05: Chromium Local File Access \(see page 54\)](#)
- [ISN 2023-04: IGEL OS Local Privilege Escalation \(see page 55\)](#)
- [ISN 2023-03: Chromium Vulnerabilities \(see page 56\)](#)
- [ISN 2023-02: Firefox ESR Vulnerabilities \(see page 57\)](#)
- [ISN 2023-01: Citrix Workspace App Vulnerability \(see page 59\)](#)
- [ISN 2022-21: Chromium Vulnerability \(see page 60\)](#)
- [ISN 2022-20: Firefox ESR Vulnerabilities \(see page 61\)](#)
- [ISN 2022-19: Log4j 1.x Remainder in UMS \(see page 62\)](#)
- [ISN 2022-18: Linux Kernel Vulnerability \(see page 63\)](#)
- [ISN 2022-17: Chromium WebRTC Vulnerability \(see page 64\)](#)
- [ISN 2022-16: Firefox Vulnerabilities \(see page 65\)](#)
- [ISN 2022-15: Chromium Browser Vulnerabilities \(see page 66\)](#)
- [ISN 2022-14: Chromium Browser Vulnerabilities \(see page 67\)](#)
- [ISN 2022-13: UMS Vulnerabilities \(see page 68\)](#)
- [ISN 2022-12: Teradici PCoIP Library Vulnerabilities \(see page 70\)](#)
- [ISN 2022-11: VMware Horizon Privilege Escalation \(see page 71\)](#)
- [ISN 2022-10: Firefox Vulnerabilities \(see page 73\)](#)
- [ISN 2022-09: Zlib Vulnerability \(see page 74\)](#)
- [ISN 2022-08: Chromium JavaScript Vulnerability \(see page 75\)](#)
- [ISN 2022-07: Chromium Browser Vulnerabilities \(see page 76\)](#)
- [ISN 2022-06: OpenSSL Denial of Service \(see page 77\)](#)
- [ISN 2022-05: Netfilter Escalation of Privilege \(see page 78\)](#)
- [ISN 2022-04: Dirty Pipe Escalation of Privilege \(see page 80\)](#)
- [ISN 2022-03: Glibc Denial of Service in IGEL OS \(see page 82\)](#)
- [ISN 2022-02: UEFI Vulnerabilities in UD Devices \(see page 84\)](#)
- [ISN 2022-01: Polkit Escalation of Privilege \(see page 86\)](#)
- [ISN 2021-11: UMS Log4j Vulnerability \(see page 88\)](#)
- [ISN 2021-10: Chromium vulnerabilities \(see page 90\)](#)
- [ISN 2021-09: Firefox ESR vulnerabilities \(see page 91\)](#)
- [ISN 2021-08: ICG Authentication Vulnerability \(see page 92\)](#)

- [ISN 2021-07: UMS Web App Information Disclosure \(see page 93\)](#)
- [ISN 2021-06: IGEL OS OpenSSH Vulnerabilities \(see page 94\)](#)
- [ISN 2021-05: IGEL OS Denial of Service \(see page 96\)](#)
- [ISN 2021-04: IGEL OS Kernel Privilege Escalation \(see page 97\)](#)
- [ISN 2021-03: IGEL W10 Print Spooler Vulnerability \(see page 99\)](#)
- [ISN 2021-02: IGEL OS and W10 Wi-Fi Vulnerabilities \(Fragattacks\) \(see page 100\)](#)
- [ISN 2021-01: IGEL OS Remote Command Execution Vulnerability \(see page 102\)](#)
- [ISN 2020-10: IGEL OS Bluetooth Vulnerabilities \(see page 103\)](#)
- [ISN 2020-09: Command Execution from Start Menu \(see page 104\)](#)
- [ISN 2020-08: Firefox ESR Various Vulnerabilities \(see page 105\)](#)
- [ISN 2020-07: Firefox ESR Various Vulnerabilities \(see page 106\)](#)
- [ISN 2020-06: IGEL Cloud Gateway \(ICG\) Various Vulnerabilities \(see page 107\)](#)
- [ISN 2020-05: Intel Chipset Vulnerabilities \(see page 108\)](#)
- [ISN 2020-04: Firefox ESR Various Vulnerabilities \(see page 109\)](#)
- [ISN 2020-03: Firefox ESR Vulnerabilities \(see page 110\)](#)
- [ISN 2020-02: Windows CryptoAPI Spoofing Vulnerability \(see page 111\)](#)
- [ISN 2020-01: Firefox ESR Vulnerability \(see page 112\)](#)
- [ISN-2019-13: Windows Defender \(see page 113\)](#)
- [ISN-2019-12: Internet Explorer Vulnerability \(see page 114\)](#)
- [ISN 2019-11: Firefox ESR Vulnerabilities \(see page 115\)](#)
- [ISN 2019-10: Spectre SWAPGS CPU Vulnerability \(see page 116\)](#)
- [ISN 2019-09: IGEL OS SWP Vulnerability \(see page 117\)](#)
- [ISN 2019-08: Firefox ESR Vulnerabilities \(see page 118\)](#)
- [ISN 2019-07: Firefox ESR Vulnerability \(see page 119\)](#)
- [ISN 2019-06: IGEL OS Kernel Vulnerability \(see page 120\)](#)
- [ISN 2019-05: UMS HA Vulnerability \(see page 121\)](#)
- [ISN 2019-04: RDP Vulnerability in WEST7 \(see page 122\)](#)
- [ISN 2019-03: Zombieload, RIDL, Fallout \(see page 123\)](#)
- [ISN 2019-02: UMS Vulnerability \(see page 124\)](#)
- [ISN 2019-01: UMS Vulnerability \(see page 125\)](#)

## ISN 2024-10: Chromium Critical Vulnerability

First published 15 April 2024

CVSS 3.1: 9.8 (critical)

CVSS:3.1/AV:N/AC:L/PR:N/UI:N/S:U/C:H/I:H/A:H/E:P

### Summary

Multiple security vulnerabilities have been found in the Chromium web browser used in IGEL OS. This affects the following IGEL products:

- IGEL OS 12
- IGEL OS 11

### Details

Among the issues discovered is a use-after-free in ANGLE, the WebGL component in Chromium. An attacker could abuse it to exploit heap corruption via a crafted HTML page, so this is rated as critical (CVE-2024-2883). Google is aware that an exploit for this vulnerability exists in the wild.

Apart from that, issues rated high have been found: A use-after-free in Dawn (CVE-2024-2885), a use-after-free in WebCodecs (CVE-2024-2886) and a type confusion in WebAssembly (CVE-2024-2887).

### Update Instructions

- OS 12: Update to the OS 12 Chromium app version 123.0.6312.105 when it is available in the IGEL App Portal.
- OS 11: The IGEL OS Private Build 11.09.268 with Chromium updated to version 123.0.6312.105 is available from IGEL Customer Engineering.

### References

- CVE-2024-2883: <https://www.cve.org/CVERecord?id=CVE-2024-2883>
- Chrome Releases Blog: [https://chromereleases.googleblog.com/2024/03/stable-channel-update-for-desktop\\_26.html](https://chromereleases.googleblog.com/2024/03/stable-channel-update-for-desktop_26.html)

## ISN 2024-08: Firefox ESR Vulnerabilities

First published 26 March 2024

CVSS 3.1: 9.8 (critical)

CVSS:3.1/AV:N/AC:L/PR:N/UI:R/S:U/C:H/I:H/A:H

### Summary

Multiple security vulnerabilities have been found in the Firefox ESR web browser used in IGEL OS. This affects the following IGEL products:

- IGEL OS 12
- IGEL OS 11

### Details

Among the vulnerabilities found, one is rated as critical: An attacker might be able to inject an event handler into a privileged object, which may enable them to execute arbitrary code (CVE-2024-29944).

Apart from that, several issues rated as high have been identified. Several methods could have experienced integer overflows, causing underallocation of an output buffer, and leading to an out-of-bounds write (CVE-2024-2608). An out-of-bounds memory read was discovered in networking channels (CVE-2024-1546). ICU can be affected by resource exhaustion (CVE-2024-2616), and a TLS method in NSS can cause a potentially exploitable crash (CVE-2024-0743). Another issue enables an attacker to spoof an alert dialog on another site (CVE-2024-1547). Memory safety bugs conclude the list (CVE-2024-1553, CVE-2024-2614).

### Update Instructions

- OS 12: Update the OS 12 Firefox ESR App to version 115.9.1 when it is available on the IGEL App Portal.
- OS 11: Update to IGEL 11.09.310 when it is available.

### References

- MSFA-2024-16: <https://www.mozilla.org/en-US/security/advisories/mfsa2024-16/>
- MSFA-2024-12: <https://www.mozilla.org/en-US/security/advisories/mfsa2024-13/>
- MSFA-2024-06: <https://www.mozilla.org/en-US/security/advisories/mfsa2024-06/>

## ISN 2024-07: Chromium Vulnerabilities

Updated 15 April 2024 (IGEL OS 11.09.310 available)

First published 25 March 2024

CVSS 3.1: 8.8 (high)

CVSS:3.1/AV:N/AC:L/PR:N/UI:R/S:U/C:H/I:H/A:H

### Summary

Multiple security vulnerabilities have been found in the Chromium web browser used in IGEL OS. This affects the following IGEL products:

- IGEL OS 12
- IGEL OS 11

### Details

Out of the security issues found in the Chromium web browser, several affect the V8 JavaScript engine. They are all rated high and range from type confusion (CVE-2024-0518, CVE-2024-1938, CVE-2024-1939) over inappropriate implementation (CVE-2024-2174) to out-of-bounds memory access (CVE-2024-2173, CVE-2024-0519).

Use-after-free vulnerabilities rated high have been found in the Mojo (CVE-2024-1284, CVE-2024-1670), Performance Manager (CVE-2024-2400), WebAudio (CVE-2024-0807), Network (CVE-2024-1077), WebRTC (CVE-2024-1059), Canvas (CVE-2024-1060) and FedCM (CVE-2024-2176) components of the browser. These could allow a remote attacker to exploit heap corruption via crafted data.

Further issues are out-of-bounds memory access in Blink (CVE-2024-1669), heap buffer overflow in Skia (CVE-2024-1283), an inappropriate implementation in Accessibility (CVE-2024-0812) and an Integer underflow in WebUI (CVE-2024-0808). These are also rated high.

### Update Instructions

- OS 12: Update the OS 12 Chromium App to version 122.0.6261.128 when it is available on the IGEL App Portal.
- OS 11: Update to IGEL OS version 11.09.310.

### References

- Chrome Releases Blog: [https://chromereleases.googleblog.com/2024/03/stable-channel-update-for-desktop\\_12.html](https://chromereleases.googleblog.com/2024/03/stable-channel-update-for-desktop_12.html)
- Chrome Releases Blog: <https://chromereleases.googleblog.com/2024/03/stable-channel-update-for-desktop.html>
- Chrome Releases Blog: [https://chromereleases.googleblog.com/2024/02/stable-channel-update-for-desktop\\_27.html](https://chromereleases.googleblog.com/2024/02/stable-channel-update-for-desktop_27.html)





- Chrome Releases Blog: [https://chromereleases.googleblog.com/2024/02/stable-channel-update-for-desktop\\_20.html](https://chromereleases.googleblog.com/2024/02/stable-channel-update-for-desktop_20.html)
- Chrome Releases Blog: [https://chromereleases.googleblog.com/2024/02/stable-channel-update-for-desktop\\_13.html](https://chromereleases.googleblog.com/2024/02/stable-channel-update-for-desktop_13.html)
- Chrome Releases Blog: <https://chromereleases.googleblog.com/2024/02/stable-channel-update-for-desktop.html>
- Chrome Releases Blog: [https://chromereleases.googleblog.com/2024/01/stable-channel-update-for-desktop\\_30.html](https://chromereleases.googleblog.com/2024/01/stable-channel-update-for-desktop_30.html)
- Chrome Releases Blog: [https://chromereleases.googleblog.com/2024/01/stable-channel-update-for-desktop\\_23.html](https://chromereleases.googleblog.com/2024/01/stable-channel-update-for-desktop_23.html)
- Chrome Releases Blog: [https://chromereleases.googleblog.com/2024/01/stable-channel-update-for-desktop\\_16.html](https://chromereleases.googleblog.com/2024/01/stable-channel-update-for-desktop_16.html)

## ISN 2024-06: OS 11 Kernel Vulnerabilities

First published 12 March 2024

CVSS 3.1: 8.4 (High)

CVSS:3.1/AV:L/AC:L/PR:N/UI:N/S:U/C:H/I:H/A:H

### Summary

Multiple security vulnerabilities have been found in the Linux Kernel version used in IGEL OS. This affects the following IGEL products:

- IGEL OS 11

### Details

The Linux Kernel version 6.1.42 used in IGEL OS 11 is affected by a use-after-free vulnerability in the NVMe/TCP subsystem in the Linux kernel. This may allow an attacker to cause a use-after-free and double-free problem, which may permit remote code execution or lead to local privilege escalation (CVE-2023-5178, high).

Another security issue has been discovered in the TLS subsystem of the Linux Kernel. Under certain circumstances, a use-after-free can be triggered (CVE-2024-26582). An attacker could use this to trigger a denial of service or code execution, so the severity of this vulnerability is rated as high. CVE-2024-0646 also affects TLS and may lead to privilege escalation. Both issues are rated as high.

Improper access control has been found in the Intel Ethernet Controller RDMA driver for Linux before version 1.9.30. It may allow an unauthenticated user to potentially enable escalation of privilege via network access (CVE-2023-25775, high).

Several vulnerabilities affect the kernel's net/sched subsystem and can allow for local privilege escalation (CVE-2023-4206, CVE-2023-4207, CVE-2023-4208, CVE-2023-4623 and CVE-2023-4921).

Netfilter/nftables-is affected by CVE-2023-6817, CVE-2024-1086, CVE-2023-4015, CVE-2023-4147, CVE-2023-42753 and CVE-2024-22705, which might enable privilege escalation.

CVE-2023-40283 and CVE-2023-51779 both describe use-after-frees in Bluetooth.

In addition to the above, the kernel is affected by the issues CVE-2023-46813, CVE-2023-5717, CVE-2023-6932, CVE-2023-6531, CVE-2023-6931, CVE-2023-51780, CVE-2023-51781 and CVE-2023-51782. They are rated as high and may lead to local privilege escalation.

### Update Instructions

- OS 11: Update to IGEL OS 11.10.100, which has a complete kernel upgrade, when it is available.

### References

- CVE-2023-5178: <https://cve.mitre.org/cgi-bin/cvename.cgi?name=CVE-2023-5178>
- CVE-2024-26582: <https://cve.mitre.org/cgi-bin/cvename.cgi?name=CVE-2024-26582>

- CVE-2024-0646: <https://cve.mitre.org/cgi-bin/cvename.cgi?name=CVE-2024-0646>
- CVE-2023-25775: <https://cve.mitre.org/cgi-bin/cvename.cgi?name=CVE-2023-25775>
- CVE-2023-4206: <https://cve.mitre.org/cgi-bin/cvename.cgi?name=CVE-2023-4206>
- CVE-2023-4207: <https://cve.mitre.org/cgi-bin/cvename.cgi?name=CVE-2023-4207>
- CVE-2023-4208: <https://cve.mitre.org/cgi-bin/cvename.cgi?name=CVE-2023-4208>
- CVE-2023-4623: <https://cve.mitre.org/cgi-bin/cvename.cgi?name=CVE-2023-4623>
- CVE-2023-4921: <https://cve.mitre.org/cgi-bin/cvename.cgi?name=CVE-2023-4921>
- CVE-2023-6817: <https://cve.mitre.org/cgi-bin/cvename.cgi?name=CVE-2023-6817>
- CVE-2024-1086: <https://cve.mitre.org/cgi-bin/cvename.cgi?name=CVE-2024-1086>
- CVE-2023-4015: <https://cve.mitre.org/cgi-bin/cvename.cgi?name=CVE-2023-4015>
- CVE-2023-4147: <https://cve.mitre.org/cgi-bin/cvename.cgi?name=CVE-2023-4147>
- CVE-2023-42753: <https://cve.mitre.org/cgi-bin/cvename.cgi?name=CVE-2023-42753>
- CVE-2024-22705: <https://cve.mitre.org/cgi-bin/cvename.cgi?name=CVE-2024-22705>
- CVE-2023-40283: <https://cve.mitre.org/cgi-bin/cvename.cgi?name=CVE-2023-40283>
- CVE-2023-51779: <https://cve.mitre.org/cgi-bin/cvename.cgi?name=CVE-2023-51779>
- CVE-2023-46813: <https://cve.mitre.org/cgi-bin/cvename.cgi?name=CVE-2023-46813>
- CVE-2023-5717: <https://cve.mitre.org/cgi-bin/cvename.cgi?name=CVE-2023-5717>
- CVE-2023-6932: <https://cve.mitre.org/cgi-bin/cvename.cgi?name=CVE-2023-6932>
- CVE-2023-6531: <https://cve.mitre.org/cgi-bin/cvename.cgi?name=CVE-2023-6531>
- CVE-2023-6931: <https://cve.mitre.org/cgi-bin/cvename.cgi?name=CVE-2023-6931>
- CVE-2023-51780: <https://cve.mitre.org/cgi-bin/cvename.cgi?name=CVE-2023-51780>
- CVE-2023-51781: <https://cve.mitre.org/cgi-bin/cvename.cgi?name=CVE-2023-51781>
- CVE-2023-51782: <https://cve.mitre.org/cgi-bin/cvename.cgi?name=CVE-2023-51782>



## ISN 2024-05: OS 12 Kernel Vulnerability

First published 8 March 2024

CVSS 3.1: 8.4 (High)

CVSS:3.1/AV:L/AC:L/PR:N/UI:N/S:U/C:H/I:H/A:H

### Summary

A security vulnerability has been found in the Linux Kernel used in IGEL OS. This affects the following IGEL products:

- IGEL OS 12

### Details

A security issue has been discovered in TLS subsystem of the Linux Kernel. Under certain circumstances, a use-after-free can be triggered (CVE-2024-26582). An attacker could use this to trigger a denial of service or code execution, so the severity of this vulnerability is rated as high.

### Update Instructions

- OS 12: IGEL is preparing a fixed OS 12 base system version.

### References

- CVE-2024-26582: <https://cve.org/CVERecord/?id=CVE-2024-26582>

## ISN 2024-04: Libuv Vulnerability

First published 4 March 2024

CVSS 3.1: 7.3 (High)

CVSS:3.1/AV:N/AC:L/PR:N/UI:N/S:U/C:L/I:L/A:L

### Summary

A security vulnerability has been found in the Libuv library used in IGEL OS. This affects the following IGEL products:

- IGEL OS 12 (only if Firefox app is installed)
- IGEL OS 11

### Details

A security issue has been discovered in the `uv_getaddrinfo` function in Libuv. It truncates hostnames to 256 characters before it calls `getaddrinfo`. An attacker could exploit this to create payloads that are resolved to unintended IP addresses, thus bypassing security checks.

The OS 12 base system contains Libuv, but the library is only used if the Firefox app is installed.

### Update Instructions

- OS 12: Update to OS 12 base system version 12.4.1 when it is available.
- OS 11: IGEL is working on an OS 11 release with an updated Libuv.

### References

- CVE-2024-24806: <https://www.cve.org/CVERecord?id=CVE-2024-24806>

## ISN 2024-03: Firefox ESR Vulnerabilities

First published 31 January 2024

CVSS 3.1: 8.8 (High)

CVSS:3.1/AV:N/AC:L/PR:N/UI:R/S:U/C:H/I:H/A:H

### Summary

Multiple security vulnerabilities have been found in the Firefox ESR web browser used in IGEL OS. This affects the following IGEL products:

- IGEL OS 11

### Details

The WebGL DrawElementsInstanced method in Firefox ESR is susceptible to a heap buffer overflow when used on systems with the Mesa VM driver (typically used when running on VMware virtualization). This issue is rated high, as it could allow an attacker to perform remote code execution and sandbox escape (CVE-2023-6856). Additionally, ownership mismanagement leads to a use-after-free in ReadableByteStreams that is also rated as high (CVE-2023-6207).

Apart from that, multiple memory management vulnerabilities have been found that are rated as medium.

### Update Instructions

- IGEL OS 11: IGEL is preparing an IGEL OS 11 release with an updated Firefox ESR version.

### References

- <https://nvd.nist.gov/vuln/detail/CVE-2023-6856>
- <https://nvd.nist.gov/vuln/detail/CVE-2023-6207>
- <https://www.mozilla.org/en-US/security/advisories/mfsa2024-02/>
- <https://www.mozilla.org/en-US/security/advisories/mfsa2023-54/>
- <https://www.mozilla.org/en-US/security/advisories/mfsa2023-50/>

## ISN 2024-02: X.org Vulnerabilities

First published 31 January 2024

CVSS 3.1: 7.8 (High)

CVSS:3.1/AV:L/AC:L/PR:L/UI:N/S:U/C:H/I:H/A:H

### Summary

Multiple security vulnerabilities have been found in the X.org display system used in IGEL OS. This affects the following IGEL products:

- IGEL OS 12
- IGEL OS 11

### Details

It has been discovered that the X Server incorrectly handled memory when processing the DeviceFocusEvent and ProcXIQueryPointer APIs (CVE-2023-6816). This could lead the X server to crash, reveal sensitive information, or allow the execution of arbitrary code. This is rated as high. The server may also handle reattaching to a different master device incorrectly, potentially leading to a crash or code execution (CVE-2024-0229, high).

### Mitigation

To prevent these vulnerabilities from being exploited remotely, disable X11 forwarding over SSH (see instructions below). However, this does not defend against local threats.

- IGEL OS 12: In the Profile Configurator or the Device Configurator, go to **System > Remote Access > SSH Access** and make sure that **Permit X11 forwarding** is disabled. By default, this service is disabled. Please note that X 11 forwarding, like the other SSH access settings, is only effective if the **Enable** parameter is activated.
- IGEL OS 11: Disable X11 forwarding, see Disabling X11 Forwarding.

Additionally, leave TCP connections for X11 disabled:

- IGEL OS 12: Leave **User Interface > Display Settings > Access Control > Disable TCP connections** as it is or reset it to default.
- IGEL OS 11: Leave **User Interface > Display > Access Control > Disable TCP connections** as it is or reset it to default.

### Update Instructions

- IGEL OS 12: IGEL is preparing an updated IGEL OS 12 Base System app.
- IGEL OS 11: IGEL is preparing an updated IGEL OS 11 release.



## References

- CVE-2023-6816: <https://cve.mitre.org/cgi-bin/cvename.cgi?name=2023-6816>
- CVE-2024-0229: <https://cve.mitre.org/cgi-bin/cvename.cgi?name=2024-0229>
- CVE-2024-21885: <https://cve.mitre.org/cgi-bin/cvename.cgi?name=2024-21885>
- CVE-2024-21886: <https://cve.mitre.org/cgi-bin/cvename.cgi?name=2024-21886>



## ISN 2024-01: Chromium Vulnerabilities

First published 22 January 2024

CVSS 3.1: 8.8 (High)

CVSS:3.1/AV:N/AC:L/PR:N/UI:R/S:U/C:H/I:H/A:H

### Summary

Multiple Security vulnerabilities have been discovered in the Chromium web browser used in IGEL OS. This affects the following IGEL products:

- IGEL OS 12
- IGEL OS 11

### Details

Several memory management issues have been found and rated high: a use after free (CVE-2024-0222) and a heap buffer overflow in ANGLE (High CVE-2024-0223), a use after free in WebAudio (CVE-2024-0224), and a use after free in WebGPU (CVE-2024-0225). Additionally, there is insufficient data validation in Extensions (CVE-2024-0333), which is also rated as high.

### Update Instructions

- OS 12: Upgrade to the OS 12 Chromium App version 120.0.6099.216 as soon as it is available from the IGEL App Portal.
- OS 11: Upgrade to OS 11.09.210.

### References

- [https://chromereleases.googleblog.com/2024/01/stable-channel-update-for-desktop\\_9.html](https://chromereleases.googleblog.com/2024/01/stable-channel-update-for-desktop_9.html)
- <https://chromereleases.googleblog.com/2024/01/stable-channel-update-for-desktop.html>

## ISN 2023-39: SSH Terrapin Vulnerability

First published 5 February 2024

CVSS 3.1: 5.9 (Medium)

CVSS:3.1/AV:N/AC:H/PR:N/S:U/C:N/I:H/A:N

### Summary

A security vulnerability has been discovered in secure shell (SSH), which is used in IGEL OS. This affects the following IGEL products:

- IGEL OS 12
- IGEL OS 11

### Details

A vulnerability has been found in the SSH protocol that weakens the secure channel, so that messages could be removed during transmission.

However, an attack is only possible if the attacker can man-in-the-middle the SSH traffic and if the connection uses either **ChaCha20-Poly1305** or a **CBC cipher with Encrypt-then-MAC (CVE-2023-48795)**.

This is why this vulnerability is rated as medium.

It affects the OpenSSH server as well as the client.

### Mitigation

#### OS 12

- The OpenSSH server in OS 12 is not activated by default. SSH is not necessary for managing IGEL OS, so unless you have another use case you can leave it deactivated.
- If you use OS 12 base system version 12.3.1, you have the latest OpenSSH 9.6p1. When you use this version or newer on the peer, they will automatically use the new "strict KEX" protocol extension.

#### OS 11

- The OpenSSH server in OS 11 is active by default, but SSH is not necessary for managing IGEL OS. Unless you have another use case, deactivate it.
- If you use IGEL OS 11.09.210, you have the latest OpenSSH 9.6p1. When you use this version or newer on the peer, they will automatically use the new "strict KEX" protocol extension.

### Update Instructions

- OS 12: Update to OS 12 base system version **12.3.1 or newer**, which has OpenSSH version 9.6p1.



- OS 11: Update to IGEL OS version **11.09.210 or newer**, which has OpenSSH version 9.6p1.

## References

- Terrapin Attack: <https://terrapin-attack.com>

## ISN 2023-38: X.org Vulnerabilities

Updated 22 January 2024 (fixed versions)

First published 19 December 2023

CVSS 3.1: 7.8 (High)

CVSS:3.1/AV:L/AC:L/PR:L/UI:N/S:U/C:H/I:H/A:H

### Summary

Security vulnerabilities have been discovered in the X.org graphics system used in IGEL OS. This affects the following IGEL products:

- IGEL OS 12
- IGEL OS 11

### Details

A flaw was found in xorg-server. Querying or changing XKB button actions such as moving from a touchpad to a mouse can result in out-of-bounds memory reads and writes. This may allow local privilege escalation or possible remote code execution (RCE) in cases where X11 forwarding is involved. This is tracked as CVE-2023-6377 and rated as high.

Additionally, a specially crafted request to RRChangeProviderProperty or RRChangeOutputProperty can trigger an integer overflow which may lead to a disclosure of sensitive information (CVE-2023-6478, high).

### Mitigation

Remote code execution can be mitigated by disabling X11 forwarding over SSH (see instructions below). However, this does not fix the local threats.

- OS 12: Disable X11 forwarding in Setup under **System > Remote Access > SSH Access**, if the SSH services is active – by default this service is disabled.
- OS 11: Disable X11 forwarding, see Disabling X11 Forwarding.

### Update Instructions

- OS 12: Update to OS 12 base system version 12.3.1 (planned for 6 February) or newer.
- OS 11: Update to IGEL OS version 11.09.210 or newer.

### References

- CVE-2023-6377: <https://cve.mitre.org/cgi-bin/cvename.cgi?name=2023-6377>
- CVE-2023-6478: <https://cve.mitre.org/cgi-bin/cvename.cgi?name=CVE-2023-6478>

## ISN 2023-36: BlueZ Vulnerability

Updated 23 January 2024 (corrected OS 11 update)

Updated 16 January 2024 (added fixed versions)

First published 19 December 2023

CVSS 3.1: 8.8 (High)

CVSS:3.1/AV:A/AC:L/PR:N/UI:N/S:U/C:H/I:H/A:H

### Summary

A security vulnerability has been discovered in the Bluetooth stack used in IGEL OS. This affects the following IGEL products:

- IGEL OS 12
- IGEL OS 11

### Details

It has been found that BlueZ does not properly restrict non-bonded devices from injecting Human Interface Device (HID) events into the input subsystem. This could allow a physically proximate attacker to inject keystrokes and mouse events – and execute arbitrary commands when the device is discoverable.

### Mitigation

1. Use wired USB devices for keyboard and mouse.
2. Disable Bluetooth in Setup **Devices > Bluetooth**.

### Update Instructions

- OS 12: Update to OS 12 base system app version 12.3.1 (planned to be released on 6 Feb 2024).
- OS 11: IGEL is preparing an OS 11 release with fixed Bluetooth.

### References

- CVE-2023-45866: <https://cve.mitre.org/cgi-bin/cvename.cgi?name=CVE-2023-45866>

## ISN 2023-35: GIMP Vulnerabilities

First published 22 January 2023

CVSS 3.1: 8.2 (High)

CVSS:3.1/AV:L/AC:L/PR:N/UI:R/S:U/C:N/I:N/A:H

### Summary

Multiple security vulnerabilities have been discovered in the GIMP image processing library used in IGEL OS. This affects the following IGEL products:

- IGEL OS 11 (not in the default configuration)

### Details

GIMP is vulnerable to crafted files in several formats: Processing DDS, PSP or PSD files can cause overflows and enable remote code execution (CVE-2023-44441, CVE-2023-44442, CVE-2023-44443). This is rated as high. Crafted XCF files can exhaust memory or trigger an unhandled exception, which may lead to a denial of service (CVE-2022-30067, CVE-2022-32990), which is rated as medium.

### Mitigation

GIMP is not active in the IGEL OS 11 default configuration. It is only mounted if you activate **Scanner Support / SANE (Limited Support ...)** in **System > Firmware Customization > Features** in Setup. If you have it activated, you can deactivate it to mitigate this vulnerability.

### Update Instructions

- OS 11: Update to IGEL OS version 11.09.210 or newer

### References

- CVE-2023-44441: <https://cve.mitre.org/cgi-bin/cvename.cgi?name=CVE-2023-44441>
- CVE-2023-44442: <https://cve.mitre.org/cgi-bin/cvename.cgi?name=CVE-2023-44442>
- CVE-2023-44443: <https://cve.mitre.org/cgi-bin/cvename.cgi?name=CVE-2023-44443>
- CVE-2023-44444: <https://cve.mitre.org/cgi-bin/cvename.cgi?name=CVE-2023-44444>
- CVE-2022-30067: <https://cve.mitre.org/cgi-bin/cvename.cgi?name=CVE-2022-30067>
- CVE-2022-32990: <https://cve.mitre.org/cgi-bin/cvename.cgi?name=CVE-2022-32990>

## ISN 2023-34: Perl Vulnerabilities

First published 19 December 2023

CVSS 3.1: 8.4 (High)

CVSS:3.1/AV:L/AC:L/PR:N/UI:N/S:U/C:H/I:H/A:H

### Summary

A security vulnerability has been discovered in the Perl scripting language used in IGEL OS. This affects the following IGEL products:

- IGEL OS 11

### Details

Perl is vulnerable to a stack-based crash that can lead to remote code execution or local privilege escalation (CVE-2022-48522). This is rated as high. Additionally, when a regular expression is compiled by Perl, an attacker could craft an expression that leads to a controlled overflow in a heap allocated buffer (CVE-2023-47038, high).

### Update Instructions

- OS 11: Update to IGEL OS 11.09.160 when available.

### References

- CVE-2022-48522: [https://cve.mitre.org/cgi-bin/cvename.cgi?name=CVE- CVE-2022-48522](https://cve.mitre.org/cgi-bin/cvename.cgi?name=CVE-CVE-2022-48522)<sup>4</sup>
- CVE-2023-47038: <https://cve.mitre.org/cgi-bin/cvename.cgi?name=CVE-2023-47038>

---

<sup>4</sup> <https://cve.mitre.org/cgi-bin/cvename.cgi?name=CVE-%20CVE-2022-48522>

## ISN 2023-33: Zlib Vulnerability

First published 18 December 2023

CVSS 3.1: 9.8 (Critical)

CVSS:3.1/AV:N/AC:L/PR:N/UI:N/S:U/C:H/I:H/A:H

### Summary

A security vulnerability has been found in the Zlib compression library used in IGEL OS. This affects the following IGEL products:

- IGEL OS 12
- IGEL OS 11

### Details

The MiniZip component in Zlib contains an integer overflow and resultant heap-based buffer overflow via a long filename, comment, or extra field. This could enable an attacker to execute arbitrary code via constructed input. This vulnerability is tracked as CVE-2023-45853 and rated critical.

### Update Instructions

- OS 12: Update to IGEL OS version 12.2.2 PR (Patch Release) 2 or 12.3.0 when available.
- OS 11: Update to IGEL OS version 11.09.160 when available.

### References

- CVE-2023-45853: <https://cve.mitre.org/cgi-bin/cvename.cgi?name=CVE-2023-45853>



## ISN 2023-32: Chromium Vulnerabilities

Updated 16 January 2024 (fixed versions)

First published 12 December 2023

CVSS 3.1: 8.3 (High)

CVSS:3.1/AV:N/AC:H/PR:N/UI:R/S:C/C:H/I:H/A:H/E:F

### Summary

Multiple security vulnerabilities have been found in the Chromium web browser used in IGEL OS. This affects the following IGEL products:

- IGEL OS 12
- IGEL OS 11

### Details

An integer overflow has been found in Chromium's 2D graphics library Skia that could allow a remote attacker to escape the sandbox via a malicious file. Google reports that there is an exploit for this issue being used in the wild, and the vulnerability is rated as high (CVE-2023-6345). Also, six further issues rated high have been reported that concern memory management vulnerabilities.

### Update Instructions

- OS 12: An updated Chromium app is available from the IGEL App Portal.
- OS 11: Update to private build 11.09.151, which is available on request from IGEL Support or to IGEL OS 11.09.160, which is publicly available.

### References

- CVE-2023-6345: <https://cve.mitre.org/cgi-bin/cvename.cgi?name=CVE-2023-6345>
- Google Chrome Releases: Stable Channel Update for Desktop: [https://chromereleases.googleblog.com/2023/11/stable-channel-update-for-desktop\\_28.html](https://chromereleases.googleblog.com/2023/11/stable-channel-update-for-desktop_28.html)



## ISN 2023-31: Webkit Vulnerabilities

Updated 11 January 2024 (corrected OS 12 fix version)

First published 22 November 2023

CVSS 3.1: 8.8 (High)

CVSS:3.1/AV:N/AC:L/PR:N/UI:R/S:U/C:H/I:H/A:H

### Summary

Security vulnerabilities have been found in the Webkit browser engine used in IGEL OS. This affects the following IGEL products:

- IGEL OS 12
- IGEL OS 11

### Details

A vulnerability in Webkit allows a remote attacker to potentially execute arbitrary code using web content. This is tracked as CVE-2023-42852 and rated high. As second issue can lead to denial of service and is also triggered by web content (CVE-2023-41983, medium).

### Update Instructions

- OS 12: Update to base system app version 12.3.1 (available 6 February)
- OS 11: Update to version 11.09.150 (available 6 December)

### References

- CVE-2023-42852: <https://cve.mitre.org/cgi-bin/cvename.cgi?name=CVE-2023-42852>
- CVE-2023-41983: <https://cve.mitre.org/cgi-bin/cvename.cgi?name=CVE-2023-41983>



## ISN 2023-30: Ffmpeg Vulnerabilities

First published 22 November 2023

CVSS 3.1: 8.8 (High)

CVSS:3.1/AV:N/AC:L/PR:N/UI:R/S:U/C:H/I:H/A:H

### Summary

Security vulnerabilities have been found in the Ffmpeg video library used in IGEL OS. This affects the following IGEL products:

- IGEL OS 11

### Details

Several vulnerabilities have been identified in the Ffmpeg multimedia framework (CVE-2022-4907). They could allow an attacker to cause denial of service or potentially execute arbitrary code. These vulnerabilities are rated as high.

### Update Instructions

- OS 11: Update to version 11.09.150 (available 6 December)

### References

- CVE-2022-4907: <https://cve.mitre.org/cgi-bin/cvename.cgi?name=CVE-2022-4907>

## ISN 2023-29: Chromium Vulnerabilities

First published 9 November 2023

CVSS 3.1: 8.8 (High)

CVSS:3.1/AV:N/AC:L/PR:N/UI:R/S:U/C:H/I:H/A:H

### Summary

Multiple vulnerabilities have been discovered in the Chromium web browser which is used in IGEL OS. This affects the following IGEL products:

- IGEL OS 12
- IGEL OS 11

### Details

Chromium has been found to contain an inappropriate implementation in the Payments component that allows a remote attacker to bypass XSS preventions via a malicious file. This is tracked as CVE-2023-5480 and rated as high. In Chromium's USB component insufficient data validation (CVE-2023-5482, high) could allow out of bounds memory access via a crafted HTML page. Additionally, an integer overflow has been reported in USB that could be used to exploit heap corruption via a crafted web page (CVE-2023-5849, high).

### Update Instructions

- OS 12: IGEL is preparing an updated OS 12 Chromium app.
- OS 11: IGEL is preparing an updated OS 11 version with an updated Chromium.

### References

- CVE-2023-5480: <https://cve.mitre.org/cgi-bin/cvename.cgi?name=CVE-2023-5480>
- CVE-2023-5482: <https://cve.mitre.org/cgi-bin/cvename.cgi?name=CVE-2023-5482>
- CVE-2023-5849: <https://cve.mitre.org/cgi-bin/cvename.cgi?name=CVE-2023-5849>

## ISN 2023-28: Firefox ESR Vulnerabilities

Updated 16 January 2024 (added fixed version)

First published 9 November 2023

CVSS 3.1: 7.5 (High)

CVSS:3.1/AV:N/AC:H/PR:N/UI:R/S:U/C:H/I:H/A:H

### Summary

Multiple vulnerabilities have been discovered in the Firefox ESR web browser which is used in IGEL OS. This affects the following IGEL products:

- IGEL OS 11

### Details

It has been found that it is possible for certain Firefox prompts and dialogs to be activated or dismissed unintentionally by the user due to an insufficient activation-delay (CVE-2023-5721). This vulnerability is rated as high. Apart from that, there are memory safety bugs which could lead to memory corruption and could be abused to run arbitrary code (CVE-2023-5730, high).

### Update Instructions

- OS 11: Update to IGEL OS version 11.09.150 or newer.

### References

- CVE-2023-5721: <https://cve.mitre.org/cgi-bin/cvename.cgi?name=CVE-2023-5721>
- CVE-2023-5730: <https://cve.mitre.org/cgi-bin/cvename.cgi?name=CVE-2023-5730>

## ISN 2023-27: ActiveMQ in UMS HA

First published 3 November 2023

CVSS 3.1: 10.0 (Critical)

CVSS:3.1/AV:N/AC:L/PR:N/UI:N/S:C/C:L/I:H/A:H

### Summary

Apache ActiveMQ is vulnerable to a critical remote code execution vulnerability. This vulnerability affects the High Availability (HA) feature **only**, used in UMS in the following versions:

- UMS versions <= 12.02.120

### Details

Apache ActiveMQ is vulnerable to a critical (10.0) remote code execution vulnerability being tracked with CVE-2023-46604. The vulnerability may allow a remote attacker with network access to a broker to run arbitrary shell commands by manipulating serialized class types in the OpenWire protocol to cause the broker to instantiate any class on the classpath. Rapid7 has confirmed the public exploit and are investigating the activity of the HelloKitty ransomware group exploiting this vulnerability.

### Update Instructions

- UMS 12: We are preparing an emergency release of UMS 12.02.130.
- UMS 6: Upgrade to UMS 12.02.130, available soon.

### References

- CVE-2023-46604: <https://nvd.nist.gov/vuln/detail/CVE-2023-46604>
- Apache advisory: <https://activemq.apache.org/security-advisories.data/CVE-2023-46604-announcement.txt>
- Report from Rapid7 confirming public exploitation attempts and PoC: <https://www.rapid7.com/blog/post/2023/11/01/etr-suspected-exploitation-of-apache-activemq-cve-2023-46604/>

## ISN 2023-26: X.org Vulnerabilities

Updated 27 November 2023 (Update Instructions)

First published 9 November 2023

CVSS 3.1: 7.8 (High)

CVSS:3.1/AV:L/AC:L/PR:L/UI:N/S:U/C:H/I:H/A:H

### Summary

Multiple vulnerabilities have been discovered in the X.org display server, which is used in IGEL OS. This affects the following IGEL products:

- IGEL OS 12
- IGEL OS 11

### Details

The X.org server has been found to have three local vulnerabilities. CVE-2023-5367 is an out-of-bounds write flaw in xorg-x11-server that could be used to crash the server or escalate the attacker's privileges. It is rated as high. CVE-2023-5574 tracks a vulnerability in Xvfb, also rated as high, that could have the same effect. Finally, CVE-2023-5380 is a use-after-free flaw in the xorg-x11-server that could crash the server in a very specific scenario (medium).

### Update Instructions

- OS 12: Update to OS 12 base system app version 12.2.2.
- OS 11: Update to OS 11.09.150 (available 6 December).

### References

- Org Security Advisory: <https://lists.x.org/archives/xorg-announce/2023-October/003430.html>
- CVE-2023-5367: <https://cve.mitre.org/cgi-bin/cvename.cgi?name=CVE-2023-5367>
- CVE-2023-5574: <https://cve.mitre.org/cgi-bin/cvename.cgi?name=CVE-2023-5574>
- CVE-2023-5380: <https://cve.mitre.org/cgi-bin/cvekey.cgi?keyword=CVE-2023-5380>

## ISN 2023-25: Webkit Vulnerabilities

Updated 19th October 2023 (Citrix Self-Service compatibility)

First published 18th October 2023

CVSS 3.1: 9.8 (Critical)

CVSS:3.1/AV:N/AC:L/PR:N/UI:N/S:U/C:H/I:H/A:H

### Summary

Multiple vulnerabilities have been discovered in the Webkit browser engine. This affects the following IGEL products:


- IGEL OS 12
- IGEL OS 11

### Details

Multiple vulnerabilities have been found in Webkit. They could allow a remote attacker to execute arbitrary code on the local operating system when the user visits malicious web content. One vulnerability (CVE-2023-41993) is graded as critical, and Apple is aware of a report that it may have been actively exploited. The other two issues (CVE-2023-39928, CVE-2023-41074) are graded as high.

### Update Instructions

- OS 12: Update to OS 12 base system version 12.2.1 (scheduled for 26 October 2023)
- OS 11: Update to OS 11.09.110

 For compatibility reasons with Citrix Self-Service, the Citrix Workspace App in OS 11.09.110 uses older Webkit that suffers from these vulnerabilities. However, the risk is mitigated by the fact that Citrix Self-Service does not open arbitrary web pages, but only pages from the customer's Citrix infrastructure. The rest of the system uses the updated Webkit with the security fixes.

### References

- CVE-2023-41993: <https://nvd.nist.gov/vuln/detail/CVE-2023-41993>
- CVE-2023-39928: <https://nvd.nist.gov/vuln/detail/CVE-2023-39928>
- CVE-2023-41074: <https://nvd.nist.gov/vuln/detail/CVE-2023-41074>



## ISN 2023-24: Chromium Vulnerability

Updated 24 October 2023 (OS 11.09.110 available)

First published 13 October 2023

CVSS 3.1: 8.8 (High)

CVSS:3.1 /AV:N/AC:L/PR:N/UI:R/S:U/C:H/I:H/A:H

### Summary

A security vulnerability has been found in the Chromium web browser. This affects the following IGEL products:

- IGEL OS 12
- IGEL OS 11

### Details

Google has reported a high vulnerability in Chromium (CVE-2023-5218). It is a use-after-free in the Site Isolation component, which could enable an attacker to execute arbitrary code via a crafted HTML page.

### Update Instructions

- OS 12: IGEL is preparing an updated Chromium app for OS 12.
- OS 11: Update to IGEL OS 11.09.110 or newer.

### References

- Chrome Blog Stable Channel Update for Desktop: [https://chromereleases.googleblog.com/2023/10/stable-channel-update-for-desktop\\_10.html](https://chromereleases.googleblog.com/2023/10/stable-channel-update-for-desktop_10.html)
- CVE-2023-5218: <https://cve.mitre.org/cgi-bin/cvename.cgi?name=CVE-2023-5218>

## ISN 2023-23: Curl Vulnerability

Updated 2 November 2023 (OS 12.2.1 available)

First published 12 October 2023

CVSS 3.1: 7.5 (High)

CVSS:3.1: AV:N/AC:H/PR:N/UI:R/S:U/C:H/I:H/A:H

### Summary

A vulnerability has been found in the Curl package, which is used in IGEL OS. This affects the following IGEL products:

- IGEL OS 12
- IGEL OS 11

### Details

A heap-based buffer overflow was found in the SOCKS5 proxy handshake in the Curl package. This vulnerability rated high is being tracked with CVE-2023-38545. In the updated packages they also resolved a low severity vulnerability for libcurl which is tracked with CVE-2023-38546. These vulnerabilities were responsibly disclosed to the Curl maintainers and there is no evidence of it being exploited before.

### Update Instructions

- OS 12: Update to IGEL OS 12.2.1 or newer.
- OS 11: Update to IGEL OS 11.09.110 or newer.

### References

- Curl security advisory: <https://curl.se/docs/CVE-2023-38545.html>
- Details of disclosure: <https://hackerone.com/reports/2187833>

## ISN 2023-22: Multiple X11 Vulnerabilities

Updated 17 October 2023 (IGEL OS 11.09.100 available)

First published 6 October 2023

CVSS 3.1: 5.5 (Medium)

CVSS:3.1/AV:L/AC:L/PR:L/UI:N/S:U/C:N/I:N/A

### Summary

Multiple issues have been found in the libX11 and libXpm libraries published by X.Org, which are used in IGEL OS. This affects the following IGEL products:

- IGEL OS 12
- IGEL OS 11

### Details

The first issue (CVE-2023-43785) can be triggered by connecting to an X server that sends specially crafted replies to X11 protocol requests – this can happen with an X Session from IGEL OS. It can lead to an out-of-bounds memory access and is rated as medium.

The other four issues (CVE-2023-43786, CVE-2023-43787, CVE-2023-43788 and CVE-2023-43789) can be triggered by opening specially crafted XPM format image files via libXpm and can exhaust the stack, lead to a heap overflow or cause an out-of-bounds read. They are all rated as medium.

### Update Instructions

- OS 12: IGEL is preparing an updated Base system for OS 12.
- OS 11: Update to IGEL OS 11.09.100 or newer.

### References

- X.Org Security Advisory: Issues in libX11 prior to 1.8.7 & libXpm prior to 3.5.17 - <https://lists.x.org/archives/xorg/2023-October/061506.html>

## ISN 2023-21: Libvpx Vulnerability in Chromium and Firefox

Updated 24 October 2023 (OS 11.09.110 available)

First published 5 October 2023

CVSS 3.1: 8.8 (High)

CVSS:3.1/AV:N/AC:L/PR:N/UI:R/S:U/C:H/I:H/A:H

### Summary

A vulnerability has been found in the Libvpx video library. This affects the following IGEL products:

- IGEL OS 12
- IGEL OS 11

### Details

A vulnerability rated high (CVE-2023-5217) has been found in the code for the VP8 video format in Libvpx. This library is used in the Chromium and Firefox web browsers. A remote attacker could potentially exploit heap corruption via a crafted HTML page. Google and Mozilla report that this vulnerability is being used in the wild.

### Mitigation

- OS 11: If feasible, use Firefox as your web browser and add the following custom command to **System > Firmware Customization > Custom Commands > Base > Initialization** in order to filter out media that could be used for an attack:

```
FFPREFS=/services/fbrw/bin/firefox_preferences
```

```
cp -v $FFPREFS ${FFPREFS}_bin
```

```
cat > $FFPREFS <<"EOF"
```

```
#!/bin/bash
```

```
/services/fbrw/bin/firefox_preferences_bin "$@"
```

```
echo 'user_pref("image.webp.enabled", false);
```

```
user_pref("media.ffvpx.enabled", false);
```

```
user_pref("media.ffvpx.mp3.enabled", false);
```

```
user_pref("media.ffvpx.opus.enabled", false);
```

```
user_pref("media.ffvpx.vorbis.enabled", false);
```



```
user_pref("media.ffvpx.wav.enabled", false);' >> ~user/.mozilla/firefox/  
browser0/user.js
```

```
EOF
```

## Update Instructions

- OS 12: IGEL is preparing an updated Chromium app for OS 12.
- OS 11: Update to IGEL OS 11.09.110 or newer.

## References

- CVE-2023-5217: <https://cve.mitre.org/cgi-bin/cvename.cgi?name=CVE-2023-5217>

## ISN 2023-20: Firefox Libwebp Vulnerability

Updated 27 September 2023 (fix version, add CVE-2023-5129)

First published 14 September 2023

CVSS 3.1: 10.0 (Critical)

CVSS:3.1/AV:N/AC:L/PR:N/UI:N/S:C/C:H/I:H/A:H

### Summary

A critical vulnerability has been found in the Firefox web browser. This affects the following IGEL products:

- IGEL OS 11

### Details

A zero-day critical heap buffer overflow vulnerability has been found in the WebP library used by Firefox. This vulnerability can be tracked with CVE-2023-4863 and CVE-2023-5129. Apple's Security Engineering and Architecture (SEAR) and The Citizen Lab are not publishing the details of this vulnerability as it has been seen exploited in-the-wild and they are giving time for people to update their browsers.

### Update Instructions

- OS 11: Update to IGEL OS 11.09.100 (planned for 5 October 2023) with an updated Firefox.

### References

- CVE-2023-4863 - <https://nvd.nist.gov/vuln/detail/CVE-2023-4863>
- CVE-2023-5129 - <https://nvd.nist.gov/vuln/detail/CVE-2023-5129>
- Mozilla's advisory - <https://www.mozilla.org/en-US/security/advisories/mfsa2023-40/>

## ISN 2023-19: Libwebp Vulnerability in Chromium and Other Software

Updated 28 September 2023 (fix versions, add CVE-2023-5129)

First published 14 September 2023

CVSS 3.1: 10.0 (Critical)

CVSS:3.1/AV:N/AC:L/PR:N/UI:N/S:C/C:H/I:H/A:H

### Summary

A critical vulnerability has been found in Libwebp, used in the Chromium web browser and other software. This affects the following IGEL products:

- IGEL OS 12
- IGEL OS 11

### Details

A zero-day critical heap buffer overflow vulnerability has been found in the WebP library (Libwebp) used by Chromium, webkit2gtk, qt5 webkit, webengine and other software supporting the WebP image format. This vulnerability can be tracked with CVE-2023-4863 and CVE-2023-5129. Apple's Security Engineering and Architecture (SEAR) and The Citizen Lab are not publishing the details of this vulnerability as it has been seen exploited in-the-wild and they are giving time for people to update their browsers.

### Update Instructions

- OS 12: Update to IGEL OS 12 base system version 12.2.1 (available on 17 October 2023) with an updated Libwebp.
- OS 11: Update to IGEL OS 11.09.100 (planned for 5 October 2023) with an updated Libwebp.

### References

- CVE-2023-4863 - <https://nvd.nist.gov/vuln/detail/CVE-2023-4863>
- CVE-2023-5129 - <https://nvd.nist.gov/vuln/detail/CVE-2023-5129>
- Google's advisory - [https://chromereleases.googleblog.com/2023/09/stable-channel-update-for-desktop\\_11.html](https://chromereleases.googleblog.com/2023/09/stable-channel-update-for-desktop_11.html)

## ISN-2023-18: SnakeYAML Vulnerability

First published 30 August 2023

CVSS 3.1: 6.3 (Medium)

CVSS:3.1/AV:L/AC:L/PR:H/UI:N/S:U/C:H/I:H/A:L

### Summary

A vulnerability has been found in the Java package snakeYAML, which is used to parse YAML files. This affects the following IGEL products:

- UMS
- ICG

### Details

A deserialization vulnerability has been discovered in SnakeYAML. It can lead to Remote Code Execution (RCE). However, in IGEL UMS and ICG it cannot be called remotely. Also, an attack on the local YAML file is mitigated by the fact that this is only writeable by root or a Windows system service. This is why IGEL is downgrading the severity of this issue, rated by NVD as critical, to medium for UMS and ICG.

### Update Instructions

- UMS: Update UMS to version 12.03.100 (scheduled for November 2023)
- ICG: Update ICG to version 12.03.100 (scheduled for November 2023)

### References

- CVE-2022-1471: <https://cve.mitre.org/cgi-bin/cvename.cgi?name=CVE-2022-1471>
- NVD, CVE-2022-1471: <https://nvd.nist.gov/vuln/detail/CVE-2022-1471>



## ISN 2023-17: AMD Inception CPU Vulnerability

First published 24 August 2023

CVSS 3.1: 5.6 (Medium)

CVSS: 3.1/AV:L/AC:H/PR:L/UI:N/S:C/C:H/I:N/A:N

### Summary

A vulnerability named Inception has been discovered in some AMD CPUs. This affects the following IGEL Products

- IGEL OS 12 running on specific AMD CPUs
- IGEL OS 11 running on specific AMD CPUs

### Details

It has been discovered that a local attacker could steal information from other users or VMs on the same system, or from the Linux kernel, on certain AMD processors. This vulnerability has been named Inception (CVE-2023-20569) and is rated as medium.

Such side channel threats mainly target environments with many VMs being hosted. This is not the case with IGEL OS. In addition, IGEL follows the general recommendation made by AMD in this case to prevent the execution of malware by keeping packages up to date and applying security policies through respective configuration.

Inception affects AMD's Zen 3 and Zen 4 architectures, including Ryzen and Athlon processors. The new [CVE.org](https://www.cve.org)<sup>5</sup> site has a list at <https://www.cve.org/CVERecord?id=CVE-2023-20569>

AMD states that it is not aware of this vulnerability being exploited in the wild.

### Update instructions

- OS 12: Install a BIOS version containing a microcode fix for this issue. Alternatively, wait for IGEL OS Base System version 12.3.0 (scheduled for December 2023) and update to that.
- OS 11: Install a BIOS version containing a microcode fix for this issue. Check whether you can utilize LVFS to deploy the update from UMS: <https://kb.igel.com/igelos-11.08.330/en/bios-tools-88019317.html>

### References

- ETH Zurich COMSEC, "Inception: how a simple XOR can cause a Microarchitectural Stack Overflow": <https://comsec.ethz.ch/research/microarch/inception/>
- AMD Return Address Security Bulletin (AMD-SB-7005): <https://www.amd.com/en/resources/product-security/bulletin/amd-sb-7005.html>
- CVE-2023-20569: <https://cve.mitre.org/cgi-bin/cvename.cgi?name=CVE-2023-20569>
- CVE-2023-20569 (new site): <https://www.cve.org/CVERecord?id=CVE-2023-20569>

---

<sup>5</sup> <http://CVE.org>

## ISN 2023-16: Intel Downfall CPU Vulnerability

First published 24 August 2023

CVSS 3.1: 6.5 (Medium)

CVSS:3.1/AV:L/AC:L/PR:L/UI:N/S:C/C:H/I:N/A:N

### Summary

A vulnerability nicknamed Downfall has been discovered in several Intel CPU lines. This affects the following IGEL Products

- IGEL OS 12 running on specific Intel CPUs
- IGEL OS 11 running on specific Intel CPUs

### Details

Downfall (CVE-2022-40982) is a vulnerability in the memory optimization features in Intel processors. It can allow a local user to steal secrets from other users on the same system, and from the Linux Kernel. This is a threat mainly to environments where many VMs or many user accounts are hosted, but not so much IGEL OS, which only has one person using it.

This vulnerability is rated as medium. It affects Intel Core processors from the 6th Skylake to and including the 11th Tiger Lake generation.

The reporter of Downfall has published proof-of-concept exploit code.

### Update Instructions

- OS 12: Update the IGEL OS Base System app to version 12.02.100 (available in September 2023)
- OS 11: Update to OS 11.09.100 (available in September 2023)

### References

- Daniel Moghimi, “Downfall Attacks”: <https://downfall.page/>
- CVE-2022-40982: <https://cve.mitre.org/cgi-bin/cvename.cgi?name=CVE-2022-40982>

## ISN 2023-15: ZenBleed Vulnerability

First published 28 July 2023

CVSS 3.1: 6.5 (Medium)

CVSS:3.1/AV:L/AC:L/PR:L/UI:N/S:C/C:H/I:N/A:N

### Summary

A vulnerability called ZenBleed has been discovered in the line of “Zen 2” CPUs from AMD. This affects the following IGEL Products

- IGEL OS 12 running on AMD CPUs
- IGEL OS 11 running on AMD CPUs

### Details

ZenBleed (CVE-2023-20593) is a medium risk (6.5 CVSS score) vulnerability, which can allow local attackers with the ability to run arbitrary code within the local machine/VM to infer CPU register content from another process in the same instance scheduled on the same core. This could potentially leak sensitive information. Google’s Project Zero security team has confirmed that this vulnerability is reproducible on at least the following SKUs:

- AMD Ryzen Threadripper PRO 3945WX 12-Cores
- AMD Ryzen 7 PRO 4750GE with Radeon Graphics
- AMD Ryzen 7 5700U
- AMD EPYC 7B12

### Update Instructions

- OS 12: Update the IGEL OS Base System app to version 12.02.100 (available in September 2023)
- OS 11: Update to OS 11.09.100 (available in September 2023)

### References

- Vulnerability write-up by Tavis Ormandy (Google): <https://lock.cmpxchg8b.com/zenbleed.html>
- Google’s Project Zero Disclosure: <https://github.com/google/security-research/tree/master/pocs/cpus/zenbleed>

## ISN 2023-14: IGEL OS OpenSSH Vulnerability

Updated 28 August 2023 (OS 11 fix version)

First published 26 July 2023

CVSS 3.1: 7.3 (High)

CVSS:3.0/AV:N/AC:L/PR:N/UI:N/S:U/C:L/I:L/A:L

### Summary

A vulnerability has been discovered in OpenSSH, a remote shell used in IGEL OS. This affects the following IGEL products:

- IGEL OS 12
- IGEL OS 11

### Details

It has been found that specific libraries loaded via the PKCS#11 support in the ssh-agent command in OpenSSH could be abused by an attacker to achieve Remote Code Execution (RCE). This vulnerability (CVE-2023-38408) has been rated as high. The exploitation requires the presence of specific libraries on the victim system, and that the agent was forwarded to an attacker-controlled system. This is not done by default in IGEL OS, but customers could do this in a custom command or script.

### Mitigation

- Customers usually do not utilize ssh-agent on IGEL OS.
- For those that use ssh-agent: According to the OpenSSH project, exploitation can be prevented by starting ssh-agent with an empty PKCS#11/FIDO allowlist ( `ssh-agent -P ''` ) or by configuring an allowlist that contains only specific provider libraries.

### Update Instructions

- OS 12: Update the IGEL OS Base System app to version 12.02.100 (available in September 2023)
- OS 11: Update to the IGEL OS version 11.08.440.

### References

- OpenSSH: Release Notes for OpenSSH 9.3p2: <https://www.openssh.com/txt/release-9.3p2>
- Qualys: CVE-2023-38408: Remote Code Execution in OpenSSH's forwarded ssh-agent: <https://www.qualys.com/2023/07/19/cve-2023-38408/rce-openssh-forwarded-ssh-agent.txt>

## ISN 2023-13: IGEL OS Ghostscript Vulnerability

First published 24 July 2023

CVSS 3.1: 7.8 (High)

CVSS:3.1/AV:L/AC:L/PR:N/UI:R/S:U/C:H/I:H/A:H

### Summary

A vulnerability has been discovered in Ghostscript, a Postscript and PDF library used in IGEL OS. This affects the following IGEL products:

- IGEL OS 12
- IGEL OS 11

### Details

A security issue rated high has been found in Ghostscript (CVE-2023-36664). The software mishandles permission validation for pipe devices (with the %pipe% prefix or the | pipe character prefix). Abusing this, an attacker can achieve command execution with malformed documents that are processed by Ghostscript, e.g. Postscript, PDF and EPS files.

### Mitigation

- General: Until this issue is fixed, print and view only documents from trustworthy sources.
- OS 11: If local printing from IGEL OS is not needed, you can remove Ghostscript from the system using a UMS profile:
  - a. In Setup, go to **System > Firmware Customization > Features**.
  - b. Disable the entries for **Printing (Internet Printing Protocol CUPS)**, **PrinterLogic**, and **NoMachine NX**.
  - c. Apply and Save the changes.
  - d. Reboot the devices.

### Update Instructions

- OS 12: Update the IGEL OS Base System app to version 12.02.100 (available in September 2023)
- OS 11: Update to IGEL OS 11.09.100 (available in September 2023)

### References

- CVE-2023-36664 at NVD: <https://nvd.nist.gov/vuln/detail/CVE-2023-36664>



- Kroll: Proof of Concept Developed for Ghostscript CVE-2023-36664 Code Execution Vulnerability: <https://www.kroll.com/en/insights/publications/cyber/ghostscript-cve-2023-36664-remote-code-execution-vulnerability>



## ISN 2023-12: Citrix Secure Access Client

Updated 28. August 2023 (releases with fix added)

First published 17 July 2023

CVSS 3.1: 9.6 (Critical)

CVSS:3.1/AV:N/AC:L/PR:N/UI:R/S:C/C:H/I:H/A:H

### Summary

A vulnerability was discovered in the Citrix Secure Access client, which affects the following IGEL products:

- IGEL OS 12
- IGEL OS 11

### Details

Citrix Secure Access client is the client software that allows access to corporate data and applications through Citrix ADC. Versions before 23.5.2 are vulnerable to remote code execution when a user opens an attacker-crafted link and accepts further prompts. This vulnerability is classified as critical (9.6 score) and is being tracked as CVE-2023-24492.

### Update Instructions

- OS 12: Update the Citrix Gateway EPA client app to version 23.6.2 BUILD 2.0
- OS 11: Update to OS 11.09.100 (available in September 2023)

### References

- Citrix's Security Bulletin: <https://support.citrix.com/article/CTX564169/citrix-secure-access-client-for-ubuntu-security-bulletin-for-cve202324492>



## ISN 2023-11: “StackRot” in IGEL OS Kernel

First published 11 July 2023

CVSS 3.1: 7.8 (High)

CVSS:3.1/AV:L/AC:H/PR:L/UI:N/S:C/C:H/I:H/A:H

### Summary

A vulnerability has been discovered in the Linux kernel version used in IGEL OS. This affects the following IGEL products:

- IGEL OS 12

### Details

A vulnerability found in the Linux kernel 6.1 memory management subsystem may allow a local attacker to execute arbitrary code and escalate their privileges to root. The issue (CVE-2023-3269), nicknamed StackRot, is graded as high. It is not easy to abuse it, but Ruihan Li, who reported the vulnerability, has announced he will release exploit code later in July.

### Update Instructions

- OS 12: IGEL is preparing an OS 12 base system release with the kernel security fixes.

### References

- [oss-security] Ruihan Li: StackRot (CVE-2023-3269): Linux kernel privilege escalation vulnerability: <https://www.openwall.com/lists/oss-security/2023/07/05/1>
- Ruihan Li: Github StackRot repository: <https://github.com/lrh2000/StackRot>



## ISN 2023-10: Log4j 1.x in IBM i Access Client

First published 19 June 2023

CVSS 3.1: 8.1 (High)

CVSS:3.0/AV:N/AC:H/PR:N/UI:N/S:U/C:H/I:H/A:H

### Summary

A vulnerability has been discovered in the IBM i Access Client contained in IGEL OS. This affects the following IGEL products:

- IGEL OS 11

### Details

IBM i Access Client is a terminal emulator for accessing IBM I series hosts. In version 1.1.8.6 and earlier, which have been shipped with IGEL OS 11, it contains the obsolete and unmaintained branch 1.x of the Log4j logging framework. This Log4j version could allow a remote attacker to execute arbitrary code on the system, which is a vulnerability rated as high (CVE-2021-4104). However, for this the attacker needs write access to the Log4j configuration – which is usually not the case on IGEL OS.

### Mitigation

Many customers will not need the IBM i Access Client, so they can remove it completely in **Setup > System > Firmware Customization > Features**.

### Update Instructions

- OS 11: IGEL is preparing an IGEL OS version with an updated IBM i Access Client.

### References

- Security Bulletin: IBM i components are affected by CVE-2021-4104 (log4j version 1.x): <https://www.ibm.com/support/pages/security-bulletin-ibm-i-components-are-affected-cve-2021-4104-log4j-version-1x>

## ISN 2023-09: RCE in CUPS Printing System

First published 07 June 2023

CVSS 3.1: 8.8 (High)

CVSS:3.1/AV:N/AC:L/PR:L/UI:N/S:U/C:H/I:H/A:H

### Summary

A vulnerability has been discovered in CUPS Filters, which are shipped with IGEL OS. This affects the following IGEL products:

- IGEL OS 11
- IGEL OS 12

### Details

A security vulnerability rated high has been found in CUPS Filters (CVE-2023-24805). When using the Backend Error Handler (beh) to create an accessible network printer, this security vulnerability can allow remote code execution (RCE).

### Update Instructions

- OS 11: Update to IGEL OS version 11.08.330 or newer.
- OS 12: Update to IGEL OS base system version 12.01.120 (available 12 June 2023)

### References

- CVE-2023-24805: <https://cve.mitre.org/cgi-bin/cvename.cgi?name=CVE-2023-24805>

## ISN 2023-08: Chromium Critical Vulnerability

Updated 26 July 2023 (updated timelines)

First published 25 May 2023

CVSS 3.1: 9.8 (critical)

CVSS:3.1/AV:N/AC:L/PR:N/UI:N/S:U/C:H/I:H/A:H

### Summary

A critical vulnerability has been found in the Chromium web browser used in IGEL OS.

This affects the following IGEL products:

- IGEL OS 11
- IGEL OS 12

### Details

The Chrome project has announced that a use-after-free error has been discovered in the Navigation component of the Chromium browser before version 113 (CVE-2023-2721). This vulnerability potentially allows a remote attacker to exploit heap corruption via a crafted HTML page. It is rated critical.

### Mitigation

- On IGEL OS 11, use Firefox as an alternative.

### Update Instructions

- IGEL OS 11: Update to the upcoming IGEL OS 11.08.x August release.
- IGEL OS 12: Update the Chromium 114 app for OS 12 (available in the first week of August).

### References

- Chrome Team – Stable Channel Update for Desktop: [https://chromereleases.googleblog.com/2023/05/stable-channel-update-for-desktop\\_16.html](https://chromereleases.googleblog.com/2023/05/stable-channel-update-for-desktop_16.html)

## ISN 2023-07: Device Encryption Password Bug

First published 23 May 2023

CVSS 3.1: 2.3 (Low)

CVSS:3.1/AV:L/AC:L/PR:H/UI:N/S:U/C:L/I:N/A:N

### Summary

A bug in the IGEL OS Setup application prevents users from setting a (new) password for Device Encryption, and from disabling Device Encryption. This affects the following IGEL products:

- IGEL OS 11.08.290

### Details

Due to a bug in the IGEL OS Setup application, users of IGEL OS 11.08.290

- cannot set a (new) password for Device Encryption
- cannot deactivate Device Encryption

The severity of this issue is low. Device Encryption settings and passwords that have been set before upgrading to IGEL OS 11.08.290 are not affected by this bug. They remain the same.

### Mitigation

If you cannot update to IGEL OS 11.08.330 yet, you can apply the following mitigation:

1. Go to **Setup > System > Firmware Customization > Custom Commands**.
2. Enter the following command in the **Desktop initialization** field:  

```
systemctl start igel-kml-daemon
```
3. Reboot the system.

### Update Instructions

- Update to IGEL OS version 11.08.330 (and set a Device Encryption password after the upgrade, if desired).

## ISN 2023-06: UEFI Secure Boot Malware and IGEL OS

Updated 15 May 2023 (Windows Update does not block IGEL OS boot)

First published 12 May 2023

CVSS:3.1 6.7 / 6.2 (Medium)

CVSS:3.1 vector n/a

### Summary

A fix for a UEFI Secure Boot issue may affect booting IGEL OS on some devices.

This affects the following IGEL products:

- IGEL OS 11
- IGEL OS 12
- IGEL UD Pocket

### Details

In order to block UEFI Secure Boot malware such as the Black Lotus bootkit (CVE-2023-24932), Microsoft has published a security update that revokes a number of bootloaders from UEFI Secure Boot (KB5025885). Also, the UEFI Forum has updated their revocation list.

- IGEL has determined that the UEFI Forum revocation list of 9 May 2023 does not block the IGEL Shim bootloader. Customers that apply this revocation list will not have issues with booting IGEL OS.
- Applying Microsoft KB5025885 and its revocation command does not block the IGEL Shim bootloader either, testing at IGEL has shown.

### References

- Microsoft, “Secure Boot Security Feature Bypass Vulnerability - CVE-2023-24932”: <https://msrc.microsoft.com/update-guide/vulnerability/CVE-2023-24932>
- Microsoft KB5025885: <https://support.microsoft.com/en-us/topic/kb5025885-how-to-manage-the-windows-boot-manager-revocations-for-secure-boot-changes-associated-with-cve-2023-24932-41a975df-beb2-40c1-99a3-b3ff139f832d#timing5025885>
- UEFI revocation list file (x64): <https://uefi.org/revocationlistfile>



## ISN 2023-05: Chromium Local File Access

First published 3 April 2023

CVSS 3.1: 6.6 (Medium)

CVSS:3.1/AV:L/AC:L/PR:L/UI:N/S:U/C:H/I:L/A:L

### Summary

The Chromium web browser in IGEL OS has been found to allow access to the local filesystem under certain circumstances. This affects the following IGEL products:

- IGEL OS 11

### Details

A penetration test commissioned by IGEL has found that the Chromium browser on IGEL OS allows users to access the local filesystem even when it is forbidden in the profile settings – via downloads, bookmarks, and printing. This is fixed now, disabling downloads, bookmarks, and printing in Chromium when filesystem access is set to be blocked.

### Update Instructions

- Update to IGEL OS 11.08.290



## ISN 2023-04: IGEL OS Local Privilege Escalation

First published 3 April 2023

CVSS 3.1: 7.8 (High)

CVSS:3.1/AV:L/AC:L/PR:L/UI:N/S:U/C:H/I:H/A:H

### Summary

The configuration mechanism in IGEL OS has been found to have two vulnerabilities rated high. This affects the following IGEL products:

- IGEL OS 11

### Details

A penetration test commissioned by IGEL has found two instances of local privilege escalation in the IGEL OS configuration mechanism. A non-privileged user could employ these to become `root` on the local system. These issues are rated as high.

### Update Instructions

- Update to IGEL OS 11.08.290

## ISN 2023-03: Chromium Vulnerabilities

First published 22 March 2023

CVSS 3.1 High

CVSS:3.1 n/a

### Summary

The Chromium browser in IGEL OS has been found to have several vulnerabilities rated high. This affects the following IGEL products:

- IGEL OS 11

### Details

The Google Chrome project has reported numerous use-after-free vulnerabilities, among others in the Prompts component, which could allow a remote attacker to exploit heap corruption via a crafted HTML page (high, CVE-2023-0941). Further use-after-free weaknesses affect the Web Payments API, SwiftShader, Vulkan, Video and WebRTC.

Other issues include type confusions in the V8 JavaScript engine (high, CVE-2023-0696), Data Transfer (medium, CVE-2023-0702), and DevTools (medium, CVE-2023-0703).

### Update Instructions

- Update to IGEL OS 11.08.290 (available in March 2023) which contains Chromium version 110.0.5481.177.

### References

- Chrome Team – Stable Channel Update for Desktop: [https://chromereleases.googleblog.com/2023/02/stable-channel-desktop-update\\_22.html](https://chromereleases.googleblog.com/2023/02/stable-channel-desktop-update_22.html)
- Chrome Team – Stable Channel Update for Desktop: <https://chromereleases.googleblog.com/2023/02/stable-channel-update-for-desktop.html>
- Chrome Team – Stable Channel Update for Desktop: [https://chromereleases.googleblog.com/2023/01/stable-channel-update-for-desktop\\_24.html](https://chromereleases.googleblog.com/2023/01/stable-channel-update-for-desktop_24.html)



## ISN 2023-02: Firefox ESR Vulnerabilities

First published 22 March 2023

CVSS 3.1 high

CVSS:3.1 n/a

### Summary

Firefox ESR version 91.13.0, which has been in IGEL OS 11 since 11.08.200, has been found to have several vulnerabilities rated high.

- IGEL OS 11

### Details

The vulnerabilities found include that the `Content-Security-Policy-Report-Only` header could allow an attacker to leak a child iframe's unredacted URI when interaction with that iframe triggers a redirect (high, CVE-2023-25728). A background script invoking `requestFullscreen` and then blocking the main thread could force the browser into fullscreen mode indefinitely, resulting in potential user confusion or spoofing attacks (high, CVE-2023-25730).

In addition, there are arbitrary file reads from GTK drag and drop (high, CVE-2023-23598) and from a compromised content process that partially escaped the sandbox (high, CVE-2022-46872). A same-origin policy violation could leak cross-origin URLs (high, CVE-2022-42927).

Firefox ESR version 91.13.0 is also affected by memory safety bugs that can lead to application crashes or to the execution of arbitrary code.

### Update Instructions

- Update to IGEL OS 11.08.290 which has Firefox ESR version 102.8.0 (available in March 2023).

### References

- Mozilla Foundation Security Advisory 2023-06: <https://www.mozilla.org/en-US/security/advisories/mfsa2023-06/>
- Mozilla Foundation Security Advisory 2023-02: <https://www.mozilla.org/en-US/security/advisories/mfsa2023-02/>
- Mozilla Foundation Security Advisory 2022-52: <https://www.mozilla.org/en-US/security/advisories/mfsa2022-52/>
- Mozilla Foundation Security Advisory 2022-48: <https://www.mozilla.org/en-US/security/advisories/mfsa2022-48/>
- Mozilla Foundation Security Advisory 2022-45: <https://www.mozilla.org/en-US/security/advisories/mfsa2022-45/>



- Mozilla Foundation Security Advisory 2022-41: <https://www.mozilla.org/en-US/security/advisories/mfsa2022-41/>



## ISN 2023-01: Citrix Workspace App Vulnerability

Updated 28th February 2023 (Citrix advises updating to CWA 2302 as the only fix)

First published 20 February 2023

CVSS 3.1 High

CVSS:3.1 n/a

### Summary

A vulnerability has been found in the Citrix Workspace App (CWA) for Linux in versions before 2302. The following IGEL products are affected:

- IGEL OS 11

### Details

Citrix advises that there is a vulnerability in Citrix Workspace app for Linux that, if exploited, may result in a malicious local user being able to gain access to the Citrix Virtual Apps and Desktops session of another user who is using the same computer from which the ICA session is launched. This issue affects all supported versions of Citrix Workspace app for Linux before 2302.

### Update Instructions

- Update to IGEL OS version 11.08.255, which contains CWA 2302, and use this version. It is available to IGEL customers as a private build from IGEL Customer Engineering.

### References

- Citrix Workspace app for Linux Security Bulletin for CVE-2023-24486: <https://support.citrix.com/article/CTX477618/citrix-workspace-app-for-linux-security-bulletin-for-cve202324486>

## ISN 2022-21: Chromium Vulnerability

First published 15 September 2022

CVSS 3.1 High

CVSS:3.1 n/a

### Summary

A vulnerability has been found in the Chromium web browser used in IGEL OS. This affects the following IGEL products:

- IGEL OS 11

### Details

A vulnerability has been found in the Mojo library collection used in Chromium (CVE-2022-3075). It is rated high and is caused by insufficient data validation. Google is aware of reports that an exploit for this issue exists in the wild.

### Update Instructions

- IGEL OS 11: Update to IGEL OS version 11.08.200 (release planned for mid-October)

### References

- Chrome Team – Stable Channel Update for Desktop: <https://chromereleases.googleblog.com/2022/09/stable-channel-update-for-desktop.html>

## ISN 2022-20: Firefox ESR Vulnerabilities

First published 15 September 2022

CVSS 3.1 High

CVSS:3.1 n/a

### Summary

Multiple vulnerabilities have been found in the Firefox ESR web browser used in IGEL OS. This affects the following IGEL products:

- IGEL OS 11
- IGEL OS 10

### Details

Three vulnerabilities rated high have been found in Firefox ESR. An attacker could abuse XSLT error handling to associate attacker-controlled content with another origin which was displayed in the address bar. This could have been used to fool the user into submitting data intended for the spoofed origin (CVE-2022-38472). Another vulnerability affects a cross-origin iframe referencing an XSLT document – it would inherit the parent domain's permissions such as microphone or camera access (CVE-2022-38473). The third issue concerns memory safety bugs that could be exploited to run arbitrary code (CVE-2022-38478).

### Update Instructions

- IGEL OS 11: Update to IGEL OS version 11.08.200 (release planned for mid-October)
- IGEL OS 10: Upgrade to the fixed IGEL OS 11 version

### References

- Mozilla Foundation Security Advisory 2022-35: <https://www.mozilla.org/en-US/security/advisories/mfsa2022-35/>

## ISN 2022-19: Log4j 1.x Remainder in UMS

Updated 17 October 2022 (UMS version 6.10.130 available)

First published 12 September 2022

CVSS 3.1: 3.4 (Low)

CVSS:3.1/AV:L/AC:L/PR:H/UI:N/S:U/C:L/I:N/A:L

### Summary


Universal Management Suite (UMS) has been found to still contain an obsolete and vulnerable Log4j version. Affected products:


- UMS on Windows with High Availability (HA) option installed
- UMS on Linux, default installation

### Details

Although IGEL has replaced most of Log4j in UMS with a different logging solution, UMS up to version 6.10.120 still contains an instance of Log4j version 1.x. It is located at `messageservice/lib/optional/Log4j-1.2.14.jar` in the UMS installation directory.

This version is unmaintained, and the application's confidentiality and availability could have a low impact due to the vulnerabilities associated with version 1.x.

 UMS contains further files with log4j in their filenames, such as `log4j-api-2.17.1.jar`. These are no indicator of vulnerable Log4j versions being present. Rather, they are API bridges used by IGEL to replace Log4j with a different logging solution. They pose no risk.

 Do not delete files from IGEL UMS installations. This will break the application.

### Update Instructions

- Update to UMS version 6.10.130

### References

- Apache Software Foundation Blog, "Apache™ Logging Services™ Project announces Log4j™ 1 end-of-life; recommends upgrade to Log4j 2": [https://news.apache.org/foundation/entry/apache\\_logging\\_services\\_project\\_announces](https://news.apache.org/foundation/entry/apache_logging_services_project_announces)

## ISN 2022-18: Linux Kernel Vulnerability

First published 7 September 2022

CVSS 3.1 7.8 (High)

CVSS:3.1/AV:L/AC:L/PR:L/UI:N/S:U/C:H/I:H/A:H

### Summary

A vulnerability has been found in the Linux kernel used by IGEL OS. This affects the following IGEL products:

- IGEL OS 11
- IGEL OS 10

### Details

A use-after-free vulnerability has been discovered in the Netfilter subsystem in the Linux kernel (CVE-2022-32250, formerly also known as CVE-2022-1966). It is rated high and allows a local non-privileged user to escalate their privileges to root.

### Update Instructions

- IGEL OS 11: Update to IGEL OS 11.08.100 or newer.
- IGEL OS 10: Upgrade to the fixed IGEL OS 11 version.

### References

- CVE-2022-32250: <https://cve.mitre.org/cgi-bin/cvename.cgi?name=CVE-2022-32250>

## ISN 2022-17: Chromium WebRTC Vulnerability

Updated 30 August 2022 (IGEL OS 11.08.100 available)

First published 22 July 2022

CVSS 3.1 High

CVSS: n/a

### Summary

Multiple vulnerabilities have been found in the Chromium web browser. This affects the following IGEL products:

- IGEL OS 11

### Details

Google has reported a heap buffer overflow in the WebRTC component (CVE-2022-2294), which is used for multimedia and video conferencing. Google has rated this as high and states that an exploit for this issue exists in the wild. The other vulnerability rated high is a type confusion in the V8 JavaScript engine (CVE-2022-2295).

### Update Instructions

- IGEL OS 11: Update to IGEL OS version 11.08.100 or newer.

### References

- Chrome Team – Stable Channel Update for Desktop: <https://chromereleases.googleblog.com/2022/07/stable-channel-update-for-desktop.html>



## ISN 2022-16: Firefox Vulnerabilities

Updated 1st July 2022 (IGEL OS 11.07.170 available)

First published 24th June 2022

CVSS 3.1 Critical

CVSS:3.1 n/a

### Summary

Critical vulnerabilities have been found in the Firefox ESR browser. This affects the following IGEL products:

- IGEL OS 11
- IGEL OS 10

### Details

It has been discovered that an attacker who could corrupt the methods of an Array object in JavaScript via prototype pollution could execute attacker-controlled JavaScript code in a privileged context (CVE-2022-1802). In addition, an attacker could have sent a message to the parent process where the contents were used to double-index into a JavaScript object, leading to prototype pollution and ultimately attacker-controlled JavaScript executing in the privileged parent process (CVE-2022-1529). Both issues are considered critical.

Update instructions

- IGEL OS 11: Update to IGEL OS 11.07.170, which contains Firefox ESR 91.9.1.
- IGEL OS 10: Upgrade to IGEL OS 11.07.170.

### References

Mozilla Foundation Security Advisory 2022-19: <https://www.mozilla.org/en-US/security/advisories/mfsa2022-19/>

## ISN 2022-15: Chromium Browser Vulnerabilities

Updated 1st July 2022 (IGEL OS 11.07.170 available)

First published 20th June 2022

CVSS 3.1 Critical

CVSS:3.1 n/a

### Summary

The Chromium project has reported multiple vulnerabilities in its web browser. These affect the following IGEL products:

- IGEL OS 11

### Details

It has been discovered that the Indexed DB component in Chromium contains a use-after-free error. The project rates this vulnerability as critical (CVE-2022-1853). Eight further memory management issues, mostly use-after-free, exist in several other Chromium components. These have been rated as high (CVE-2022-1854, CVE-2022-1855, CVE-2022-1856, CVE-2022-1857, CVE-2022-1858, CVE-2022-1859, CVE-2022-1860, CVE-2022-1861).

Besides that, several vulnerabilities rated as medium and low exist in Chromium. They are listed in the referenced update from the Chrome Team.

### Update instructions

- IGEL OS 11: Update to IGEL OS 11.07.170, which contains Chrome 102.

### References

- Chrome Team – Stable Channel Update for Desktop: [https://chromereleases.googleblog.com/2022/05/stable-channel-update-for-desktop\\_24.html](https://chromereleases.googleblog.com/2022/05/stable-channel-update-for-desktop_24.html)
- CVE-2022-1853: <https://cve.mitre.org/cgi-bin/cvename.cgi?name=CVE-2022-1853>

## ISN 2022-14: Chromium Browser Vulnerabilities

First published 3rd June 2022

CVSS 3.1 High

CVSS:3.1 n/a

### Summary

The Chromium project has reported multiple vulnerabilities in its web browser. These affect the following IGEL products:

- IGEL OS 11

### Details

An inappropriate implementation in Web Contents has been found in Chromium and has been rated as high (CVE-2022-1637). In addition, there are 6 issues of use-after-free which are rated high (CVE-2022-1633, CVE-2022-1634, CVE-2022-1635, CVE-2022-1636, CVE-2022-1639, CVE-2022-1640) and one such issue rated medium (CVE-2022-1641). Besides that, a heap buffer overflow has been found in V8 internationalization and rated high (CVE-2022-1638).

### Update Instructions

- IGEL OS 11: Update to IGEL OS version 11.07.140, which contains Chromium version 101 or newer.

### References

- Chrome Team – Stable Channel Update for Desktop: [https://chromereleases.googleblog.com/2022/05/stable-channel-update-for-desktop\\_10.html](https://chromereleases.googleblog.com/2022/05/stable-channel-update-for-desktop_10.html)
- CVE-2022-1637: <https://cve.mitre.org/cgi-bin/cvename.cgi?name=CVE-2022-1637>
- CVE-2022-1638: <https://cve.mitre.org/cgi-bin/cvename.cgi?name=CVE-2022-1638>

## ISN 2022-13: UMS Vulnerabilities

Updated 8th June (clarification of update availability)

First published 25th May 2022

CVSS 3.1 Base Score: 8.6 (High)

CVSS:3.1/AV:N/AC:L/PR:N/UI:N/S:C/C:H/I:N/A:N

### Summary

Several security issues have been found in IGEL Universal Management Suite (UMS). This affects the following IGEL products:

- UMS 6.x

### Details

It has been discovered that IGEL UMS on Windows stores superuser/database credentials in the `HKEY_LOCAL_MACHINE` registry, which allows a low-privileged attacker with Operating System (OS) access to read the encrypted `dbpassword` value (CVE-2022-25804).

Another vulnerability is a hardcoded DES key which allows an attacker with access to an encrypted `dbpassword` value to decrypt the password and gain superuser/database access to IGEL UMS and its database (CVE-2022-25806).

Another hardcoded DES key allows an attacker with access to encrypted LDAP bind credentials to decrypt the password and obtain access to plaintext LDAP bind credentials (CVE-2022-25807).

Finally, UMS may expose Lightweight Directory Access Protocol (LDAP) bind credentials in plaintext form, which allows a remote, authenticated attacker to obtain access to those credentials (CVE-2022-25805).

These issues were found by Nick Nam of Atredis Partners.

### Mitigations

- CVE-2022-25804 can be mitigated by using a dedicated host for the UMS server and restricting access to it to the UMS administrator only. Using a dedicated host per service is a general IT Best Practice.
- CVE-2022-25806 and CVE-2022-25807 can be mitigated by restricting access to the UMS database and its backups.
- CVE-2022-25805 can be mitigated by using LDAPS (with TLS) only, which is configurable in UMS.

### Update Instructions

- UMS 6.x: A UMS release with fixes is in preparation. When it is available, this ISN will be updated.



## References

- Atredis Partners, Multiple Vulnerabilities in IGEL Universal Management Suite (UMS) v6.07.100: <https://github.com/atredispartners/advisories/blob/master/ATREDIS-2022-0002.md>
- CVE-2022-25804: <https://cve.mitre.org/cgi-bin/cvename.cgi?name=CVE-2022-25804>
- CVE-2022-25806: <https://cve.mitre.org/cgi-bin/cvename.cgi?name=CVE-2022-25806>
- CVE-2022-25807: <https://cve.mitre.org/cgi-bin/cvename.cgi?name=CVE-2022-25807>
- CVE-2022-25805: <https://cve.mitre.org/cgi-bin/cvename.cgi?name=CVE-2022-25805>

## ISN 2022-12: Teradici PCoIP Library Vulnerabilities

Updated 2nd June 2022 (IGEL OS 11.07.140 available)

First published 9th May 2022

CVSS 3.1 Base Score: High

CVSS:3.1 n/a

### Summary

Multiple vulnerabilities have been found in libraries bundled with the Teradici PCoIP client for Linux. This affects the following IGEL products:

- IGEL OS 11
- IGEL OS 10

### Details

The Libexpat version bundled with the Teradici PCoIP client for Linux is affected by three critical issues (CVE-2022-22822, CVE-2022-22823, and CVE-2022-22824) and five issues rated high. Overall, the vendor HP rates the severity in the product context as high.

The OpenSSL version bundled with the Teradici PCoIP client for Linux has one issue rated high (CVE-2022-0778) and one rated medium (CVE-2021-4160). Overall, the vendor HP rates the severity in the product context as high.

The full list of CVEs can be found in the HP advisories given in the References section.

### Update Instructions

- IGEL OS 11: Update to IGEL OS version 11.07.140 or newer.
- IGEL OS 10: Upgrade to IGEL OS version 11.07.140 or newer.

### References

- HP, „Expat Library update for Teradici PCoIP Software and Firmware“: [https://support.hp.com/us-en/document/ish\\_6052753-6052783-16/hpsbhf03750](https://support.hp.com/us-en/document/ish_6052753-6052783-16/hpsbhf03750)
- HP, “OpenSSL update for Teradici PCoIP”: [https://support.hp.com/us-en/document/ish\\_6052720-6052798-16/hpsbhf03784](https://support.hp.com/us-en/document/ish_6052720-6052798-16/hpsbhf03784)

## ISN 2022-11: VMware Horizon Privilege Escalation

Updated 2nd June 2022 (IGEL OS 11.07.140 available)

First published 26th April 2022

CVSS 3.1 Base Score: 7.3 (High)

CVSS:3.1/AV:L/AC:L/PR:L/UI:R/S:U/C:H/I:H/A:H

### Summary

Two vulnerabilities have been found in VMware Horizon Client for Linux. This affects the following IGEL products:

- IGEL OS 11
- IGEL OS 10

### Details

The first issue (CVE-2022-22962) allows a local non-privileged user to change the default shared folder location due to a vulnerable symbolic link. This can result in linking to a file owned by root.

The second issue (CVE-2022-22964) lets a local non-privileged user escalate their privileges to root due to a vulnerable configuration file.

### Update Instructions

- IGEL OS 11: Update to IGEL OS version 11.07.140 or newer.
- IGEL OS 10: Upgrade to IGEL OS version 11.07.140 or newer.

### Mitigation

This issue can be mitigated by not giving users access to a terminal/virtual console on IGEL OS, which they could use to configure and run the exploit code:

Remove an existing local terminal session:

1. In IGEL Setup, go to **Accessories > Terminals**.
2. Select a local terminal session you want to delete.
3. Click the trash icon to remove the selected session.
4. When prompted, confirm that you want to delete the session.
5. Click **Apply**.

Or password-protect the local terminal with the Administrator password:

1. Find the local terminal session under **Accessories > Terminals**.
2. Follow the instructions under Password-Protecting Sessions and Accessories.



Disable virtual console access:

1. In IGEL Setup, go to **User Interface > Display > Access Control**.
2. Activate **Disable console switching** (Default: Console switching enabled)
3. Click **Apply**.

## References

VMSA-2022-0012: <https://www.vmware.com/security/advisories/VMSA-2022-0012.html>



## ISN 2022-10: Firefox Vulnerabilities

Updated 2nd June 2022 (IGEL OS 11.07.140 available)

First published 19th April 2022

CVSS 3.1 Base Score: 7.5 (High)

CVSS:3.1/AV:N/AC:H/PR:N/UI:R/S:U/C:H/I:H/A:H

### Summary

Multiple vulnerabilities have been found in the Firefox ESR Browser. This affects the following IGEL products:

- IGEL OS 11
- IGEL OS 10

### Details

The Firefox ESR Browser used in IGEL OS is affected by seven security issues rated as high. This includes a browser window spoof using fullscreen mode (CVE-2022-26383) and a bypass for the JavaScript sandbox in iframes (CVE-2022-26384). Another vulnerability affects the verification of add-on signatures: When installing an add-on, Firefox verifies the signature before prompting the user; but while the user is confirming the prompt, the underlying add-on file can be modified, and Firefox would not notice (CVE-2022-26387). The other defects concern memory safety. A full list of CVEs is available in the Mozilla advisories listed in "References".

### Mitigation

CVE-2022-26387 can be mitigated by not installing new add-ons until a fixed version of Firefox ESR has been installed.

### Update Instructions

- IGEL OS 11: Update to IGEL OS version 11.07.140 or newer.
- IGEL OS 10: Upgrade to IGEL OS version 11.07.140 or newer.

### References

- Mozilla Foundation Security Advisory 2022-14: <https://www.mozilla.org/en-US/security/advisories/mfsa2022-14/>
- Mozilla Foundation Security Advisory 2022-11: <https://www.mozilla.org/en-US/security/advisories/mfsa2022-11/>



## ISN 2022-09: Zlib Vulnerability

Updated 29th April 2022 (IGEL OS 11.07.110 available)

First published 8th April 2022

CVSS 3.1 Base Score: 8.2 (High)

CVSS:3.1/AV:N/AC:L/PR:N/UI:N/S:U/C:N/I:L/A:H

### Summary

A vulnerability has been found in the Zlib compression library. This affects the following IGEL products:

- IGEL OS 11
- IGEL OS 10

### Details

When compressing specially crafted input, Zlib can run into an error that causes memory corruption, could crash applications, and could potentially lead to code execution. This issue has been registered as CVE-2018-25032 and is rated as high.

### Update instructions

- IGEL OS 11: Update to IGEL OS 11.07.110 or newer.
- IGEL OS 10: Upgrade to IGEL OS 11.07.110 or newer.

### References

CVE-2018-25032: <https://cve.mitre.org/cgi-bin/cvename.cgi?name=CVE-2018-25032>

## ISN 2022-08: Chromium JavaScript Vulnerability

Updated 29th April 2022 (IGEL OS 11.07.110 available)

First published 28th March 2022

Base Score: High

CVSS:3.1 vector not available yet

### Summary

A vulnerability has been found in the Chromium browser. This affects the following IGEL products:

- IGEL OS 11

### Details

It has been discovered that Chromium's JavaScript engine contains a vulnerability (CVE-2022-1096) that can be exploited when the user visits a web page that is under the control of an attacker. Google rates this issue as high and reports that it is being actively exploited in the wild.

### Mitigation

- Use the Firefox Browser in IGEL OS 11.07.100 as an alternative, which is secured by AppArmor.

### Update Instructions

- IGEL OS 11: Update to IGEL OS 11.07.110 or newer.

### References

- Chrome Team – Stable Channel Update for Desktop:  
[https://chromereleases.googleblog.com/2022/03/stable-channel-update-for-desktop\\_25.html](https://chromereleases.googleblog.com/2022/03/stable-channel-update-for-desktop_25.html)
- CVE-2022-1096: <https://cve.mitre.org/cgi-bin/cvename.cgi?name=CVE-2022-1096>



## ISN 2022-07: Chromium Browser Vulnerabilities

First published 22nd March 2022

CVSS 3.1 Base Score: 9.8 (Critical)

CVSS:3.1/AV:N/AC:L/PR:N/UI:N/S:U/C:H/I:H/A:H

### Summary

The Chromium project has reported multiple vulnerabilities in its web browser. These affect the following IGEL products:

- IGEL OS 11

### Details

It has been discovered that the renderer in Chromium contains a use-after-free vulnerability which is rated critical (CVE-2022-0971). Eight further memory corruption issues have been reported which are rated high (CVE-2022-0972, CVE-2022-0973, CVE-2022-0974, CVE-2022-0975, CVE-2022-0976, CVE-2022-0977, CVE-2022-0978, CVE-2022-0979), and one medium (CVE-2022-0980).

### Update Instructions

- IGEL OS 11: Update to IGEL OS 11.07.100 (to be released on March 29th)

### References

- Chrome Team – Stable Channel Update for Desktop: [https://chromereleases.googleblog.com/2022/03/stable-channel-update-for-desktop\\_15.html](https://chromereleases.googleblog.com/2022/03/stable-channel-update-for-desktop_15.html)
- CVE-2022-0971: <https://cve.mitre.org/cgi-bin/cvename.cgi?name=CVE-2022-0971>

## ISN 2022-06: OpenSSL Denial of Service

First published 21st March 2022

CVSS 3.1 Base Score: 7.5 (High)

CVSS:3.1/AV:N/AC:L/PR:N/UI:N/S:U/C:N/I:N/A:H

### Summary

A vulnerability has been found in the OpenSSL cryptography library. This affects the following IGEL products:

- IGEL OS 11
- IGEL OS 10

### Details

It has been discovered that OpenSSL can run into an infinite loop when parsing a TLS certificate or key that has invalid explicit elliptic curve parameters (CVE-2022-0778). An attacker could use a crafted and self-signed certificate to cause a denial of service in OpenSSL and consequently in applications that use OpenSSL.

### Mitigation

The attack relies on a TLS server certificate crafted by an attacker. Until the security fix is available, only connect to servers under control of your own organization or a trusted party.

### Update Instructions

- IGEL OS 11: Update to IGEL OS 11.07.100 (to be released on March 29th)
- IGEL OS 10: Upgrade to IGEL OS 11.07.100 (to be released on March 29th)

### References

- OpenSSL Security Advisory - Infinite loop in BN\_mod\_sqrt() reachable when parsing certificates (CVE-2022-0778): <https://www.openssl.org/news/secadv/20220315.txt>
- CVE-2022-0778: <https://cve.mitre.org/cgi-bin/cvename.cgi?name=CVE-2022-0778>

## ISN 2022-05: Netfilter Escalation of Privilege

First published 14th March 2022

CVSS 3.1 Base Score: 7.8 (High)

CVSS:3.1/AV:L/AC:L/PR:L/UI:N/S:U/C:H/I:H/A:H

### Summary

A vulnerability has been found in the Netfilter component in the Linux kernel. This affects the following IGEL products:

- IGEL OS 11

### Details

An out-of-bounds (OOB) memory access flaw has been found in the Netfilter code of the Linux kernel (CVE-2022-25636). This can enable an unprivileged local user to escalate their privileges or crash the system.

### Update Instructions

- IGEL OS 11: Update to IGEL OS 11.07.100 (to be released on March 29th)

### Mitigation

This issue can be mitigated by not giving users access to a terminal/virtual console on IGEL OS, which they could use to configure and run the exploit code:

Remove an existing local terminal session:

1. In IGEL Setup, go to **Accessories > Terminals**.
2. Select a local terminal session you want to delete.
3. Click the trash icon to remove the selected session.
4. When prompted, confirm that you want to delete the session.
5. Click **Apply**.

Or password-protect the local terminal with the Administrator password:

1. Find the local terminal session under **Accessories > Terminals**.
2. Follow the instructions under Password-Protecting Sessions and Accessories.

Disable virtual console access:

1. In IGEL Setup, go to **User Interface > Display > Access Control**.



2. Activate **Disable console switching** (Default: Console switching enabled)
3. Click **Apply**.

## References

- CVE-2022-25636: <https://cve.mitre.org/cgi-bin/cvename.cgi?name=CVE-2022-25636>

## ISN 2022-04: Dirty Pipe Escalation of Privilege

First published 10th March 2022

CVSS 3.1 Base Score: 8.4 (High)

CVSS:3.1/AV:L/AC:L/PR:N/UI:N/S:U/C:H/I:H/A:H

### Summary

A vulnerability in the Linux kernel, nicknamed "Dirty Pipe", affects the following IGEL products:

- IGEL OS 11

### Details

Dirty Pipe (CVE-2022-0847) is a vulnerability that has been found in Linux kernels since version 5.8. It enables an unprivileged local user to write to files that should be writeable for root only. By adding commands to root's cron jobs or adding lines to the `/etc/passwd` file, for example, the attacker could escalate privilege and become root on the system.

### Update Instructions

- IGEL OS 11: Update to IGEL OS 11.07.100.

### Mitigation

This issue can be mitigated by not giving users access to a terminal/virtual console on IGEL OS, which they could use to configure and run the exploit code:

Remove an existing local terminal session:

1. In IGEL Setup, go to **Accessories > Terminals**.
2. Select a local terminal session you want to delete.
3. Click the trash icon to remove the selected session.
4. When prompted, confirm that you want to delete the session.
5. Click **Apply**.

Or password-protect the local terminal with the Administrator password:

1. Find the local terminal session under **Accessories > Terminals**.
2. Follow the instructions under Password-Protecting Sessions and Accessories.





Disable virtual console access:

1. In IGEL Setup, go to **User Interface > Display > Access Control**.
2. Activate **Disable console switching** (Default: Console switching enabled)
3. Click **Apply**.

## References

- CVE-2022-0847: <https://cve.mitre.org/cgi-bin/cvename.cgi?name=CVE-2022-0847>
- Max Kellerman, “The Dirty Pipe Vulnerability”: <https://dirtypipe.cm4all.com>

## ISN 2022-03: Glibc Denial of Service in IGEL OS

First published 9th March 2022

CVSS 3.1 Base Score: 8.1 (High)

CVSS:3.1/AV:N/AC:H/PR:N/UI:N/S:U/C:H/I:H/A:H

### Summary

Multiple vulnerabilities have been found in the GNU C Library (glibc). This affects the following IGEL products:

- IGEL OS 11
- IGEL OS 10

### Details

Security issues have been discovered in Glibc features such as iconv (CVE-2016-10228, CVE-2019-25013, CVE-2020-27618, CVE-2020-29562, CVE-2021-3326), nscd (CVE-2021-27645) and sunrpc (CVE-2022-23218, CVE-2022-23219). A remote attacker could use these to cause the GNU C Library to hang or crash, resulting in a denial of service. Additionally, the features wordexp (CVE-2021-35942) and realpath (CVE-2021-3998) could be made to disclose information. The vulnerability in getcwd (CVE-2021-3999) could possibly be used to execute arbitrary code.

### Update Instructions

- IGEL OS 11: Update to version 11.07.100 (to be released on 29th March 2022) or newer
- IGEL OS 10: Upgrade to IGEL OS 11.07.100 (to be released on 29th March 2022) or newer

### Mitigation

- The issues CVE-2022-23218 and CVE-2022-23219 in sunrpc can be mitigated by mounting NFS shares from trusted NFS servers only.

### References

- USN-5310-1: GNU C Library vulnerabilities: <https://ubuntu.com/security/notices/USN-5310-1>
- CVE-2016-10228: <https://cve.mitre.org/cgi-bin/cvename.cgi?name=CVE-2016-10228>
- CVE-2019-25013: <https://cve.mitre.org/cgi-bin/cvename.cgi?name=CVE-2019-25013>
- CVE-2020-27618: <https://cve.mitre.org/cgi-bin/cvename.cgi?name=CVE-2020-27618>
- CVE-2020-29562: <https://cve.mitre.org/cgi-bin/cvename.cgi?name=CVE-2020-29562>
- CVE-2021-3326: <https://cve.mitre.org/cgi-bin/cvename.cgi?name=CVE-2021-3326>
- CVE-2021-27645: <https://cve.mitre.org/cgi-bin/cvename.cgi?name=CVE-2021-27645>
- CVE-2022-23218: <https://cve.mitre.org/cgi-bin/cvename.cgi?name=CVE-2022-23218>
- CVE-2022-23219: <https://cve.mitre.org/cgi-bin/cvename.cgi?name=CVE-2022-23219>
- CVE-2021-35942: <https://cve.mitre.org/cgi-bin/cvename.cgi?name=CVE-2021-35942>



- CVE-2021-3998: <https://cve.mitre.org/cgi-bin/cvename.cgi?name=CVE-2021-3998>
- CVE-2021-3999: <https://cve.mitre.org/cgi-bin/cvename.cgi?name=CVE-2021-3999>

## ISN 2022-02: UEFI Vulnerabilities in UD Devices

Updated 21 July 2022 (IGEL OS 11.08.100 will bring remediation)

Updated 24 February 2022 (updated "Update Instructions")

First published 10 February 2022

CVSS 3.1 Base Score: 8.2 (High)

CVSS:3.1/AV:L/AC:L/PR:H/UI:N/S:C/C:H/I:H/A:H

### Summary

Multiple vulnerabilities have been found in UEFI firmware. Several of these also affect the Insyde H2O UEFI firmware used on some IGEL devices. Insyde have not completed their investigation fully, but at present the following IGEL devices are affected:

- UD3-LX 60 (M350C)
- UD7-LX 20 (H860C)

### Details

The Insyde H2O UEFI firmware contains multiple memory management vulnerabilities in System Management Mode (SMM). A local attacker with administrator privileges could use these vulnerabilities to elevate their privileges above the installed operating system in order to execute code in SMM mode. This could enable the attacker to invalidate hardware security features such as UEFI Secure Boot, install persistent malware, or create backdoors for information disclosure.

### Update Instructions

- IGEL OS 11.08.100 (planned to be released in mid-August) will provide a method of deploying the UEFI updates from UMS via network.

### Mitigation

- Set a UEFI password, see [Ein UEFI-Passwort festlegen](#).
- Activate UEFI Secure Boot (default on IGEL UD devices), see [UEFI Secure Boot Enabling Guides \(see page 128\)](#).
- Do not allow booting from USB storage media, see [USB-Boot deaktivieren](#).

This issue can be mitigated further by not giving users access to a terminal/virtual console on IGEL OS, which they could use to configure and run exploit code:

#### Remove an existing local terminal session

1. In IGEL Setup, go to **Accessories > Terminals**.
2. Select a local terminal session you want to delete.

3. Click the trash icon to remove the selected session.
4. When prompted, confirm that you want to delete the session.
5. Click **Apply**.

Or password-protect the local terminal with the Administrator password

1. Find the local terminal session under **Accessories > Terminals**.
2. Follow the instructions under Sitzungen und Zubehör mit Passwörtern schützen.

Disable virtual console access

1. In IGEL Setup, go to **User Interface > Display > Access Control**.
2. Activate **Disable console switching**. (Default: Console switching enabled)
3. Click **Apply**.

## References

- Insyde Software Security Advisory, listing all related CVEs: <https://www.insyde.com/security-pledge>
- CERT Coordination Center, “InsydeH2O UEFI software impacted by multiple vulnerabilities in SMM”: <https://kb.cert.org/vuls/id/796611>

## ISN 2022-01: Polkit Escalation of Privilege

Updated 7 February 2022 (IGEL OS 11.06.250 released)

First published 27 January 2022

CVSS 3.1 Base Score: 7.8 (High)

CVSS:3.1/AV:L/AC:L/PR:L/UI:N/S:U/C:H/I:H/A:H

### Summary

A vulnerability has been found in Polkit, a software component that allows users to execute programs as another user - often as root, - after providing a password. This affects the following IGEL products:

- IGEL OS 11
- IGEL OS 10

### Details

Polkit (formerly known as PolicyKit) has a privilege escalation vulnerability that allows an attacker with regular user privileges to become root without a password. This vulnerability (CVE-2021-4034), nicknamed PwnKit, has been rated as high. A working proof-of-concept exploit is available on the Internet.

### Update Instructions

- IGEL OS 11: Update to IGEL OS 11.06.250.
- IGEL OS 10: Upgrade to IGEL OS 11.06.250.

### Mitigation

This issue can be mitigated by not giving users access to a terminal/virtual console on IGEL OS, which they could use to configure and run the exploit code:

Remove an existing local terminal session:

1. In IGEL Setup, go to **Accessories > Terminals**.
2. Select a local terminal session you want to delete.
3. Click the trash icon to remove the selected session.
4. When prompted, confirm that you want to delete the session.
5. Click **Apply**.

Or password-protect the local terminal with the Administrator password:

1. Find the local terminal session under **Accessories > Terminals**.
2. Follow the instructions under Password-Protecting Sessions and Accessories.



Disable virtual console access:

1. In IGEL Setup, go to **User Interface > Display > Access Control**.
2. Activate **Disable console switching** (Default: Console switching enabled)
3. Click **Apply**.

## References

- CVE-2021-4034: <https://cve.mitre.org/cgi-bin/cvename.cgi?name=CVE-2021-4034>
- Qualys Security Advisory: <https://www.qualys.com/2022/01/25/cve-2021-4034/pwnkit.txt>

## ISN 2021-11: UMS Log4j Vulnerability

Updated 14 February 2022 (corrected statements on CVE-2021-4104)

Updated 12 January 2022 (added CVE-2921-44832 and note on ICG)

Updated 22 December 2021 (updated CVEs, removed mitigations, added fixed UMS version)

Updated 16 December 2021 (added affected versions, corrected mitigation for Elasticsearch on Windows)

First published 13 December 2021

CVSS 3.1 Base Score:10.0 (Critical)

CVSS:3.1/AV:N/AC:L/PR:N/UI:N/S:C/C:H/I:H/A:H

### Summary

A critical vulnerability, also known as Log4shell, has been found in the Log4j logging library. This affects the following IGEL products (other IGEL products are not affected):

- IGEL Universal Management Suite (UMS), all versions since 5.09.100

### Details

The versions 2.0-beta9 up to 2.14.1 of the Log4j library are vulnerable to Remote Command Execution (CVE-2021-44228). This means that a remote attacker can execute commands over the network on software that contains the vulnerable Log4j versions. IGEL UMS and the Elasticsearch engine in the IGEL UMS Web App are affected.

Exploit code is already available, and the issue is being actively exploited on the Internet. Therefore, IGEL strongly recommends updating all UMS installations.

In a typical UMS installation, this issue is mitigated by the fact that UMS is not reachable from the Internet.

In early attempts to fix CVE-2021-44228, further vulnerabilities have been found and assigned the identifiers CVE-2021-45046 and CVE-2021-45105. These affect the Context Lookup feature in Log4j, which UMS does not use, therefore UMS is not affected by these. Also, UMS is not affected by CVE-2021-44832, as it does not use the vulnerable features in Log4j version 2.17.

In addition, a vulnerability has been found in Log4j version 1.2.17 (CVE-2021-4104), which does not affect UMS, as the CVE applies only “when the attacker has write access to the Log4j configuration”, which is not the case in UMS.



#### Note on ICG

IGEL Cloud Gateway 2.04.100 contains Log4j version 1.2.17, but it is not affected by CVE-2021-4104, as it applies only “when the attacker has write access to the Log4j configuration”, which is not the case in ICG.

### Update Instructions

- Update to UMS 6.09.120, which contains Log4j version 2.17





## Mitigation

Older mitigation measures have been discredited. The safest course of action is to update to the fixed version.

## References

- Log4j - Apache Log4j Security Vulnerabilities: <https://logging.apache.org/log4j/2.x/security.html>
- CVE-2021-44228: <https://cve.mitre.org/cgi-bin/cvename.cgi?name=CVE-2021-44228>
- CVE-2021-45046: <https://cve.mitre.org/cgi-bin/cvename.cgi?name=CVE-2021-45046>
- CVE-2021-45045: <https://cve.mitre.org/cgi-bin/cvename.cgi?name=CVE-2021-45045>
- CVE-2021-4104: <https://cve.mitre.org/cgi-bin/cvename.cgi?name=CVE-2021-4104>
- CVE-2021-44832: <https://cve.mitre.org/cgi-bin/cvename.cgi?name=CVE-2021-44832>

## ISN 2021-10: Chromium vulnerabilities

First published 30 November 2021

CVSS 3.1 Base Score: 9.8 (Critical)

CVSS:3.1/AV:N/AC:L/PR:N/UI:N/S:U/C:H/I:H/A:H

### Summary

Many vulnerabilities have been found in the Chromium web browser, some rated as critical. These affect the following IGEL products:

- IGEL OS 11

### Details

The Chromium project has reported many vulnerabilities in its browser, including issues graded as critical and high.

### Update Instructions

- IGEL OS 11: Update to IGEL OS 11.06.210.

### References

CVE-2021-37973, CVE-2021-37972, CVE-2021-37971, CVE-2021-37970, CVE-2021-37969, CVE-2021-37968, CVE-2021-37967, CVE-2021-37966, CVE-2021-37965, CVE-2021-37964, CVE-2021-37963, CVE-2021-37962, CVE-2021-37961, CVE-2021-37960, CVE-2021-37959, CVE-2021-37958, CVE-2021-37957, CVE-2021-37956, CVE-2021-30633, CVE-2021-30632, CVE-2021-30631, CVE-2021-30630, CVE-2021-30629, CVE-2021-30628, CVE-2021-30627, CVE-2021-30626, CVE-2021-30625, CVE-2021-30624, CVE-2021-30623, CVE-2021-30622, CVE-2021-30621, CVE-2021-30620, CVE-2021-30619, CVE-2021-30618, CVE-2021-30617, CVE-2021-30616, CVE-2021-30615, CVE-2021-30614, CVE-2021-30613, CVE-2021-30612, CVE-2021-30611, CVE-2021-30610, CVE-2021-30609, CVE-2021-30608, CVE-2021-30607, CVE-2021-30606, CVE-2021-30604, CVE-2021-30603, CVE-2021-30602, CVE-2021-30601, CVE-2021-30600, CVE-2021-30599, CVE-2021-30598, CVE-2021-30597, CVE-2021-30596, CVE-2021-30594, CVE-2021-30593, CVE-2021-30592, CVE-2021-30591, CVE-2021-30590, CVE-2021-30589, CVE-2021-30588, CVE-2021-30587, CVE-2021-30586, CVE-2021-30585, CVE-2021-30584, CVE-2021-30583, CVE-2021-30582, CVE-2021-30581, CVE-2021-30580, CVE-2021-30579, CVE-2021-30578, CVE-2021-30577, CVE-2021-30576, CVE-2021-30575, CVE-2021-30574, CVE-2021-30573, CVE-2021-30572, CVE-2021-30571, CVE-2021-30569, CVE-2021-30568, CVE-2021-30567, CVE-2021-30566, CVE-2021-30565, CVE-2021-37976, CVE-2021-37975, CVE-2021-37974, CVE-2021-37977, CVE-2021-37979, CVE-2021-37980, CVE-2021-37981, CVE-2021-37982, CVE-2021-37983, CVE-2021-37984, CVE-2021-37985, CVE-2021-37986, CVE-2021-37987, CVE-2021-37988, CVE-2021-37989, CVE-2021-37990, CVE-2021-37991, CVE-2021-37992, CVE-2021-37993, CVE-2021-37996, CVE-2021-37994, CVE-2021-37995, CVE-2021-38003, CVE-2021-38002, CVE-2021-38001, CVE-2021-38000, CVE-2021-37999, CVE-2021-37998 and CVE-2021-37997.

## ISN 2021-09: Firefox ESR vulnerabilities

First published 30 November 2021

CVSS 3.1 Base Score: 10.0 (Critical)

CVSS:3.1/AV:N/AC:L/PR:N/UI:N/S:C/C:H/I:H/A:H

### Summary

Several vulnerabilities have been found in Mozilla Firefox ESR, many rated as high. These affect the Firefox ESR version in the following IGEL products:

IGEL OS 11

IGEL OS 10

### Details

Mozilla has reported various vulnerabilities in Firefox ESR in its Mozilla Foundation Security Advisories (MFSA-2021-49, MFSA-2021-45, MFSA-2021-40, MFSA-2021-37, MFSA-2021-33). Many concern memory safety, and many are exploitable over the network. Overall, 18 are rated high.

### Update Instructions

- IGEL OS 11: Update to IGEL OS 11.06.210.
- IGEL OS 10: Upgrade to IGEL OS 11.06.210.

### References

- MFSA-2021-49: <https://www.mozilla.org/en-US/security/advisories/mfsa2021-49/>  
CVE-2021-38503, CVE-2021-38504, CVE-2021-38506, CVE-2021-38507, MOZ-2021-0008, CVE-2021-38508, CVE-2021-38509, MOZ-2021-0007. (MOZ-\* pending CVE assignment)
- MFSA-2021-45: <https://www.mozilla.org/en-US/security/advisories/mfsa2021-45/>  
CVE-2021-38496, CVE-2021-38497, CVE-2021-38498, CVE-2021-32810, CVE-2021-38500, CVE-2021-38501
- MFSA-2021-40: <https://www.mozilla.org/en-US/security/advisories/mfsa2021-40/>  
CVE-2021-38495
- MFSA-2021-37: <https://www.mozilla.org/en-US/security/advisories/mfsa2021-37/>  
CVE-2021-29991
- MFSA-2021-33: <https://www.mozilla.org/en-US/security/advisories/mfsa2021-33/>  
CVE-2021-29986, CVE-2021-29981, CVE-2021-29988, CVE-2021-29984, CVE-2021-29980, CVE-2021-29987, CVE-2021-29985, CVE-2021-29982, CVE-2021-29989, CVE-2021-29990



## ISN 2021-08: ICG Authentication Vulnerability

First published 17 November 2021

CVSS 3.1 Base Score: 10.0 (Critical)

CVSS:3.1/AV:N/AC:L/PR:N/UI:N/S:C/C:H/I:H/A:H

### Summary

A critical security vulnerability affects IGEL Cloud Gateway (ICG) in the following versions:

- All ICG versions before 2.04.100

### Details

A penetration test has found an authentication vulnerability in ICG. It could enable an unauthenticated remote attacker to send commands and settings to connected IGEL OS endpoints.

IGEL would like to thank SCHUTZWERK GmbH, who discovered the vulnerability.

### Update Instructions

- Update to ICG 2.04.100.

## ISN 2021-07: UMS Web App Information Disclosure

First published 27 September 2021

CVSS 3.1 Base Score: 9.9 (Critical)

CVSS:3.1/AV:N/AC:L/PR:N/UI:N/S:C/C:H/I:L/A:L

### Summary

A critical security vulnerability in UMS Web App affects the following IGEL products:

- UMS 6.8.x with UMS Web App installed
- UMS 6.7.x with UMS Web App installed
- UMS 6.6.x with UMS Web App installed
- UMS 6.5.x with UMS Web App installed

### Details

A penetration test has found that the UMS Web App can be made to reveal critical information, including the UMS Superuser password. IGEL would like to thank Lennert Preuth from SCHUTZWERK GmbH, who discovered the vulnerability.

### Update Instructions

- Update to UMS 6.08.120

### Mitigation

- IGEL strongly recommends that all affected users update/upgrade to UMS 6.08.120. If you have reasons not to do that, you can do the following:
  - a. Make a UMS data backup.
  - b. Re-run your current installer and re-install UMS without UMS Web App.

## ISN 2021-06: IGEL OS OpenSSH Vulnerabilities

Updated 29 October 2021 (alternative mitigation for CVE-2020-15778)

Updated 23 September 2021 (IGEL OS 11.06.100 is now available)

First published 2 August 2021

CVSS 3.1 Base Score: 7.8 (High)

CVSS:3.1/AV:L/AC:L/PR:N/UI:R/S:U/C:H/I:H/A:H

### Summary

Three security vulnerabilities in OpenSSH affect the following IGEL products:

- IGEL OS 11
- IGEL OS 10

### Details

The `scp` command in OpenSSH through 8.3p1 allows command injection in the `scp.c toremote` function, as demonstrated by backtick characters in the destination argument (CVE-2020-15778). This allows `scp` users to execute commands on the remote system. Note: The vendor reportedly has stated that they intentionally omit validation of "anomalous argument transfers" because that could "stand a great chance of breaking existing workflows." This vulnerability is rated with a CVSS 3.1 Base Score 7.8 (High).

The `ssh-agent` in OpenSSH before 8.5 has a double free (CVE-2021-28041) that may be relevant in a few less-common scenarios, such as unconstrained agent-socket access on a legacy operating system (does not apply to IGEL OS), or the forwarding of an agent to an attacker-controlled host. This vulnerability is rated with a CVSS 3.1 Base Score 7.1 (High). Also, the client side in OpenSSH 5.7 through 8.4 has an Observable Discrepancy leading to an information leak in the algorithm negotiation (CVE-2020-14145). This allows man-in-the-middle attackers to target initial connection attempts (where no host key for the server has been cached by the client). Note: Some reports state that 8.5 and 8.6 are also affected. This vulnerability is rated with a CVSS 3.1 Base Score 4.3 (Medium).

### Update Instructions

CVE-2021-28041 is fixed in IGEL OS 11.06.100.

There are no updates yet for the other two issues.

### Mitigation

- The first option for CVE-2020-15778: Unless you explicitly need the OpenSSH server on IGEL OS, disable it. It is not needed for the management of IGEL OS endpoints via UMS or ICG.
  - a. In IGEL Setup, go to **System > Remote Access > SSH Access**.
  - b. Uncheck the **Enable** checkbox.
  - c. Click **Apply**.

- d. Reboot the system.
- The second option for CVE-2020-15778: If you use the ssh server on IGEL OS for executing commands remotely, limit command execution via the `ssh` and `scp` commands:
  - a. In IGEL Setup, go to **System > Remote Access > SSH Access**.
  - b. Under **User access**, make sure that **user** is set to **Deny**.
  - c. Make sure that **ruser** is not denied access, and use **ruser** for ssh access.
  - d. Under **Applications access for remote user 'ruser'**, add a commandline with the full Linux path of the command you want to execute. Do this for every command you want to execute via ssh.
  - e. Click **Apply**.
  - f. Reboot the system.
- For CVE-2020-14145: If you offer an SSH client session to your IGEL OS users, instruct them to check the remote host key fingerprint on the first connect. Supply them with the correct fingerprint for comparison.

## References

- CVE-2020-15778: <https://cve.mitre.org/cgi-bin/cvename.cgi?name=CVE-2020-15778>
- CVE-2021-28041: <https://cve.mitre.org/cgi-bin/cvename.cgi?name=CVE-2021-28041>
- CVE-2020-14145: <https://cve.mitre.org/cgi-bin/cvename.cgi?name=CVE-2020-14145>

## ISN 2021-05: IGEL OS Denial of Service

Announced 23 July 2021

Updated 23 September 2021 (IGEL OS 11.06.100 is now available)

CVSS 3.1 Score: 8.8 (High)

CVSS:3.1/AV:L/AC:L/PR:L/UI:N/S:C/C:H/I:H/A:H

### Summary

A local denial of service vulnerability affects the following IGEL products:

- IGEL OS 11
- IGEL OS 10

### Details

A research team from Qualys has discovered a vulnerability in `systemd` (CVE-2021-33910). An unprivileged local user can exploit it to crash `systemd` and the whole operating system (kernel panic).

### Update Instructions

- IGEL OS 11: Upgrade to IGEL OS 11.06.100
- IGEL OS 10: Upgrade to IGEL OS 11

### Mitigation

- Disable terminal access for the user, see Disabling Local Terminal Access.
- Disable virtual console access, see Disabling Virtual Console Access.
- As the attack relies on mounting user-controlled filesystems, disable mounting of filesystems by the user:
  - Disable storage hotplug (disabled by default), see Disabling Storage Hotplug.
  - Remove the Mobile Device Access USB feature (removed by default), see Removing Unused Features.

### References

- Qualys, “CVE-2021-33910: Denial of Service (Stack Exhaustion) in `systemd` (PID 1)”: <https://blog.qualys.com/vulnerabilities-threat-research/2021/07/20/cve-2021-33910-denial-of-service-stack-exhaustion-in-systemd-pid-1>
- CVE-2021-33910: <https://cve.mitre.org/cgi-bin/cvename.cgi?name=CVE-2021-33910>



## ISN 2021-04: IGEL OS Kernel Privilege Escalation

Announced 23 July 2021

Updated 23 September 2021 (IGEL OS 11.06.100 is now available)

CVSS 3.1 Score: 7.8 (High)

CVSS:3.1/AV:L/AC:H/PR:L/UI:N/S:C/C:H/I:H/A:H

### Summary

A local privilege escalation vulnerability affects the following IGEL products:

- IGEL OS 11
- IGEL OS 10

### Details

A research team from Qualys has discovered a vulnerability in the Linux kernel's filesystem layer (CVE-2021-33909). An unprivileged local user can use it to gain root privileges.

### Update Instructions

- IGEL OS 11: Upgrade to IGEL OS 11.06.100
- IGEL OS 10: Upgrade to IGEL OS 11

### Mitigation

- Disable terminal access for the user, see [Disabling Local Terminal Access](#).
- Disable virtual console access, see [Disabling Virtual Console Access](#).
- As the attack relies on mounting user-controlled filesystems, disable mounting of filesystems by the user:
  - Disable storage hotplug (disabled by default), see [Disabling Storage Hotplug](#).
  - Remove the Mobile Device Access USB feature (removed by default), see [Removing Unused Features](#).
- Qualys has published mitigations for the specific exploit that their researchers used (other exploitation techniques may exist): <https://blog.qualys.com/vulnerabilities-threat-research/2021/07/20/sequoia-a-local-privilege-escalation-vulnerability-in-linuxs-filesystem-layer-cve-2021-33909>

### References

- Qualys, "Sequoia: A Local Privilege Escalation Vulnerability in Linux's Filesystem Layer (CVE-2021-33909)": <https://blog.qualys.com/vulnerabilities-threat-research/2021/07/20/sequoia-a-local-privilege-escalation-vulnerability-in-linuxs-filesystem-layer-cve-2021-33909>



- CVE-2021-33909: <https://cve.mitre.org/cgi-bin/cvename.cgi?name=CVE-2021-33909>

## ISN 2021-03: IGEL W10 Print Spooler Vulnerability

First published 7 July 2021

Updated 15 October 2021 (private build with security fixes available from IGEL)

Updated 16 July 2021 (inserted update instructions)

CVSS 3.1 Score: 8.8 (High)

CVSS:3.1/AV:N/AC:L/PR:L/UI:N/S:U/C:H/I:H/A:H

A Remote Code Execution (RCE) vulnerability, known as PrintNightmare, affects the following IGEL products:

- IGEL W10 IoT

### Details

A remote code execution vulnerability (CVE-2021-34527) exists when the Windows Print Spooler service improperly performs privileged file operations. An attacker who successfully exploited this vulnerability could run arbitrary code with SYSTEM privileges.

### Update Instructions

1. IGEL customers can request the private build (PB) W10 IoT 4.04.180 from IGEL Customer Engineering (<https://support.igel.com/csm>), which contains the needed security fixes.
2. Install the update.
3. In addition to installing the update, in order to secure your system, you must confirm that the following registry settings are set to 0 (zero) or are not defined. In the default IGEL setting, they do not exist and therefore are in the secure setting already. You can check and set them by opening the Command Prompt and issuing the “regedit” command.
  - `HKEY_LOCAL_MACHINE\SOFTWARE\Policies\Microsoft\Windows NT\Printers\PointAndPrint`
  - `NoWarningNoElevationOnInstall = 0 (DWORD) or not defined (default setting)`
  - `UpdatePromptSettings = 0 (DWORD) or not defined (default setting)`Microsoft warns that having `NoWarningNoElevationOnInstall` set to “1” makes your system vulnerable by design.

### References

- CVE-2021-34527: <https://cve.mitre.org/cgi-bin/cvename.cgi?name=CVE-2021-34527>
- Microsoft, “Windows Print Spooler Remote Code Execution Vulnerability”: <https://msrc.microsoft.com/update-guide/vulnerability/CVE-2021-34527>
- Microsoft, “Windows Print Spooler Remote Code Execution Vulnerability”: <https://msrc.microsoft.com/update-guide/vulnerability/CVE-2021-36958>

## ISN 2021-02: IGEL OS and W10 Wi-Fi Vulnerabilities (Fragattacks)

First published 21 May 2021

Updated 30 September 2021 (Resolution in IGEL OS 11.06.100)

CVSS 3.1 Score: 5.0 (Medium)

CVSS:3.1/AV:A/AC:H/PR:N/UI:N/S:U/C:L/I:L/A:L

Several Wi-Fi vulnerabilities, known collectively as Fragattacks, affect the following IGEL products:

- IGEL OS 11
- IGEL OS 10
- IGEL W10 IoT

### Details

The researcher Mathy Vanhoef has found several security vulnerabilities both in the IEEE 802.11 standards underpinning Wi-Fi and their implementations in Linux and Windows. He has demonstrated that weaknesses in the fragmentation and frame aggregation mechanisms can be abused to exfiltrate confidential data from or inject frames into a protected Wi-Fi connection between a client and the access point.

In IGEL software, these threats are mitigated as it uses TLS for endpoint management via UMS and ICG. Also, IGEL OS updates are cryptographically signed and validated. This is reflected in IGEL's CVSS 3.1 scoring of these issues.

Several CVE identifiers have been assigned to this group of vulnerabilities:

Design flaws:

- [CVE-2020-24588](https://nvd.nist.gov/vuln/detail/CVE-2020-24588)<sup>6</sup>: Aggregation attack (accepting non-SPP A-MSDU frames)
- [CVE-2020-24587](https://nvd.nist.gov/vuln/detail/CVE-2020-24587)<sup>7</sup>: Mixed key attack (reassembling fragments encrypted under different keys)
- [CVE-2020-24586](https://nvd.nist.gov/vuln/detail/CVE-2020-24586)<sup>8</sup>: Fragment cache attack (not clearing fragments from memory when (re)connecting to a network)

Implementation vulnerabilities that allow the trivial injection of plaintext frames in a protected Wi-Fi network are assigned the following CVEs:

- [CVE-2020-26140](https://nvd.nist.gov/vuln/detail/CVE-2020-26140)<sup>9</sup>: Accepting plaintext data frames in a protected network
- [CVE-2020-26143](https://nvd.nist.gov/vuln/detail/CVE-2020-26143)<sup>10</sup>: Accepting fragmented plaintext data frames in a protected network

Other implementation flaws are assigned the following CVEs:

- [CVE-2020-26147](https://nvd.nist.gov/vuln/detail/CVE-2020-26147)<sup>11</sup>: Reassembling mixed encrypted/plaintext fragments
- [CVE-2020-26141](https://nvd.nist.gov/vuln/detail/CVE-2020-26141)<sup>12</sup>: Not verifying the TKIP MIC of fragmented frames.

---

6 <https://nvd.nist.gov/vuln/detail/CVE-2020-24588>

7 <https://nvd.nist.gov/vuln/detail/CVE-2020-24587>

8 <https://nvd.nist.gov/vuln/detail/CVE-2020-24586>

9 <https://nvd.nist.gov/vuln/detail/CVE-2020-26140>

10 <https://nvd.nist.gov/vuln/detail/CVE-2020-26143>

11 <https://nvd.nist.gov/vuln/detail/CVE-2020-26147>

12 <https://nvd.nist.gov/vuln/detail/CVE-2020-26141>



## Update Instructions

- IGEL OS 11: Update to IGEL OS 11.06.100 or newer. This fixes all design flaws and Linux implementation flaws listed above.
- IGEL OS 10: Upgrade to IGEL OS 11.06.100 or newer.

## Mitigations

- If possible, replace Wi-Fi connections with wired Ethernet.

The reporter of these vulnerabilities recommends the following mitigations until fixes are available:

- Use HTTPS/TLS exclusively for websites in order to add another layer of protection for confidential information such as usernames and passwords.  
Keep your Wi-Fi access points updated with the latest firmware version.
- Reduce the impact of attacks by manually configuring your DNS server so that it cannot be poisoned.
- Specific to your Wi-Fi configuration, you can mitigate attacks (but not fully prevent them) by disabling fragmentation, disabling pairwise rekeys, and disabling dynamic fragmentation in Wi-Fi 6 (802.11ax) devices.

## References

- <https://www.fragattacks.com>
- Mathy Vanhoef, “Fragment and Forge: Breaking Wi-Fi Through Frame Aggregation and Fragmentation”: <https://papers.mathyvanhoef.com/usenix2021.pdf>



## ISN 2021-01: IGEL OS Remote Command Execution Vulnerability

Announced 25 February 2021

CVSS 3.1 Score: 9.8 (Critical)

A remote command execution (RCE) vulnerability affects the following IGEL products:

- IGEL OS 11
- IGEL OS 10

### Details

An external penetration test has found that the TLS connector service used in IGEL OS for *secure shadowing* and *secure terminal* is vulnerable to command injection. This vulnerability enables remote command execution in IGEL OS.

### Update Instructions

- IGEL OS 11: Update to IGEL OS 11.04.270 or newer.
- IGEL OS 11.03.\* branch: Update to version 11.03.620 or newer
- IGEL OS 10: Upgrade to IGEL OS 10.06.220 or newer.

### Mitigation

Disable secure shadowing, see Shadow. However, it is not advisable to use unencrypted shadowing instead.

Disable secure terminal, see Secure Terminal.



## ISN 2020-10: IGEL OS Bluetooth Vulnerabilities

Announced 8 December 2020

Score: High

Three Bluetooth vulnerabilities, one rated as high, affect the following IGEL products:

- IGEL OS 11
- IGEL OS 10

### Details

Weaknesses in input validation and access control have been discovered in BlueZ, the Linux Bluetooth stack, and have been nicknamed "BleedingTooth". CVE-2020-12352 and CVE-2020-24490, both rated medium, may disclose information to an unauthenticated user nearby. CVE-2020-12351 is rated high as it may allow an unauthenticated user nearby to enable escalation of privilege.

### Update Instructions

- IGEL OS 11: Update to IGEL OS 11.04.240 or newer.
- IGEL OS 10: Upgrade to IGEL OS 11.

### Mitigation

Disable Bluetooth, see Bluetooth Assistant.

### References

Intel BlueZ Advisory: <https://www.intel.com/content/www/us/en/security-center/advisory/intel-sa-00435.html>



## ISN 2020-09: Command Execution from Start Menu

Announced 7 October 2020

Score: High

A local command execution security issue affects the start menu on:

- IGEL OS 11 (11.04.xxx before 11.04.130)

### Details

A component update has added a feature to the start menu that lets unprivileged users run any command that the "User" account is allowed to execute. This enables users to break out of the limited user interface, e.g. to start a local terminal or add a session.

### Update Instructions

- IGEL OS 11: Update to IGEL OS 11.04.130 or newer.

### Mitigation

In IGEL Setup, go to **User Interface > Desktop > Start Menu** and set **Start menu type** to "Legacy". This removes command execution.



## ISN 2020-08: Firefox ESR Various Vulnerabilities

Announced 17 September 2020

Score: High

Several security issues, 8 rated as high, affect the Firefox ESR web browser on:

- IGEL OS 11
- IGEL OS 10
- IGEL Linux 5

### Details

It has been found that manipulating individual parts of a URL object could have caused an out-of-bounds read, leaking process memory to malicious JavaScript (CVE-2020-12418). Apart from that, by observing the stack trace for JavaScript errors in web workers, it was possible to leak the result of a cross-origin redirect (CVE-2020-15652). The WebRTC data channel could leak internal memory addresses to a peer, enabling them to bypass ASLR (CVE-2020-6514).

Another vulnerability allowed a malicious webpage to prompt the user to install an extension. Combined with user confusion, this could result in an unintended or malicious extension being installed (CVE-2020-15664).

Finally, a number of memory management bugs have been discovered (CVE-2020-12419, CVE-2020-12420, CVE-2020-15659, CVE-2020-15669).

### Update Instructions

- IGEL OS 11: Update to IGEL OS 11.04.130 or newer.
- IGEL OS 10: An updated version is upcoming. When it is available, this document will be updated.
- IGEL Linux 5: This version does not have the space required for the Firefox ESR update. IGEL recommends removing the web browser feature if possible: <https://kb.igel.com/igellinux/en/features-2275613.html>

### References

Mozilla Foundation Security Advisory 2020-25: <https://www.mozilla.org/en-US/security/advisories/mfsa2020-25/>

Mozilla Foundation Security Advisory 2020-31: <https://www.mozilla.org/en-US/security/advisories/mfsa2020-31/>

Mozilla Foundation Security Advisory 2020-37: <https://www.mozilla.org/en-US/security/advisories/mfsa2020-37/>

## ISN 2020-07: Firefox ESR Various Vulnerabilities

Announced 9 June 2020

Score: High

Four security issues rated as high affect the Firefox ESR web browser on:

- IGEL OS 11
- IGEL OS 10
- IGEL Linux 5

### Details

It has been discovered that a timing attack against Mozilla's Network Security Services (NSS) library could leak private keys (CVE-2020-12399). Also, when browsing a malicious page, a race condition in SharedWorkerService could occur and lead to a potentially exploitable crash (CVE-2020-12405). A JavaScript type confusion with NativeTypes could result in a crash, and potentially to execution of arbitrary code (CVE-2020-12406). Further memory safety bugs showed evidence of memory corruption and Mozilla presume that with enough effort some of these could have been exploited to run arbitrary code (CVE-2020-12411).

### Update Instructions

- IGEL OS 11: Update to IGEL OS 11.03.580 or newer.
- IGEL OS 10: Update to IGEL OS 10.06.190 or newer.
- IGEL Linux 5: This version does not have the space required for the Firefox ESR update. IGEL recommends removing the web browser feature if possible: Features.

### References

Mozilla Foundation Security Advisory 2020-21: <https://www.mozilla.org/en-US/security/advisories/mfsa2020-21/>



## ISN 2020-06: IGEL Cloud Gateway (ICG) Various Vulnerabilities

Announced 15 July 2020

Score: High

Various security issues, among them 3 rated as high, have been discovered in IGEL Cloud Gateway (ICG) before version 2.02.100.

### Details

A penetration test commissioned by IGEL has found an issue in the authentication mechanism between UMS and ICG. Furthermore, there were some missing or not strict enough authorization checks in the communication between UMS, ICG and the endpoint devices. Finally, there was information disclosure in the server status response and in the ICG log files.

### Update Instructions

- Update to IGEL Cloud Gateway 2.02.100 or newer.



## ISN 2020-05: Intel Chipset Vulnerabilities

Announced 9 June 2020

Score: Medium

A vulnerability in Intel chipsets affects the following IGEL hardware:

- IGEL UD 2 (M250C) with BIOS versions before v3.D.13-05292019 (July 2019)
- IGEL UD 6 (H830C) with BIOS versions before v.3.3.13-05232019 (July 2019)

### Details

A potential security vulnerability in Intel CPUs may allow information disclosure.

### Update Instructions

IGEL OS users need not update the BIOS/UEFI. Instead, the microcode released by Intel will be applied at boot time by IGEL OS.

- IGEL OS 11: Update to IGEL OS 11.03.580 or newer
- IGEL OS 10: Update to IGEL OS 10.06.180 or newer

### References

INTEL-SA-00233 “Microarchitectural Data Sampling Advisory”: <https://www.intel.com/content/www/us/en/security-center/advisory/intel-sa-00233.html>

## ISN 2020-04: Firefox ESR Various Vulnerabilities

Announced 9 June 2020

Score: Critical

Two security issues rated critical and one rated high affect the Firefox ESR web browser on

- IGEL OS 11
- IGEL OS 10
- IGEL Linux 5

### Details

A race condition when running shutdown code for Web Worker led to a use-after-free vulnerability. This resulted in a potentially exploitable crash. (CVE-2020-12387). Additionally, memory safety bugs have been reported in Firefox ESR 68.7. Some of these bugs showed evidence of memory corruption and Mozilla presume that with enough effort some of these could have been exploited to run arbitrary code (CVE-2020-12395). Furthermore, a buffer overflow could occur when parsing and validating SCTP chunks in WebRTC. This could have led to memory corruption and a potentially exploitable crash (CVE-2020-6831).

### Update Instructions

- IGEL OS 11: Update to IGEL OS 11.03.580 or newer.
- IGEL OS 10: Update to IGEL OS 10.06.180 or newer.
- IGEL Linux v5: This version does not have the space required for the Firefox ESR update. IGEL recommends removing the web browser feature if possible: <https://kb.igel.com/igellinux/en/features-2275613.html>

### References

Mozilla Foundation Security Advisory 2020-17: <https://www.mozilla.org/en-US/security/advisories/mfsa2020-17/>

## ISN 2020-03: Firefox ESR Vulnerabilities

Announced 24 April 2020

Score: Critical

Two critical security issues affect the Firefox ESR web browser on

- IGEL OS 11
- IGEL OS 10
- IGEL Linux 5

### Details

Under certain conditions, when running the nsDocShell destructor (CVE-2020-6819) or when handling a ReadableStream (CVE-2020-6820), race conditions can cause a use-after-free. These vulnerabilities can be exploited to inject code into Firefox memory and execute it in the web browser's context. Mozilla are aware of targeted attacks in the wild abusing these flaws.

### Update Instructions

- IGEL OS 11: Update to IGEL OS 11.03.530 or newer.
- IGEL OS 10: Update to IGEL OS 10.06.179 or newer.
- IGEL Linux 5: This version does not have the space required for the Firefox ESR update. IGEL recommends removing the web browser feature if possible: <https://kb.igel.com/igellinux/en/features-2275613.html>

### References

Mozilla Foundation Security Advisory 2020-11: <https://www.mozilla.org/en-US/security/advisories/mfsa2020-11/>



## ISN 2020-02: Windows CryptoAPI Spoofing Vulnerability

Announced 24 February 2020

Score: High

A high scoring security issue affects IGEL Windows 10 IoT

### Details

A vulnerability has been discovered in the way Windows CryptoAPI (Crypt32.dll) validates Elliptic Curve Cryptography (ECC) certificates (CVE-2020-0601). An attacker could exploit this to sign a malware executable with a spoofed certificate so that it will look legitimate to Windows. This vulnerability is also known as “Curve Ball” or “Chain of Fools”.

### Update Instructions

- Update to IGEL Windows 10 IoT version 4.04.140 or newer.

### References

NVD - CVE-2020-0601 Detail: <https://nvd.nist.gov/vuln/detail/CVE-2020-0601>

## ISN 2020-01: Firefox ESR Vulnerability

Announced 15 January 2020

Score: Critical

A critical security issue affects the Firefox ESR web browser on

- IGEL OS 11
- IGEL OS 10
- IGEL Linux 5

### Details

Incorrect alias information in IonMonkey JIT compiler for setting array elements could lead to a type confusion (memory vulnerability). Mozilla is aware of targeted attacks in the wild abusing this flaw (CVE-2019-17026).

### Update Instructions

- IGEL OS 11: Update to IGEL OS 11.03.110 or newer.
- IGEL OS 10: Update to IGEL OS 10.06.170 or newer.
- IGEL Linux 5: This version does not have the space required for the Firefox ESR update. IGEL recommends removing the web browser feature if possible: <https://kb.igel.com/igellinux/en/features-2275613.html>

### References

Mozilla Foundation Security Advisory 2020-03: <https://www.mozilla.org/en-US/security/advisories/mfsa2020-03/>





## ISN-2019-13: Windows Defender

Announced 17 October 2019

Score: High

A security issue affects IGEL Windows products in the following versions:

- IGEL Windows 10 IoT

### Details

A denial of service vulnerability exists when Microsoft Defender improperly handles files. An attacker could exploit the vulnerability to overwrite the discretionary access control list (DACL) for a file. To exploit the vulnerability, an attacker would first require execution on the victim system.

### Update Instructions

- IGEL Windows 10 IoT: Update to IGEL Windows 10 IoT 4.04.120 or newer.

### References

Microsoft Security Response Center - CVE-2019-1255 | Microsoft Defender Denial of Service Vulnerability: <https://portal.msrc.microsoft.com/en-US/security-guidance/advisory/CVE-2019-1255>



## ISN-2019-12: Internet Explorer Vulnerability

Announced 08 October 2019

Score: High

A security issue affects IGEL Windows products in the following versions:

- Universal Desktop W7+
- IGEL Windows 10 IoT

### Details

A remote code execution vulnerability exists in the way that the scripting engine handles objects in memory in Internet Explorer. The vulnerability could corrupt memory in such a way that an attacker could execute arbitrary code in the context of the current user.

### Update Instructions

- Universal Desktop W7+: Update to version 3.14.100 or newer.
- IGEL Windows 10 IoT: Upgrade to IGEL Windows 10 IoT 4.04.120 or newer.

### References

Microsoft Security Response Center - CVE-2019-1367 | Scripting Engine Memory Corruption

Vulnerability: <https://portal.msrc.microsoft.com/en-US/security-guidance/advisory/CVE-2019-1367>



## ISN 2019-11: Firefox ESR Vulnerabilities

Announced 13 September 2019

Score: High

Several security issues affect the Firefox ESR web browser on

- IGEL OS 11
- IGEL OS 10
- IGEL Linux v5

### Details

Many vulnerabilities have been discovered in Firefox ESR, which Mozilla has summarized in the Mozilla Foundation Security Advisory (MFSa) 2019-27 with an overall critical score. The advisory contains CVE-2019-11746, CVE-2019-11744, CVE-2019-11752, CVE-2019-9812, CVE-2016-11743 and CVE-2019-11740, which include potentially exploitable crashes while manipulating video elements or extracting a key value in IndexedDB, and a sandbox escape through Firefox Sync.

### Update Instructions

- IGEL OS 11: Update to IGEL OS 11.02.150 or newer.
- IGEL OS 10: Update to IGEL OS 10.06.130 or newer.
- IGEL Linux 5: This version does not have the space required for the Firefox ESR update. IGEL recommends removing the web browser feature if possible: <https://kb.igel.com/igellinux/en/features-2275613.html>

### References

Mozilla Foundation Security Advisory 2019-27: <https://www.mozilla.org/en-US/security/advisories/mfsa2019-27/>

## ISN 2019-10: Spectre SWAPGS CPU Vulnerability

Announced 16 August 2019

Score: Low

A security issue affects Intel and AMD x86\_64 CPUs.

### Details

A Spectre-v1-like vulnerability using the "SWAPGS" instruction (CVE-2019-1125) has been discovered in 64-bit CPUs. It could enable a skilled local attacker to access private information via a side channel attack. This vulnerability can be mitigated by operating system updates.

IGEL assigns only a score of "Low" to this vulnerability because on IGEL operating systems there is only one non-privileged user that owns private information. A scenario of another non-privileged user using this attack to access private data is therefore not realistic.

### Update Instructions

- IGEL OS 11: Update to IGEL OS 11.02.150 or newer (an earlier fix in IGEL OS 11.02.100 contains a backporting error, CVE-2019-15902).
- IGEL OS 10: Update to IGEL OS 10.06.120 or newer.
- IGEL Windows 10 IoT: Upgrade to IGEL Windows 10 IoT 4.04.110 or newer.
- Universal Desktop W7+: Update to Universal Desktop W7+ version 3.13.150 or newer.

### References

Bitdefender: SWAPGS Attack: <https://www.bitdefender.com/business/swapgs-attack.html>

Red Hat Knowledgebase: CVE-2019-112: Spectre SWAPGS gadget vulnerability: <https://access.redhat.com/articles/4329821>



## ISN 2019-09: IGEL OS SWP Vulnerability

Announced 24 July 2019

Score: High

A security issue affects the Shared Workplace (SWP) feature in the following IGEL OS version:

- IGEL OS 10.06.100

### Details

The Shared Workplace login accepts any user credentials. However, no user settings are applied to the device.

### Update Instructions

- Update to IGEL OS 10.06.110 or newer.

## ISN 2019-08: Firefox ESR Vulnerabilities

Announced 24 July 2019

Score: Critical

Several security issues affect the Firefox ESR web browser on

- IGEL OS 11
- IGEL OS 10
- IGEL Linux v5

### Details

Many vulnerabilities have been discovered in Firefox ESR, which Mozilla has summarized in the following Mozilla Foundation Security Advisories (MFSAs): MFSA-2019-22, MFSA-2019-19, MFSA- 2019-18, MFSA-2019-08, MFSA-2019-05 and MFSA-2019-02. Among these are vulnerabilities such as a sandbox escape, a script injection vulnerability, privilege escalation and some critical memory management weaknesses.

### Update Instructions

- IGEL OS 11: Update to IGEL OS 11.01.130 or newer.
- IGEL OS 10: Update to IGEL OS 10.06.110 or newer.

### Mitigation

- IGEL Linux 5: This version does not have the space required for the Firefox ESR update. IGEL recommends disabling the web browser feature if possible: <https://kb.igel.com/igellinux/en/features-2275613.html>

### References

- MFSA-2019-22: <https://www.mozilla.org/en-US/security/advisories/mfsa2019-22/>
- Mozilla Foundation Security Advisories: <https://www.mozilla.org/en-US/security/advisories/>

## ISN 2019-07: Firefox ESR Vulnerability

Announced 5 July 2019

Score: High

A security issue affects the Firefox ESR web browser on

- IGEL OS 11
- IGEL OS 10
- IGEL Linux 5

### Details

Two vulnerabilities (CVE-2019-11708 and CVE-2019-11707) have been discovered in Firefox that in combination allow a remote attacker to execute code on a target machine.

### Update Instructions

- IGEL OS 11: Update to IGEL OS 11.01.120, containing the fixed Firefox ESR version 60.7.2.
- IGEL OS 10: Update to IGEL OS 10.05.830, containing the fixed Firefox ESR version 60.7.2.

### Mitigation

- IGEL Linux 5: This version does not have the space required for the Firefox ESR update. IGEL recommends disabling the web browser feature if possible: <https://kb.igel.com/igellinux/en/features-2275613.html>

## ISN 2019-06: IGEL OS Kernel Vulnerability

Announced 5 July 2019

Score: High

A security issue affects IGEL Linux-based operating systems in the following versions:

- IGEL OS 11
- IGEL OS 10
- IGEL Linux 5

### Details

It has been discovered that the Linux Kernel can be crashed by sending specially crafted network packets to a Linux host (CVE-2019-11477, CVE-2019-11478 and CVE-2019-11479). Issues in minimum segment size (MSS) and TCP Selective Acknowledgement (SACK) capabilities can cause a kernel panic.

### Update Instructions

- IGEL OS 11: Update to IGEL OS 11.01.120
- IGEL OS 10: Update to IGEL OS 10.05.830

### Mitigation

- IGEL Linux 5: Add the following command to **System > Firmware Customization > Custom Commands > Base > Initialization**: `echo 0 > /proc/sys/net/ipv4/tcp_mtu_probing ; iptables -I INPUT -p tcp -m tcpmss --mss 1:1000 -j DROP`

### References

Advisory from Netflix with further suggestions for workarounds:

<https://github.com/Netflix/security-bulletins/blob/master/advisories/third-party/2019-001.md>





## ISN 2019-05: UMS HA Vulnerability

Announced 14 June 2019

Score: High

A security issue affects Universal Management Suite (UMS) in the following versions:

- UMS 5.x if using High Availability feature
- UMS 6.x if using High Availability feature

### Details

It has been discovered that a UMS component used for the High Availability (HA) feature has a debug port open. This may enable a remote attacker to read information and execute Java code in the context of the Java VM.

### Update Instructions

Update to UMS 6.02.100 or newer.

To update your UMS installation, please follow these instructions: [Updating UMS](#)



## ISN 2019-04: RDP Vulnerability in WES7

Announced 7 June 2019

Score: Critical

A security issue in Remote Desktop Services affects IGEL Windows Embedded Standard 7 (WES7) in all versions.

### Details

Microsoft has reported a remote code execution vulnerability (CVE-2019-0708, KB4499175) in Remote Desktop Services (formerly known as Terminal Services) affecting many Windows versions up to 7. An unauthenticated attacker can remotely install programs, view, change, or delete data, or create new accounts with full user rights. This requires no user interaction and could therefore be exploited by a worm – this is why this vulnerability scores as critical.

### Update Instructions

Update all your IGEL Windows Embedded Standard 7 systems to version 3.13.140.

### Further Information

<https://portal.msrc.microsoft.com/en-US/security-guidance/advisory/CVE-2019-0708>



## ISN 2019-03: Zombieload, RIDL, Fallout

Announced 22 May 2019

Score: Low

A security issue affects Intel-based devices running the following IGEL software products:

- IGEL OS 11
- IGEL OS 10
- IGEL Windows 10 Enterprise IoT

### Details

Several vulnerabilities (CVE-2018-12126, CVE-2018-12130, CVE-2018-12127, CVE-2019-11091) affect the speculative execution features of Intel microprocessors. They can enable an attacker's code to read data from other parts of the processor, which by design should be inaccessible to it. In principle, this would allow stealing information from a different process, user or virtual machine.

However, IGEL operating systems do not run virtual machines, do not support multi-user operation and do only run preinstalled code from a read-only file system. Therefore, the impact on IGEL operating systems is low.

### Update Instructions

IGEL is preparing IGEL OS 11, IGEL OS 10 and IGEL W10 firmware versions with security fixes. This ISN will be updated to inform customers when these versions become available.

IGEL W10 4.04.100 (upcoming)

IGEL OS 10 10.06.100 (upcoming)

IGEL OS 11 11.02.100 (upcoming)



## ISN 2019-02: UMS Vulnerability

### Overview

Announced 24 April 2019

Score: High

A security issue affects Universal Management Suite (UMS) in the following versions:

- UMS 6.x
- UMS 5.x

### Details

An implementation bug in UMS user authentication allows an unauthenticated user to send commands to devices.

### Update Instructions

#### UMS 6.x

Update to UMS 6.01.130 or newer. For instructions, see [Updating UMS](#).

#### UMS 5.x

Update to UMS 5.09.140 or newer. For instructions, see [Updating UMS](#).



## ISN 2019-01: UMS Vulnerability

### Overview

Announced 28 March 2019

Severity: High

A security issue affects Universal Management Suite (UMS) in the following versions:

\* UMS 6.x

\* UMS 5.x

### Details

An implementation bug in endpoint authentication allows an endpoint to impersonate another endpoint when communicating with UMS.

IGEL would like to thank Timo Lindfors from Nixu Corporation who discovered and reported this.

### Update Instructions

UMS 6.x: Update to UMS 6.01.110 or newer.

UMS 5.x: Update to UMS 5.09.130 or newer.

To update your UMS installation, please follow these instructions: [Updating UMS](#)

## Product Security Archive

### UMS TLS Support

Notice from 2018-05-12

Since version 5.08.100, the UMS support TLS v1.2 only.

### Deprecation of Weak Algorithms

Notice from 2018-03-13

See SSH: Deprecation of Weak Algorithms as of IGEL Linux 10.04.100



### IGEL Meltdown and Spectre (2)

Notice from 2018-02-01

Security fixes available for [download](#)<sup>13</sup>

See [newsletter](#)<sup>14</sup>

### IGEL Meltdown and Spectre

Notice from 2018-01-18

Security fixes available for [download](#)<sup>15</sup>

See [newsletter](#)<sup>16</sup>

### KRACK Attacks

Notice from 2017-10-23

Security fixes available for [download](#)<sup>17</sup>

See [newsletter](#)<sup>18</sup>

---

13 <https://www.igel.com/software-downloads/>

14 [https://mailchi.mp/6ede7858d1c2/igel-technical-newsletter-january18\\_meltdown\\_spectre-1289945](https://mailchi.mp/6ede7858d1c2/igel-technical-newsletter-january18_meltdown_spectre-1289945)

15 <https://www.igel.com/software-downloads/>

16 [http://mailchi.mp/6d07867522c2/igel-technical-newsletter-january18\\_meltdown\\_spectre-1289889](http://mailchi.mp/6d07867522c2/igel-technical-newsletter-january18_meltdown_spectre-1289889)

17 <https://www.igel.com/software-downloads/>

18 <http://mailchi.mp/b68f2468dce3/igel-technical-newsletter-august-1289593>



## Reporting Vulnerabilities in IGEL Products

Are you a security researcher who has discovered a vulnerability in an IGEL product? Please contact [security@igel.com](mailto:security@igel.com)<sup>19</sup> to report it. A PGP/GPG key for confidential communication is available upon request.

IGEL customers are asked, however, to open a case on the [IGEL Customer Portal](#)<sup>20</sup>.

---

<sup>19</sup> <mailto:security@igel.com>

<sup>20</sup> <https://support.igel.com/>

## UEFI Secure Boot Enabling Guides

As of IGEL OS 10.04.100, and as of Microsoft Windows 10 IoT 4.03.100, UEFI Secure Boot has been introduced to IGEL devices.

For the devices listed below, activation of UEFI Secure Boot may be needed first; for instructions, click the appropriate link:

- [UD2-LX 40 \(see page 130\)](#)
- [UD3-LX 50 \(see page 138\)](#)
- [UD3-LX 51 \(see page 145\)](#)
- [UD6-LX 51 \(see page 153\)](#)
- [UD7-LX 10 \(see page 161\)](#)
  
- [UD3-W10 51 \(see page 167\)](#)
- [UD6-W10 51 \(see page 174\)](#)
- [UD7-W10 10 \(see page 181\)](#)



## IGEL OS

- [Enabling UEFI Secure Boot in UD2-LX 40 \(see page 130\)](#)
- [Enabling UEFI Secure Boot in UD2-LX 50/51 \(see page 137\)](#)
- [Enabling UEFI Secure Boot in UD3-LX 50 \(see page 138\)](#)
- [Enabling UEFI Secure Boot in UD3-LX 51 \(see page 145\)](#)
- [Enabling UEFI Secure Boot in UD3-LX 60 \(see page 152\)](#)
- [Enabling UEFI Secure Boot in UD6-LX 51 \(see page 153\)](#)
- [Enabling UEFI Secure Boot in UD7-LX 10 \(see page 161\)](#)
- [Enabling UEFI Secure Boot in UD7-LX 20 \(see page 165\)](#)

## Enabling UEFI Secure Boot in UD2-LX 40

### Prerequisites


- IGEL OS 10.04.100 or higher
- BIOS BayTrail.5.04.32.0022 or higher

**i** To check the BIOS version, open the InsydeH20 Setup Utility as described below (step 3). Press [F9] to open the **System Information** window. In the **System Information** window, check that the BIOS version corresponds to *BayTrail.5.04.32.0022* or higher.


**!** It is crucial to set a BIOS password to prevent users from disabling Secure Boot.

### Changing the Device's Boot Type to UEFI Boot


1. Turn on (or restart) the IGEL device.
2. During boot, hold the [F2] key until you see the menu shown below.
3. Using the arrow keys, move to the option **SCU** and press [ENTER]. This will open the InsydeH20 Setup Utility.

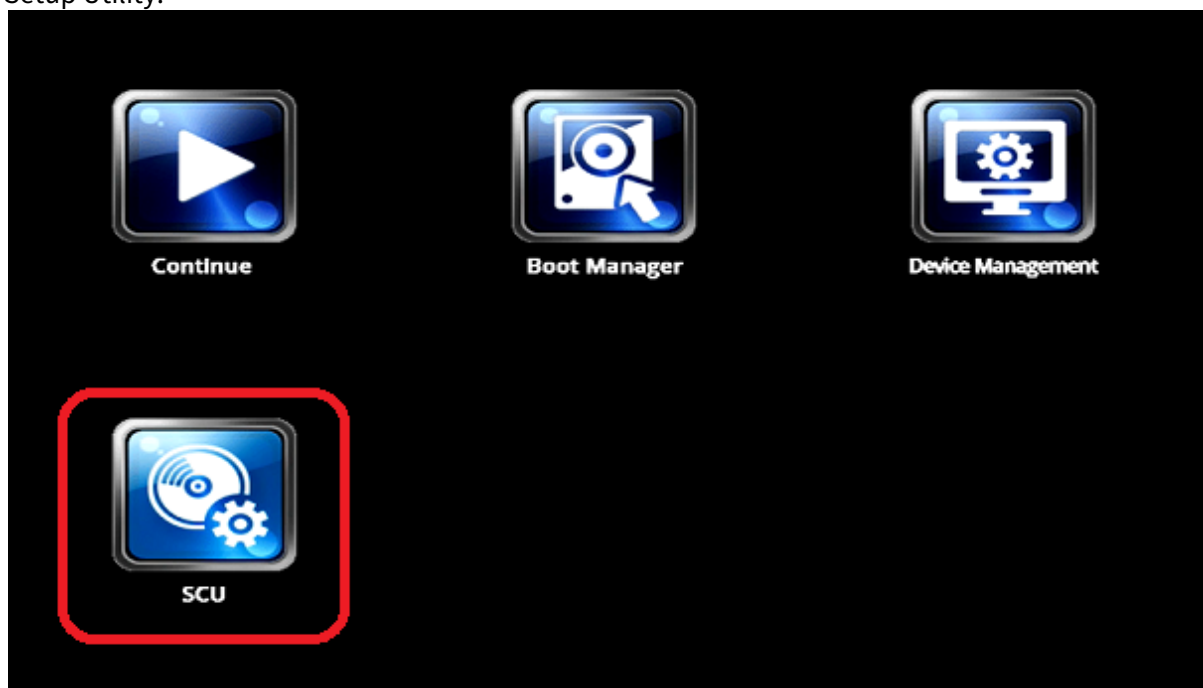


- Using the arrow keys, move to the **Boot** tab. You will find **Boot Type** set to **<Dual Boot Type>**.

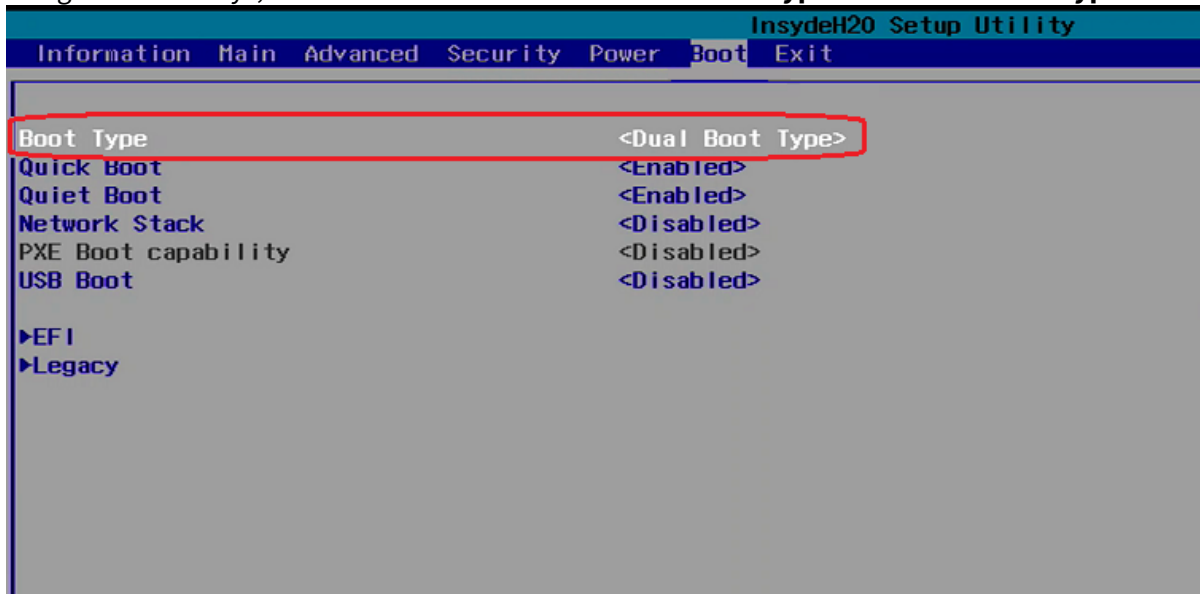


- Change **Boot Type** to **<UEFI Boot Type>**.

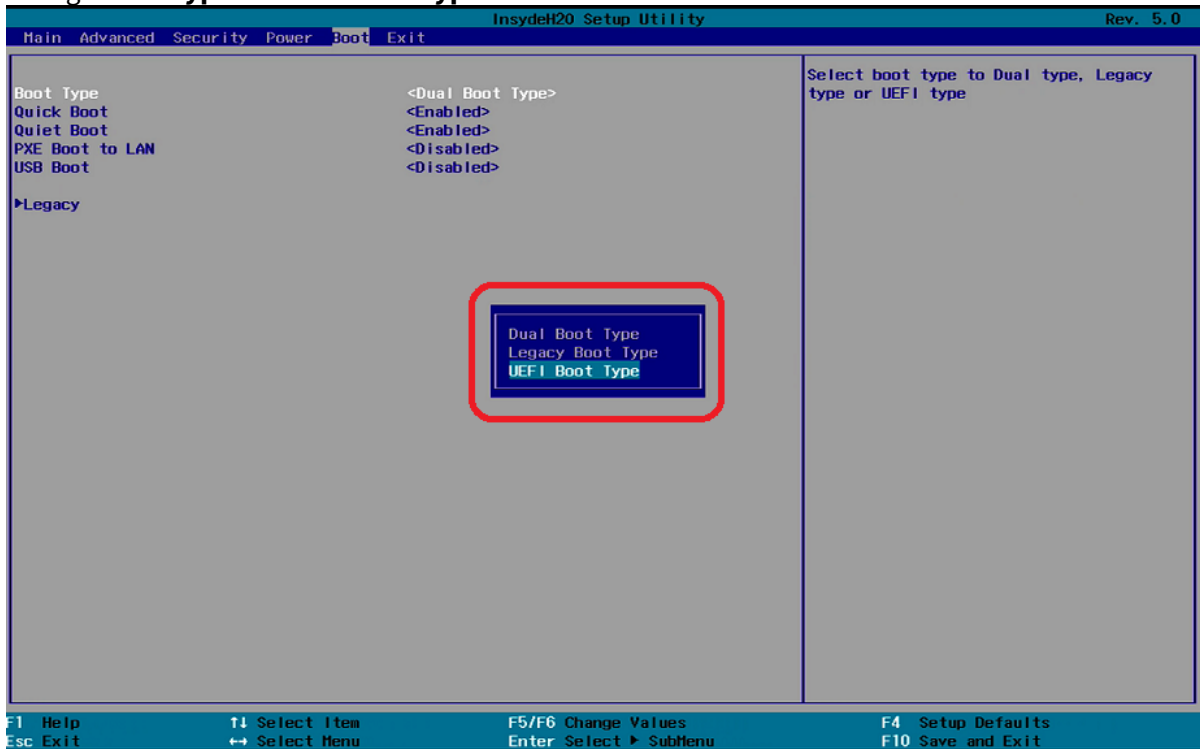

**Boot Type** is now set to **<UEFI Boot Type>**.

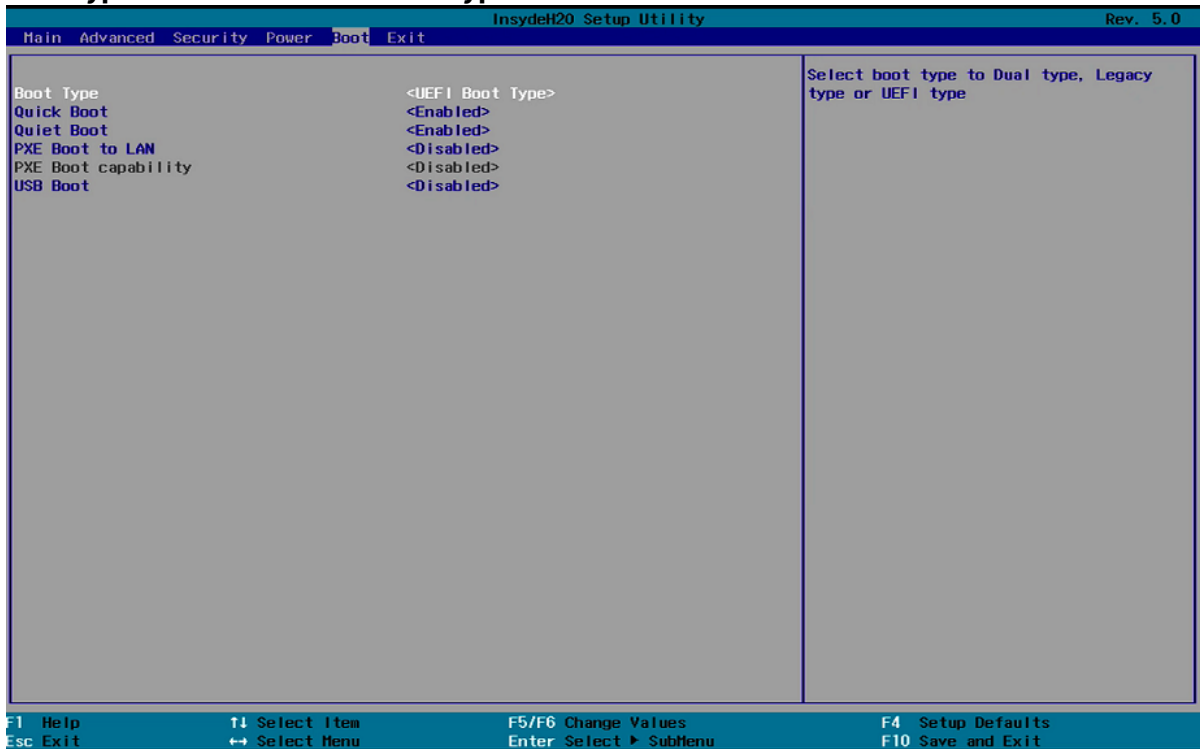


6. Save the changes. To do this, press [F10] and confirm "Exit Saving Changes?" with [Yes].

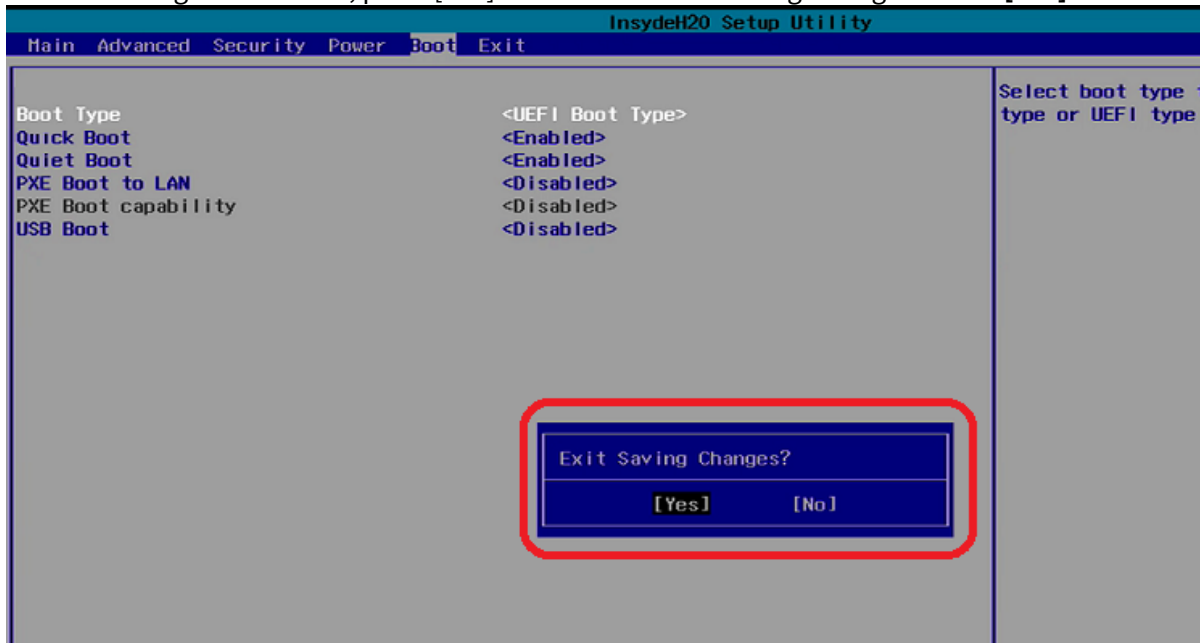


The settings are now saved and the device is rebooted.

### Activating the Secure Boot Feature

1. Turn on (or restart) the IGEL device.
2. During boot, hold the [F2] key until you see the menu shown below.
3. Using the arrow keys, navigate to the option **Secure Boot Option** and press [ENTER].  
The screen **Administer Secure Boot** will open.

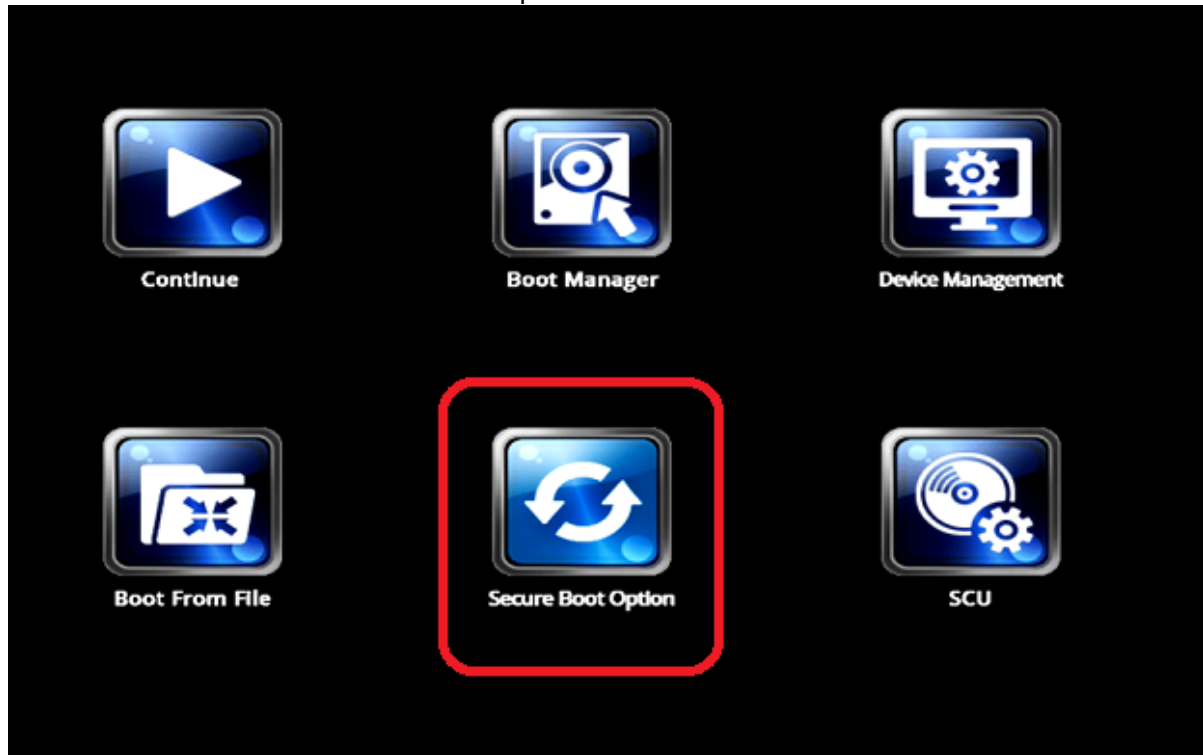


- In the screen **Administer Secure Boot**, you will find **"Erase all Secure Boot Settings"** and **"Restore Secure Boot to Factory Settings"** set to **<Disabled>**.

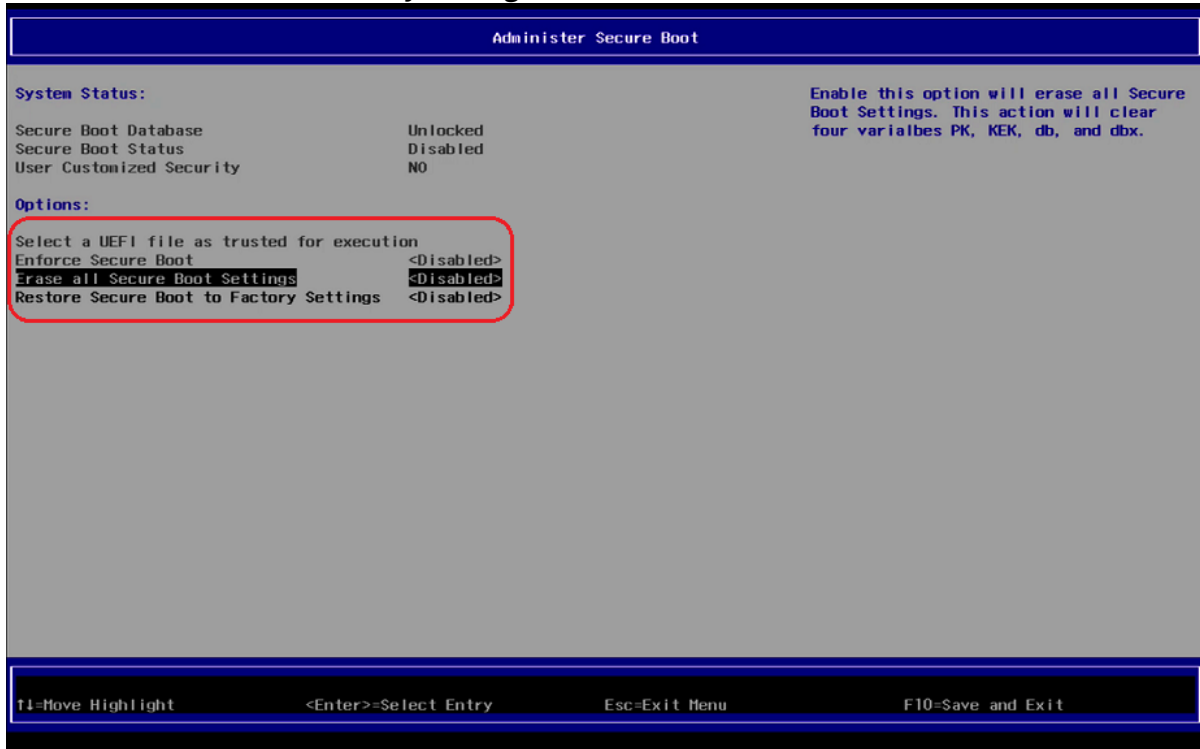


- Change **"Erase all Secure Boot Settings"** and **"Restore Secure Boot to Factory Settings"** to **<Enabled>**.

If **"Enforce Secure Boot"** is not grayed out as in the picture below, change that option to as well.

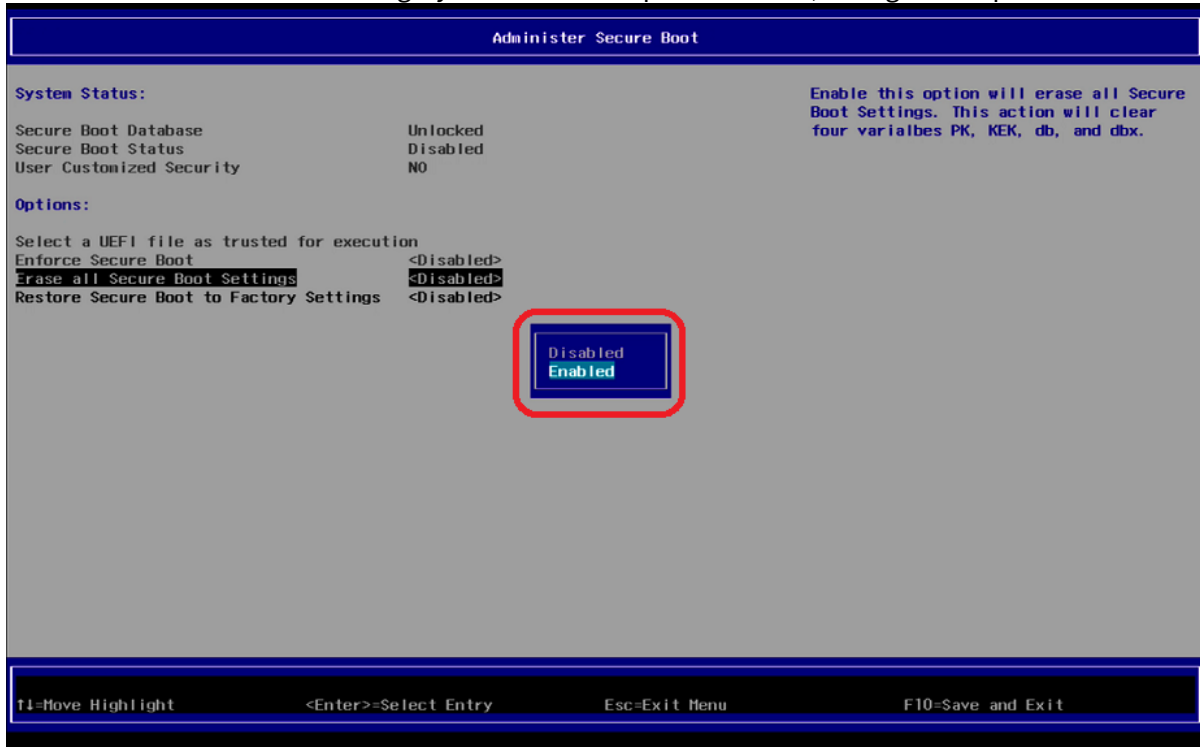

6. Save the changes. To do this, press [F10] and confirm **Exit Saving Changes?** with [Yes].

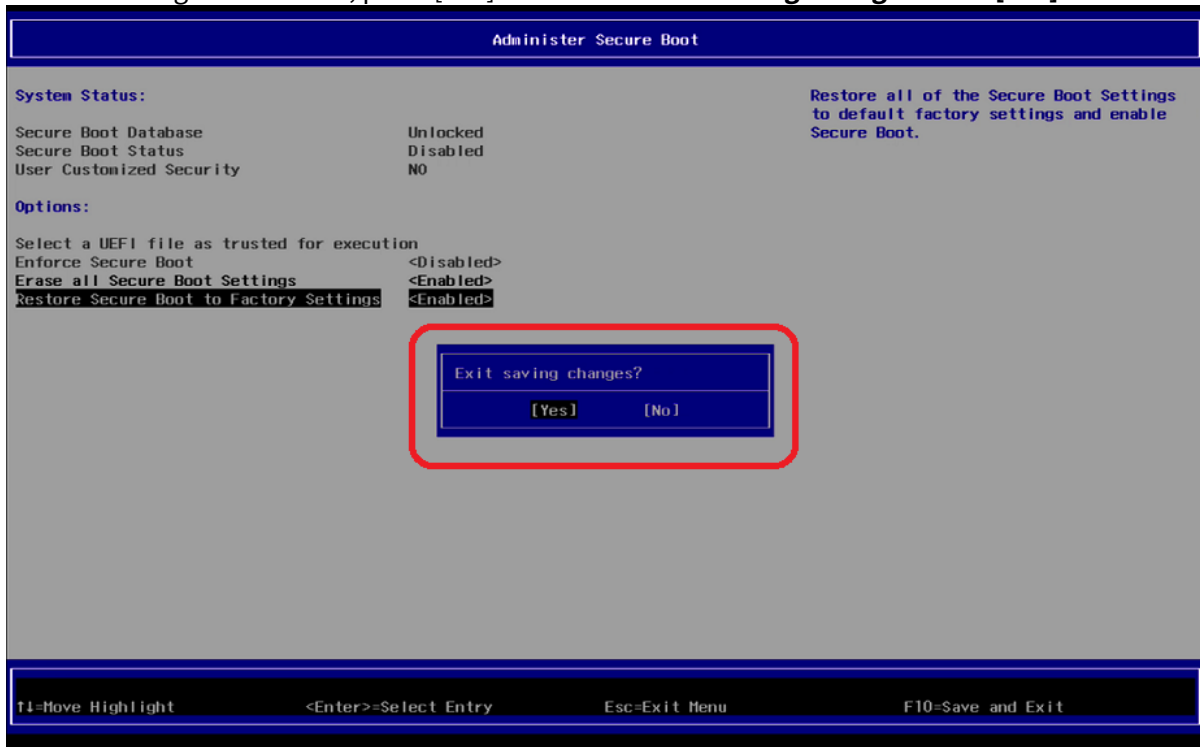


The changes are now saved and the device is rebooted.




7. As a last step, verify that Secure Boot is working, see [Verifying that UEFI Secure Boot is enabled](#).



## Enabling UEFI Secure Boot in UD2-LX 50/51

 UEFI Secure Boot is already a default setting in UD2-LX 50 and UD2-LX 51.

 If you have disabled secure boot, you will need to reverse the settings you made.

## Enabling UEFI Secure Boot in UD3-LX 50

### Prerequisites


- IGEL OS 10.04.100 or higher
- BIOS version 3.A. 13-11202017 or higher

**i** To check the BIOS version, open the InsydeH20 Setup Utility as described below (step 3). Press [F9] to open the **System Information** window. In the **System Information** window, check that the BIOS version corresponds to *3.A. 13-11202017* or higher.


**!** It is crucial to set a BIOS password to prevent users from disabling Secure Boot.

### Changing the Device's Boot Type to UEFI Boot


1. Turn on (or restart) the IGEL device.
2. During boot, hold the [DEL] key until you see the menu shown below.
3. Using the arrow keys, navigate to the option **SCU** and press [ENTER]. This will open the InsydeH20 Setup Utility.

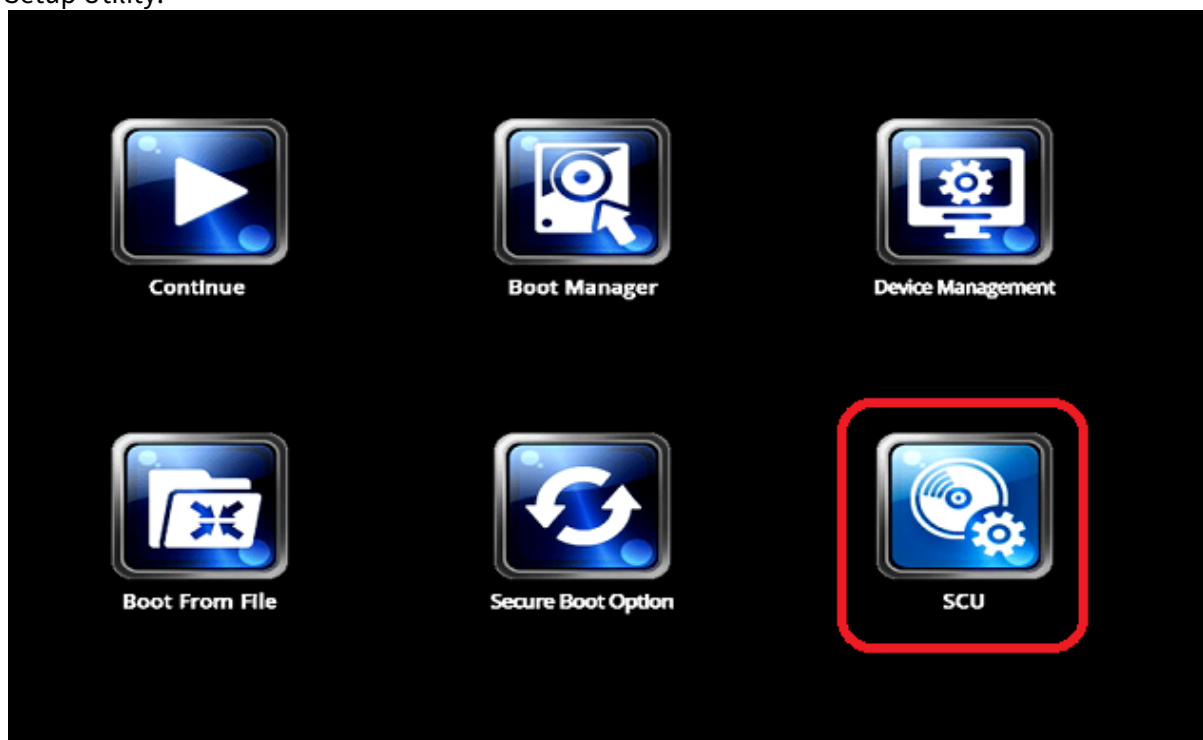


- 4. Using the arrow keys, move to the tab **Boot**. You will find **Boot Type** set to **<Dual Boot Type>**.

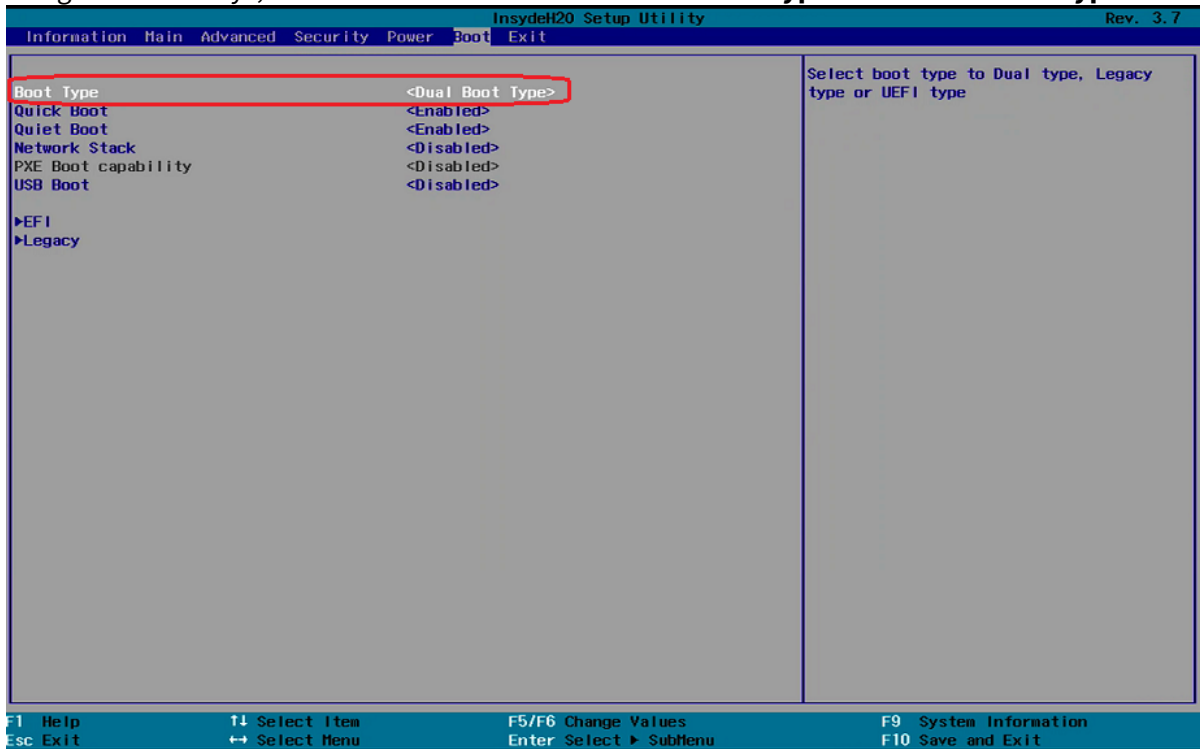

- 5. Change **Boot Type** to **<UEFI Boot Type>**.

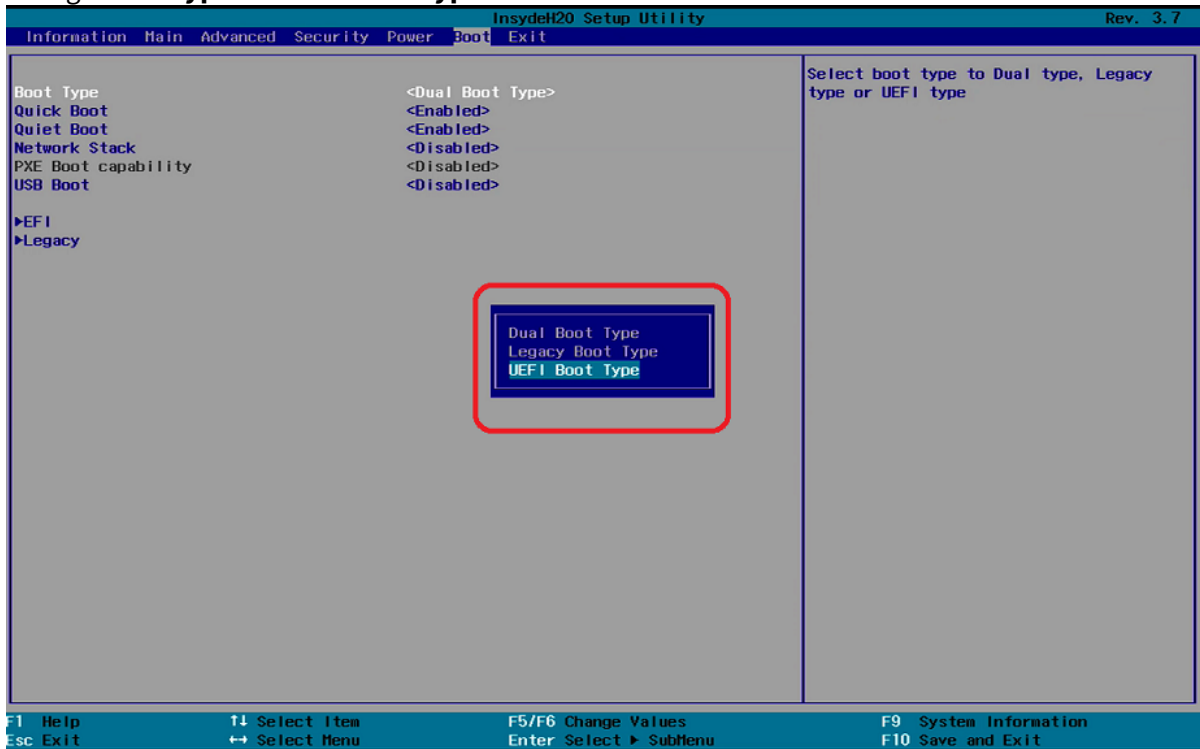

6. Save the changes. To do this, press [F10] and confirm **Exit Saving Changes?** with [Yes].

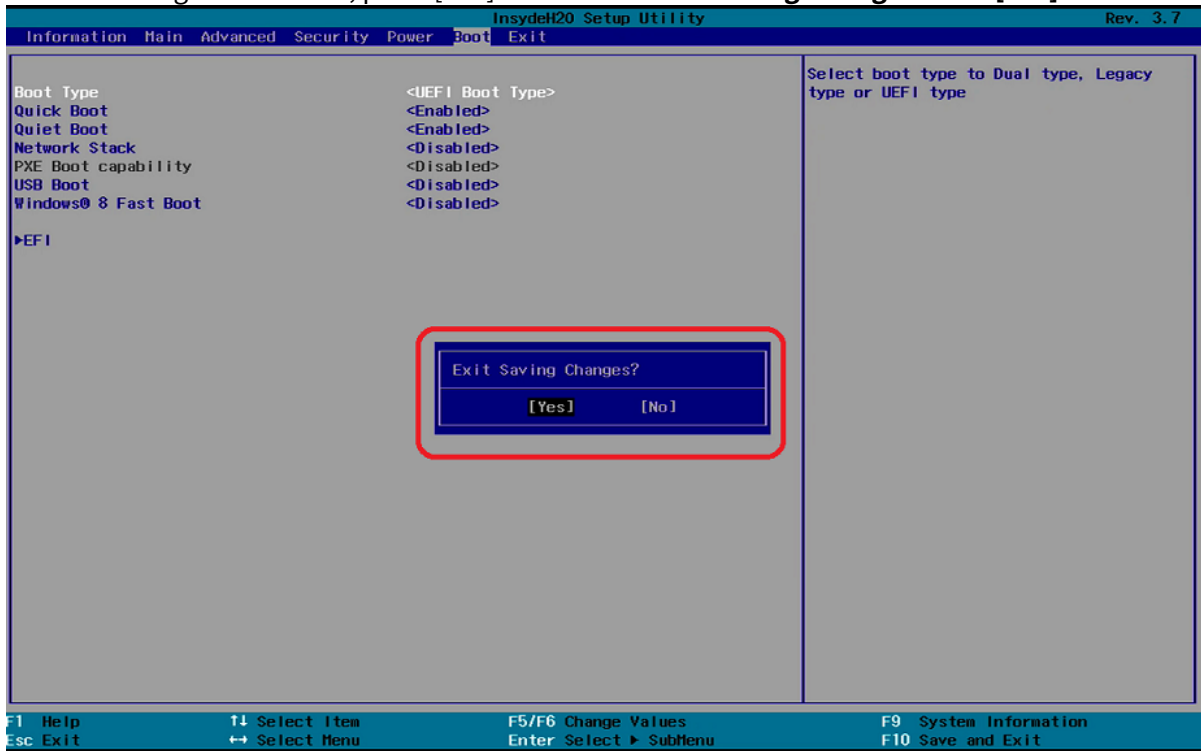


The changes will be saved and the device will be rebooted.


### Activating the Secure Boot Feature

1. Turn on (or restart) the IGEL device.

- Using the arrow keys, move to **Secure Boot Option** and press [ENTER]. The BIOS screen **Administer Secure Boot** will open.

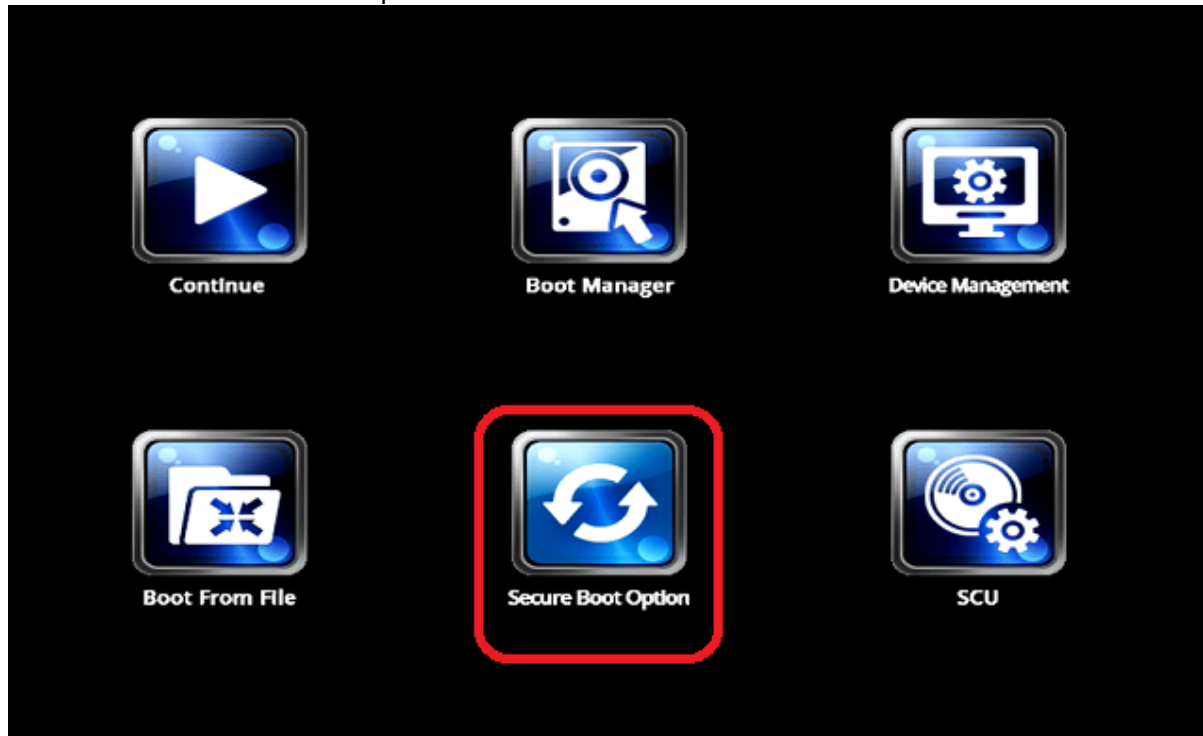


- In the screen **Administer Secure Boot**, you will find **"Erase all Secure Boot Settings"** and **"Restore Secure Boot to Factory Settings"** set to **<Disabled>**.

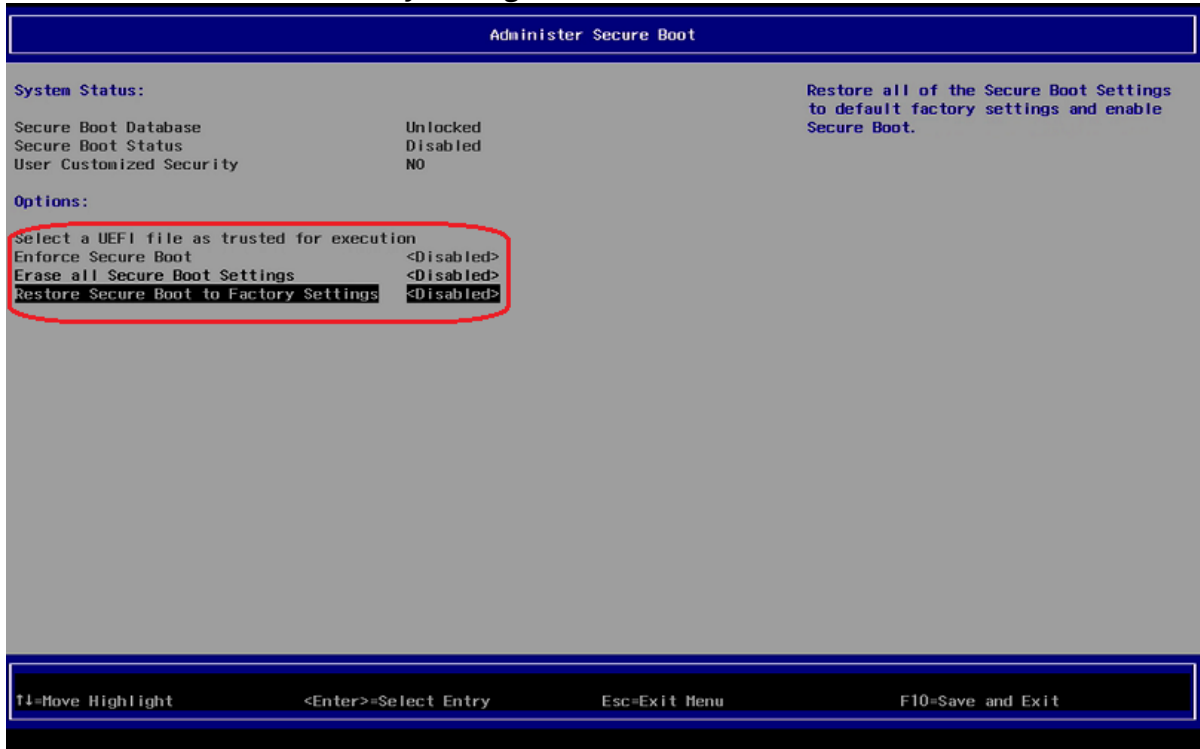


- Change **"Erase all Secure Boot Settings"** and **"Restore Secure Boot to Factory Settings"** to **<Enabled>**.

If **"Enforce Secure Boot"** is not grayed out as in the picture below, change that option to as well.

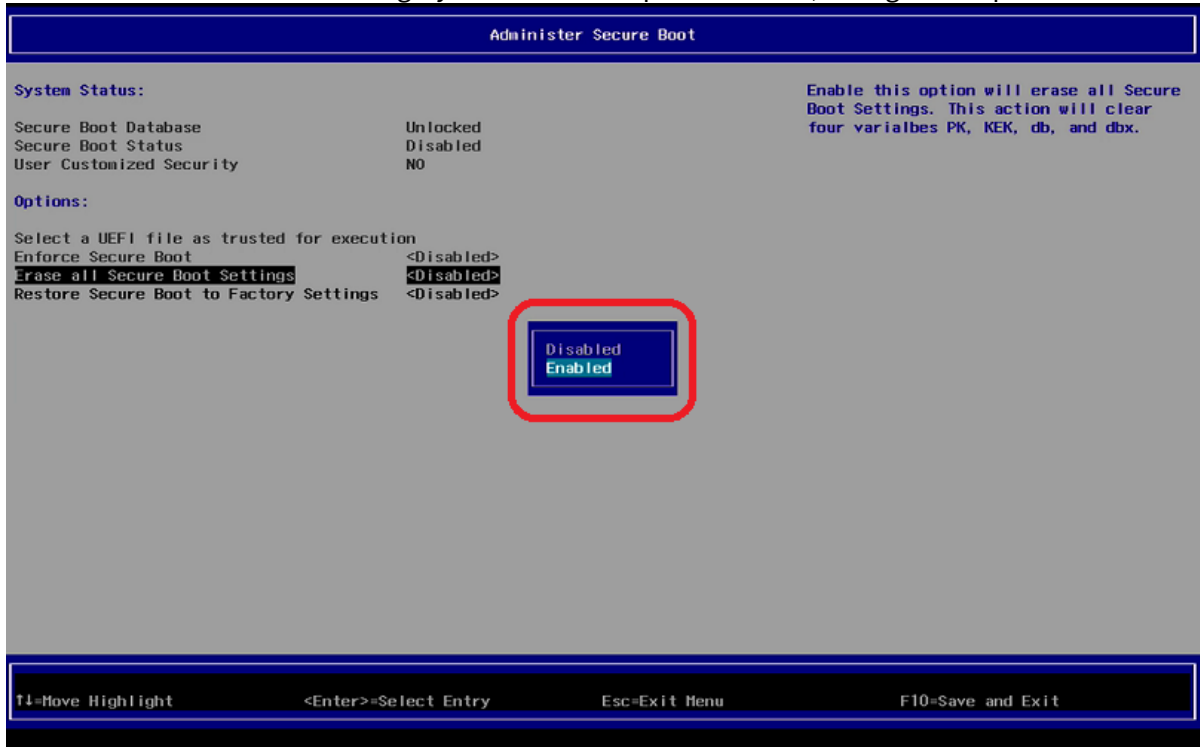

5. Save the changes. To do this, press F10 and confirm **Exist Saving Changes?** with **[Yes]**.

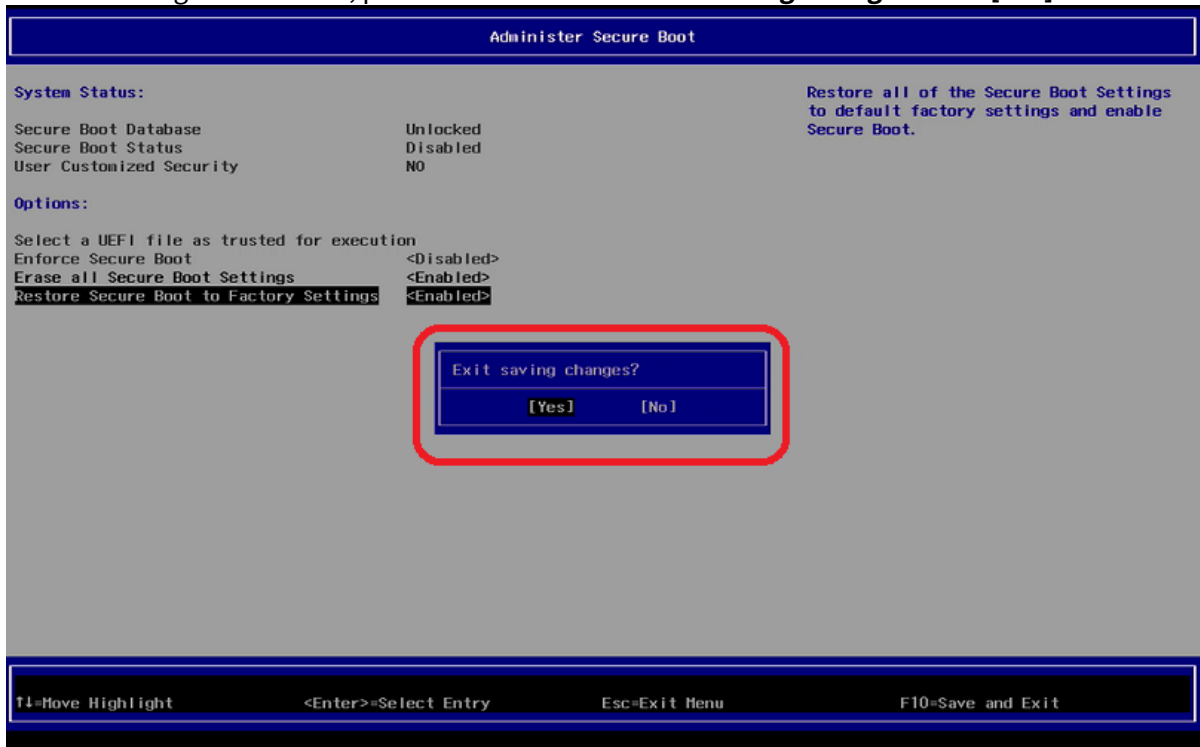

The changes will be saved and the device will be rebooted.



6. As a last step, verify that Secure Boot is working, see [Verifying that UEFI Secure Boot is enabled](#).



## Enabling UEFI Secure Boot in UD3-LX 51

### Prerequisites


- IGEL OS 10.04.100 or higher
- BIOS version 3.A. 13-11202017 or higher

**i** To check the BIOS version, open the InsydeH20 Setup Utility as described below (step 3). Press [F9] to open the **System Information** window. In the **System Information** window, check that the BIOS version corresponds to *3.A. 13-11202017* or higher.


**!** It is crucial to set a BIOS password to prevent users from disabling Secure Boot.

### Changing the Device's Boot Type to UEFI Boot


1. Turn on (or restart) the IGEL device.
2. During boot, hold the [DEL] key until you see the menu shown below.
3. Using the arrow keys, navigate to the option **SCU** and press [ENTER]. This will open the InsydeH20 Setup Utility.

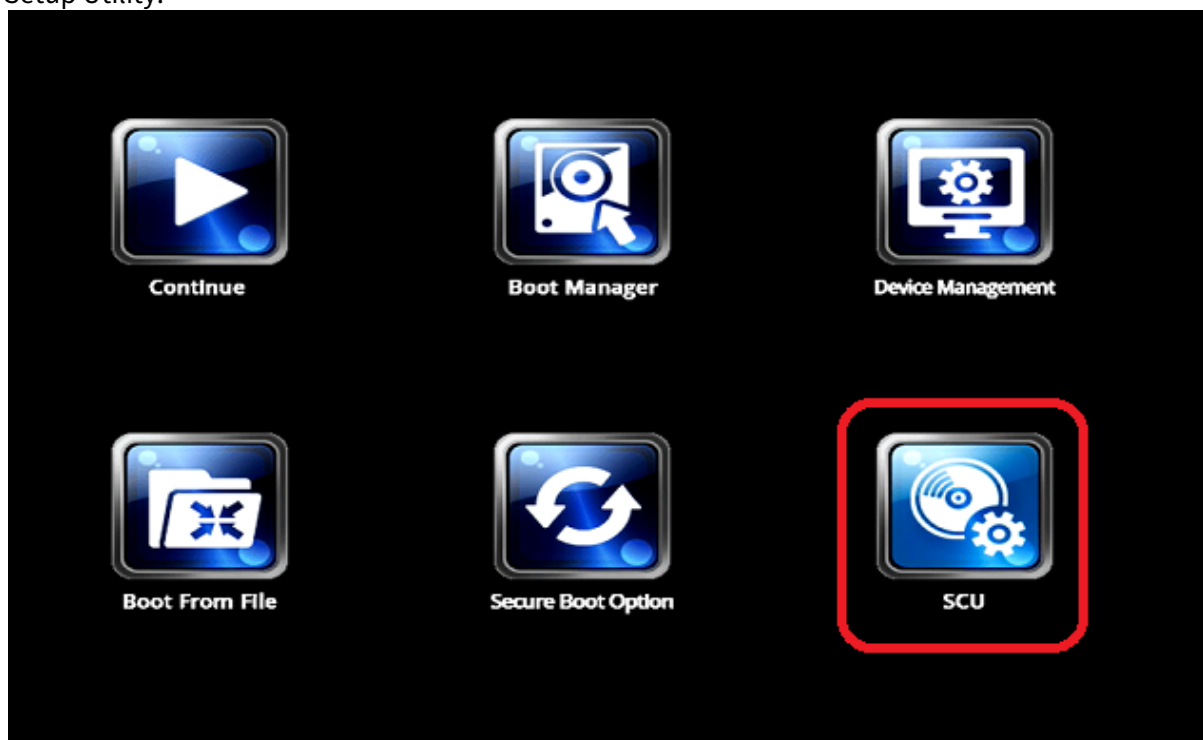


- Using the arrow keys, move to the tab **Boot**. You will find **Boot Type** set to **<Dual Boot Type>**.

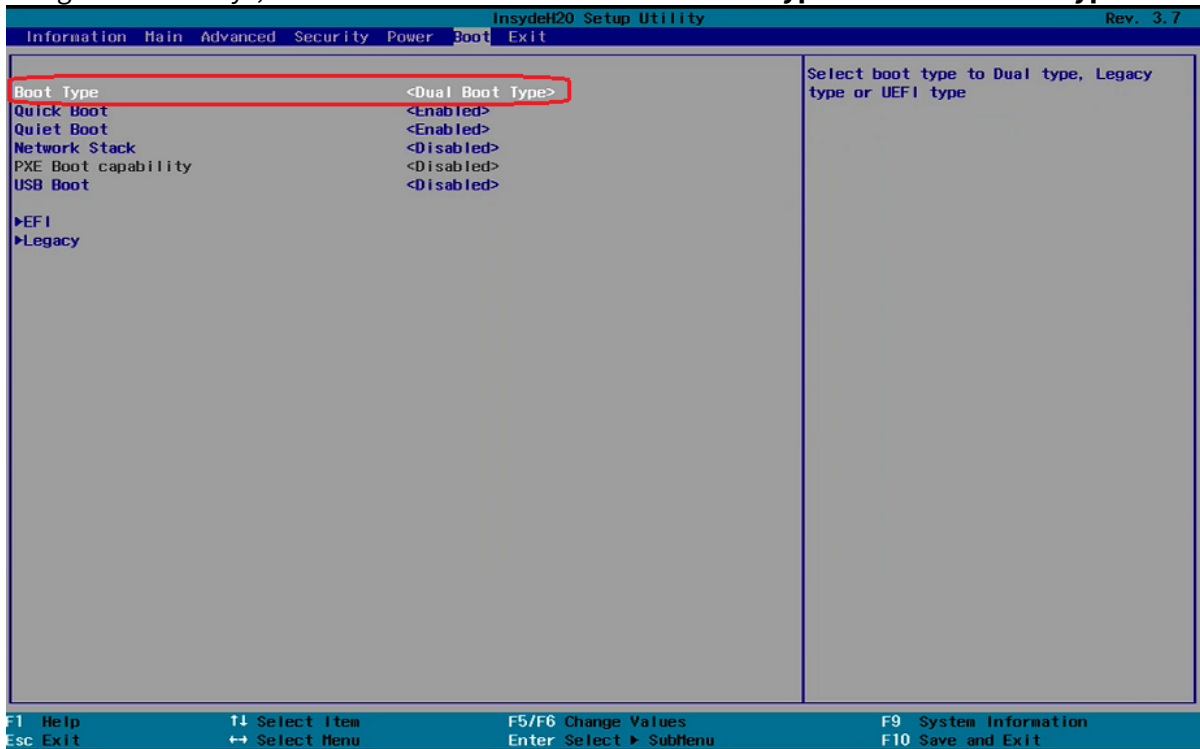

- Change **Boot Type** to **<UEFI Boot Type>**.

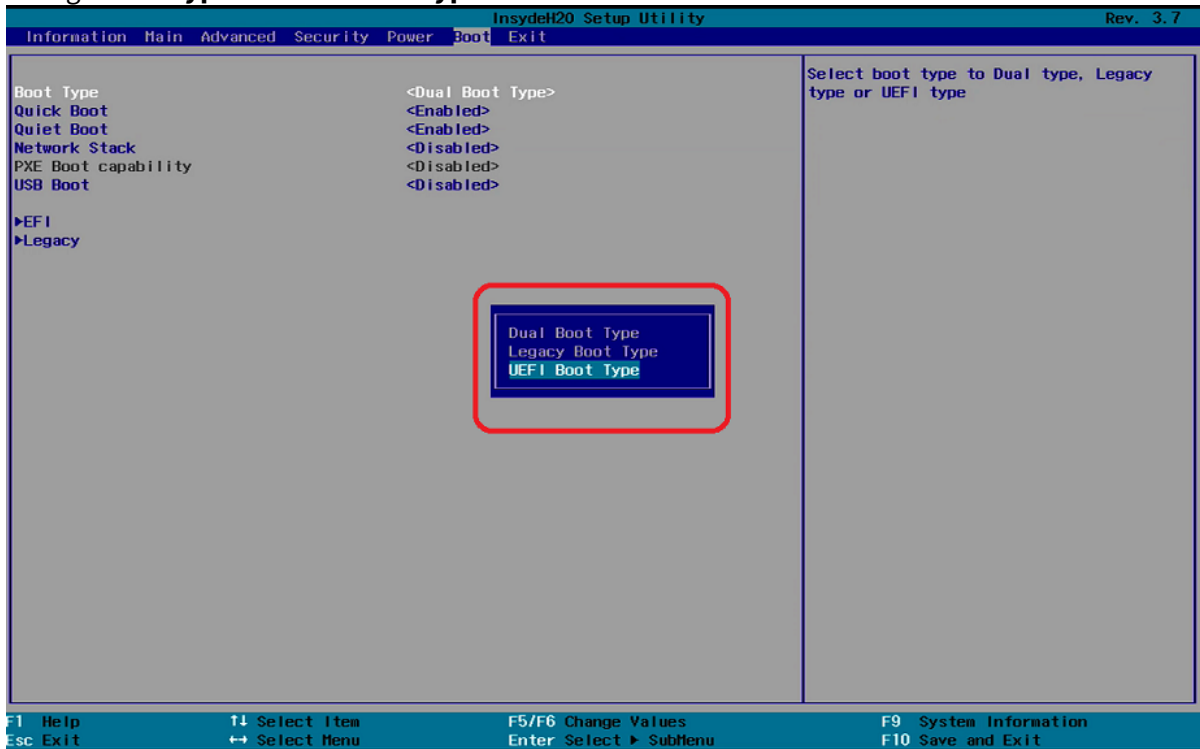

6. Save the changes. To do this, press [F10] and confirm **Exit Saving Changes?** with [Yes].

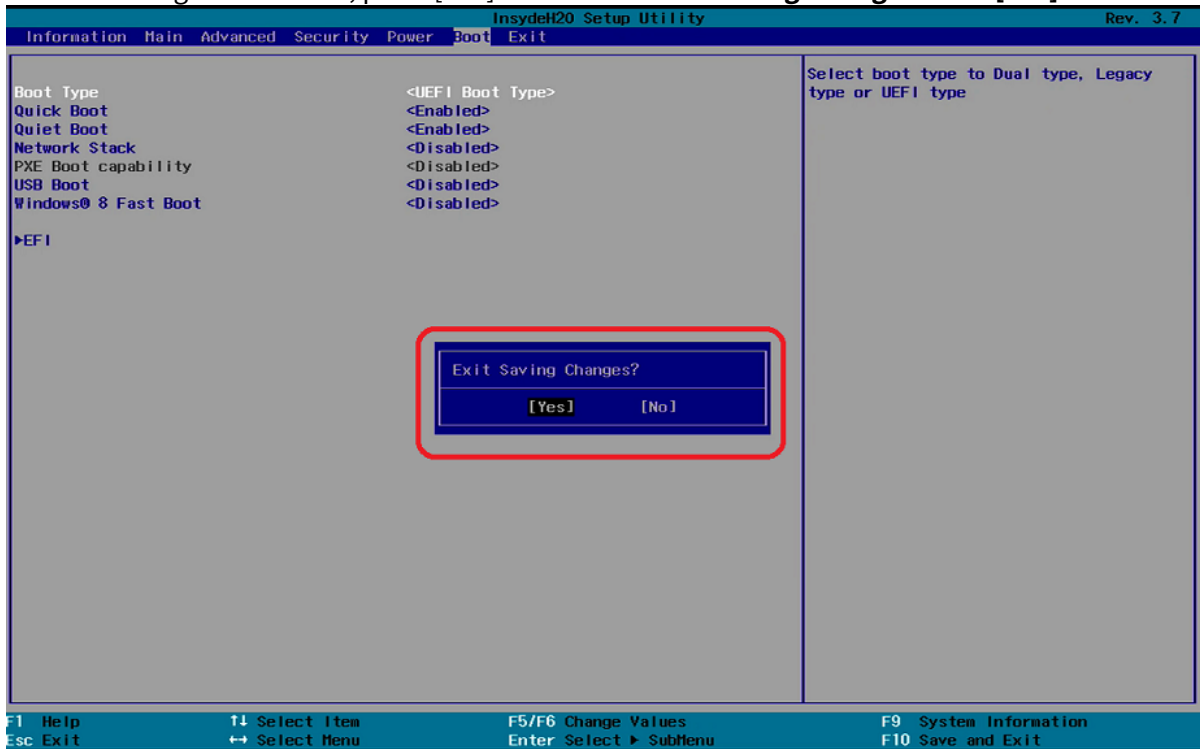


The changes will be saved and the device will be rebooted.


### Activating the Secure Boot Feature

1. Turn on (or restart) the IGEL device.

- Using the arrow keys, move to **Secure Boot Option** and press [ENTER]. The BIOS screen **Administer Secure Boot** will open.

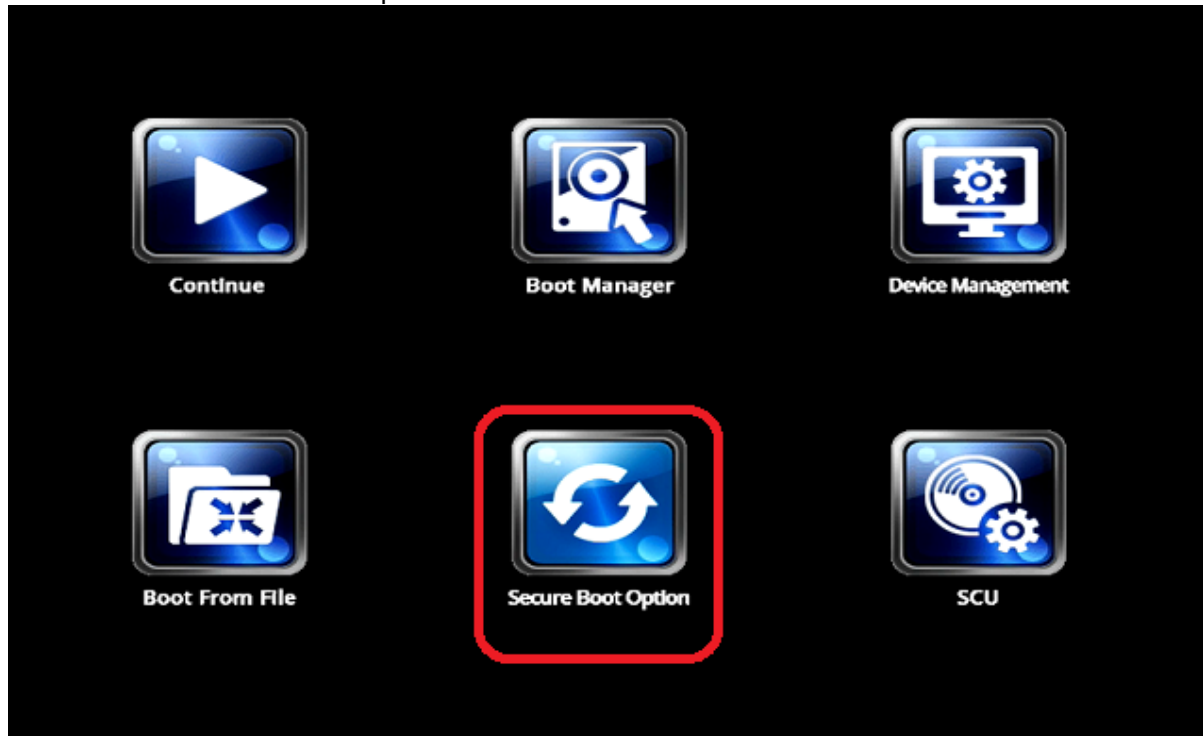


- In the screen **Administer Secure Boot**, you will find **"Erase all Secure Boot Settings"** and **"Restore Secure Boot to Factory Settings"** set to **<Disabled>**.

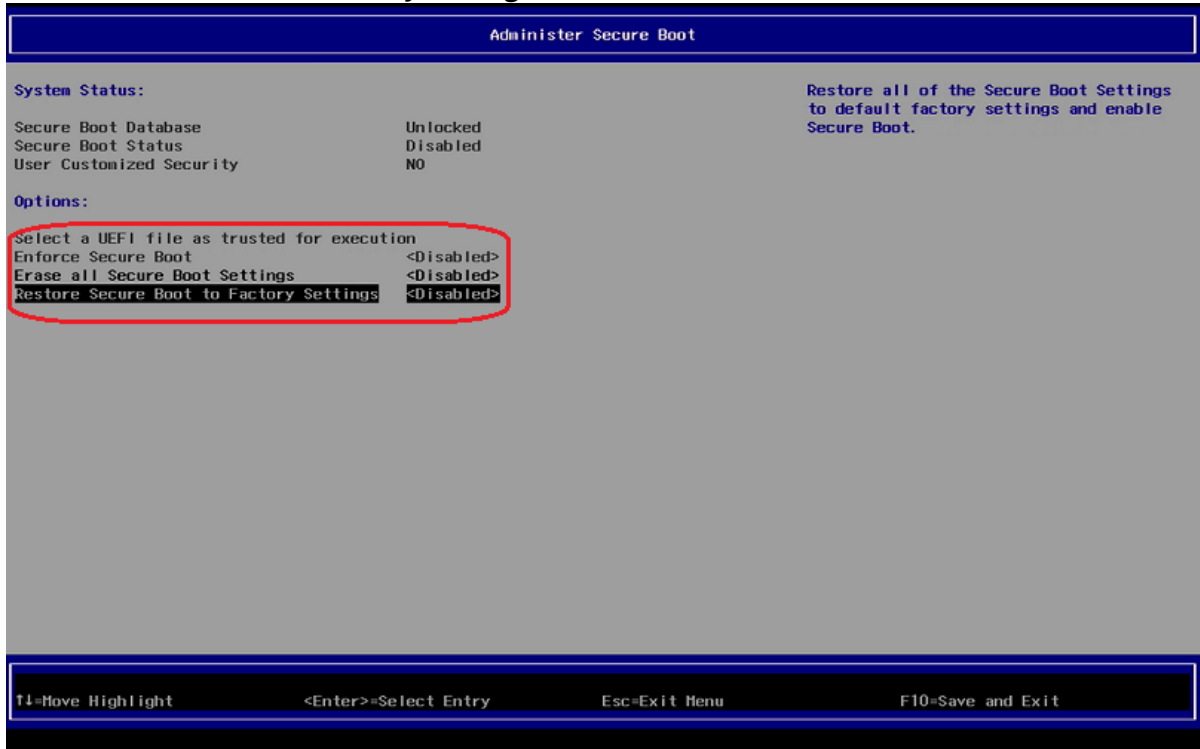


- Change **"Erase all Secure Boot Settings"** and **"Restore Secure Boot to Factory Settings"** to **<Enabled>**.

If **"Enforce Secure Boot"** is not grayed out as in the picture below, change that option to as well.

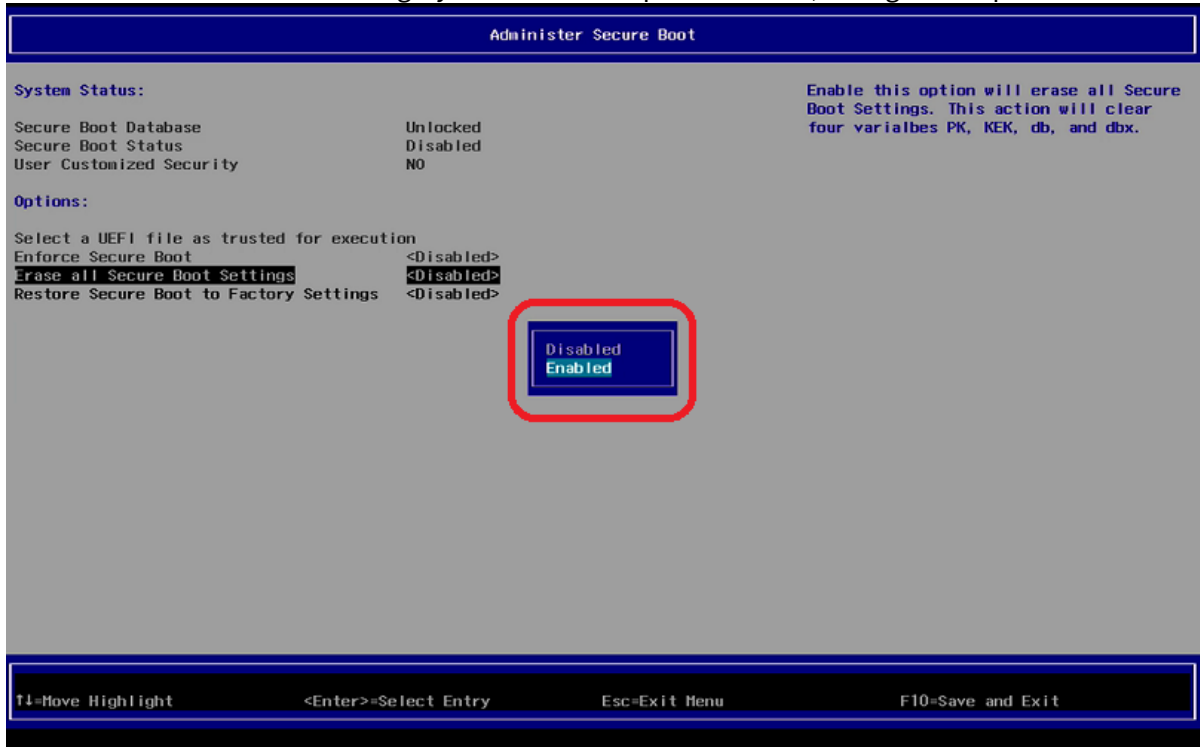

5. Save the changes. To do this, press F10 and confirm **Exist Saving Changes?** with **[Yes]**.

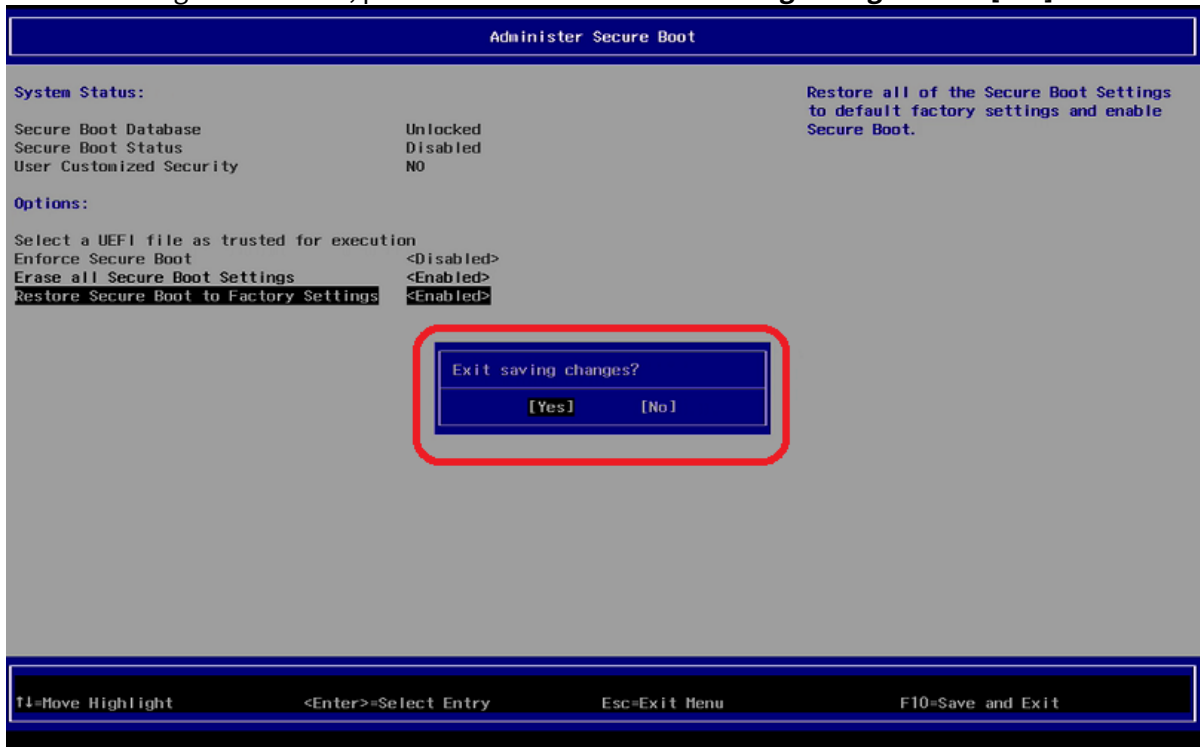


The changes will be saved and the device will be rebooted.




6. As a last step, verify that Secure Boot is working, see [Verifying that UEFI Secure Boot is enabled](#).



## Enabling UEFI Secure Boot in UD3-LX 60

 UEFI Secure Boot is already a default setting in UD3-LX 60.


 If you have disabled secure boot, you will need to reverse the settings you made.




## Enabling UEFI Secure Boot in UD6-LX 51

### Prerequisites

- IGEL OS 10.04.100 or higher

 The version of IGEL OS can be found in the About window.

- BIOS version 3.9. 13-02202017 or higher


 To check the BIOS version, open the InsydeH20 Setup Utility as described below (step 3). Press [F9] to open the **System Information** window. In the **System Information** window, check that the BIOS version corresponds to *3.9. 13-02202017* or newer.

 **It is crucial to set a BIOS password to prevent users from disabling Secure Boot.**


### Changing the Device's Boot Type to UEFI Boot

1. Turn on (or restart) the IGEL device.
2. During boot, hold the [DEL] key until you see the menu shown below.


- Using the arrow keys, navigate to the option **SCU** and press [ENTER]. This will open the InsydeH20 Setup Utility.

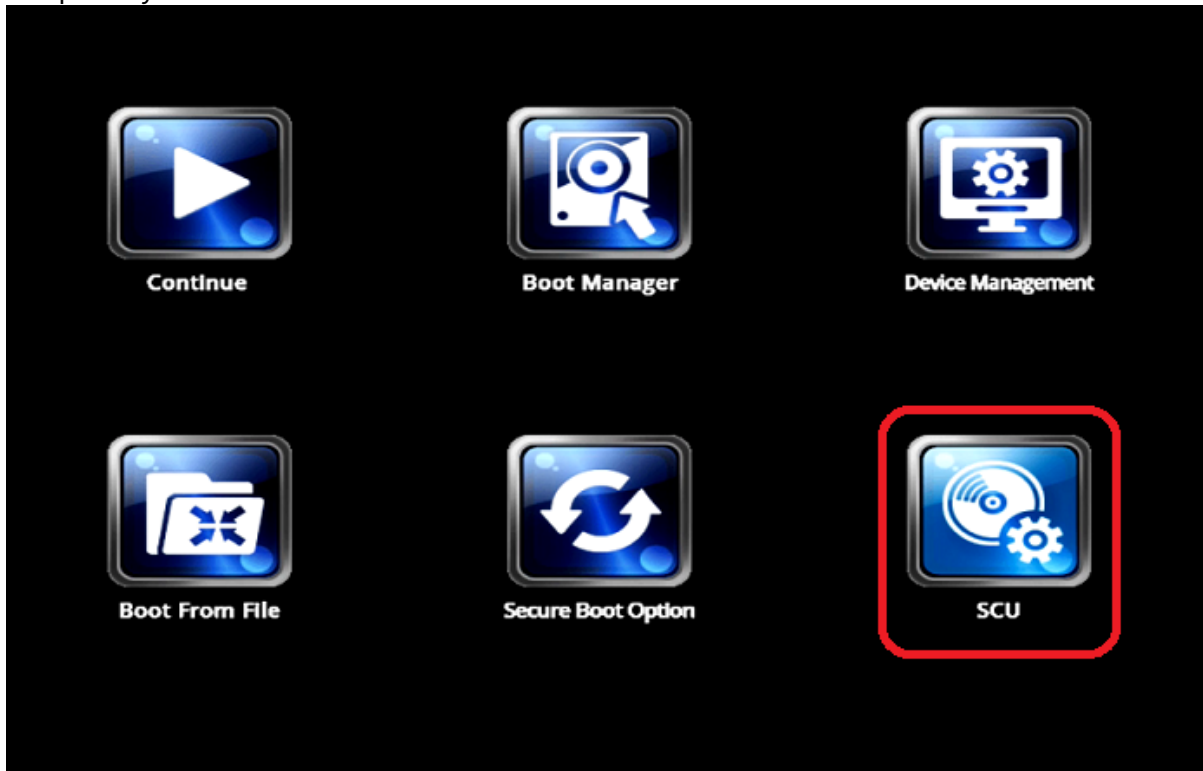


- Using the arrow keys, move to the **Boot** tab. You will find **Boot Type** set to **<Dual Boot Type>**.

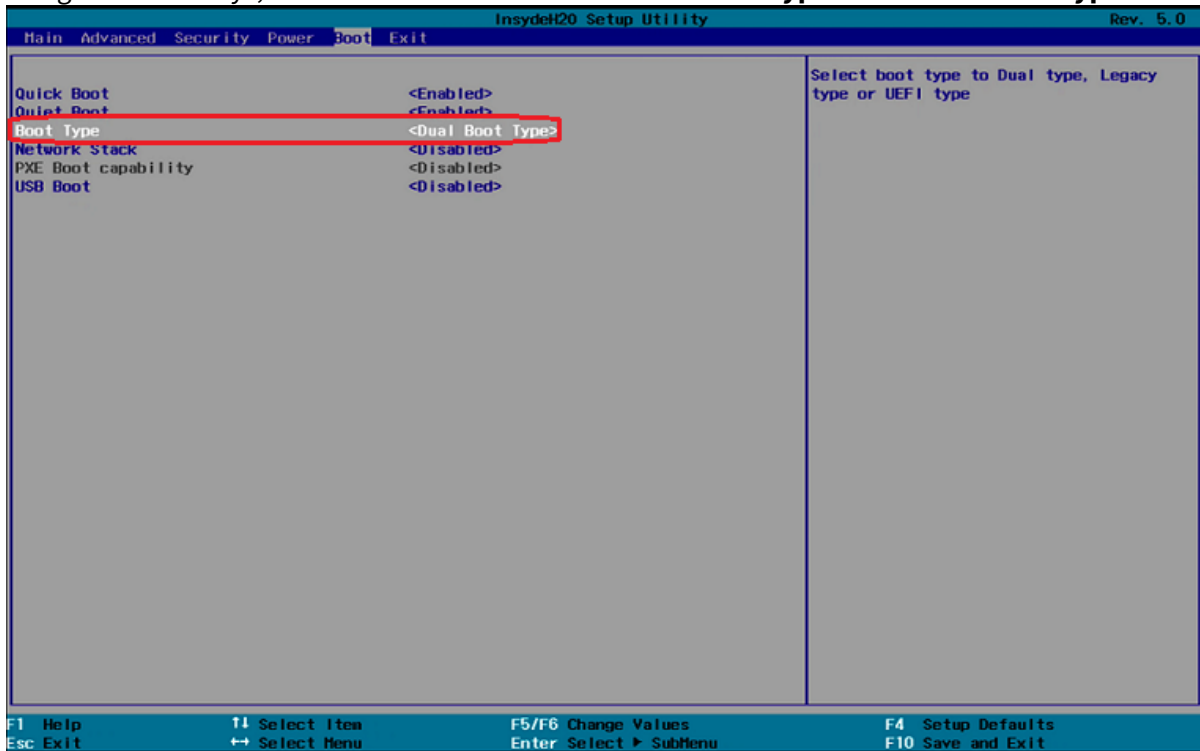

- Change **Boot Type** to **<UEFI Boot Type>**.

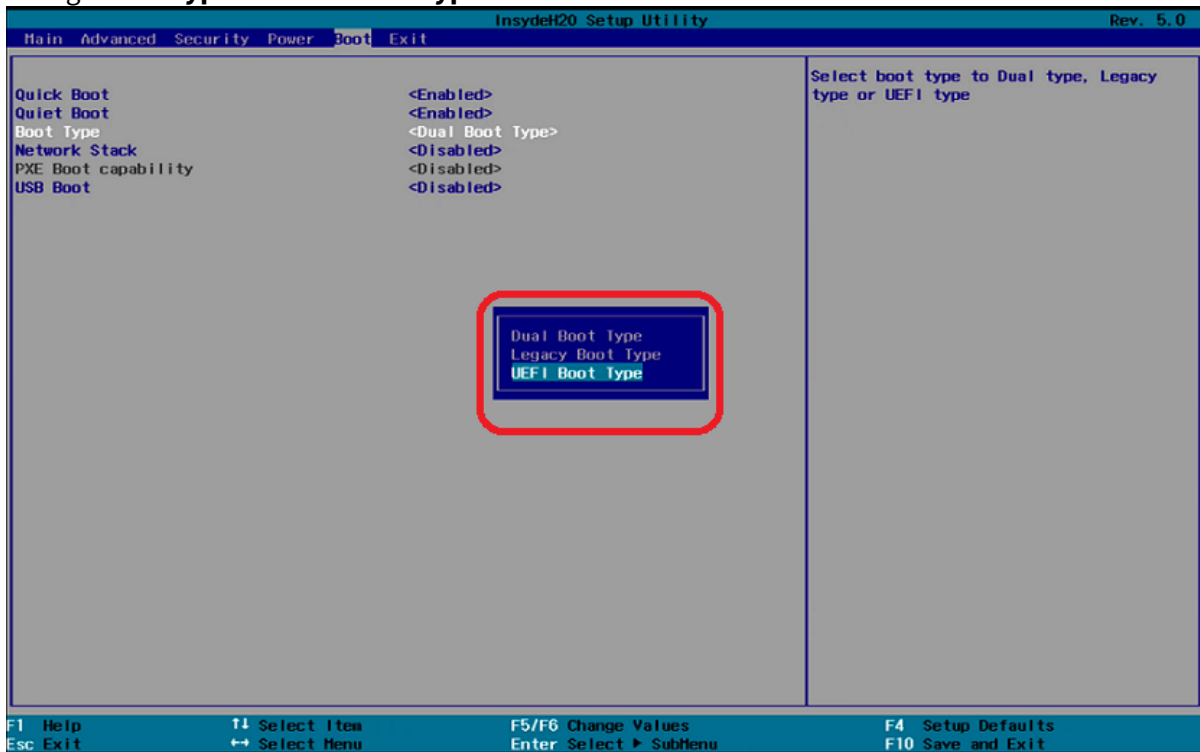

- Save the changes. To do this, press [F10] and confirm **Exit Saving Changes?** with [Yes].

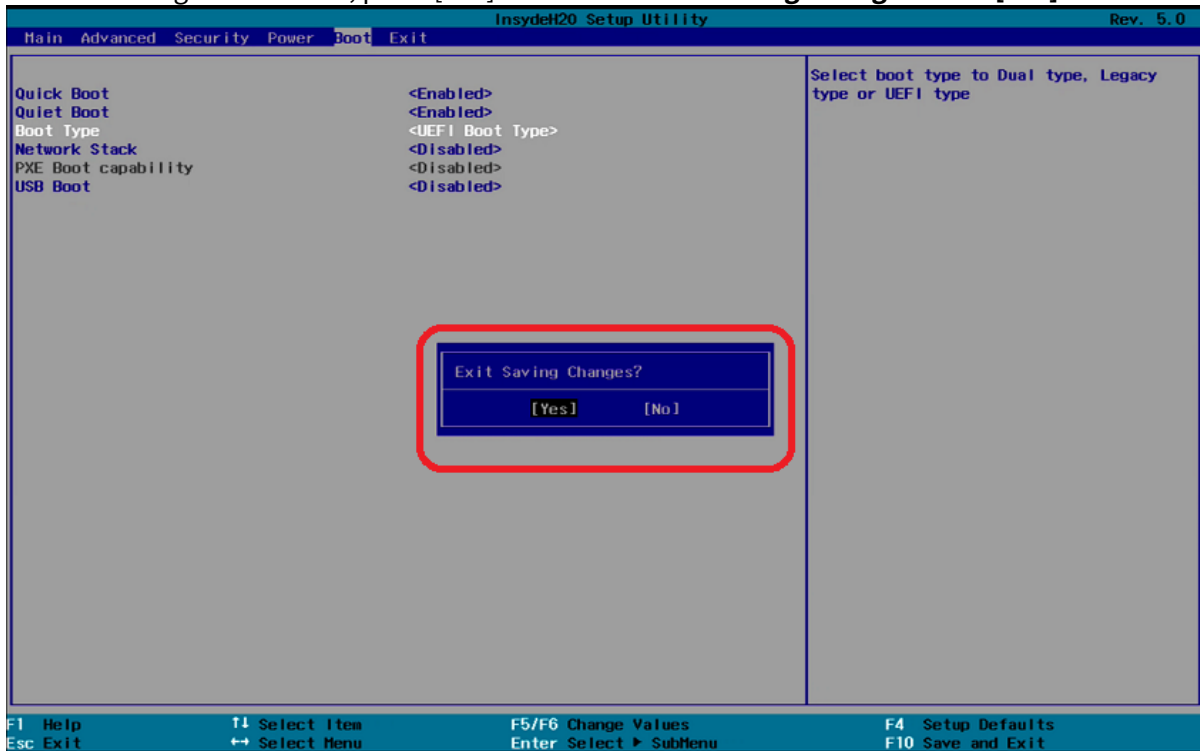


The changes will be saved and the device will be rebooted.


### Activating the Secure Boot Feature

- Turn on (or restart) the device.
- During boot, hold the [DEL] key until you see the screen shown below.


- Using the arrow keys, move to the option **Secure Boot Option**, and press [ENTER]. This will open the the screen **Administer Secure Boot**.

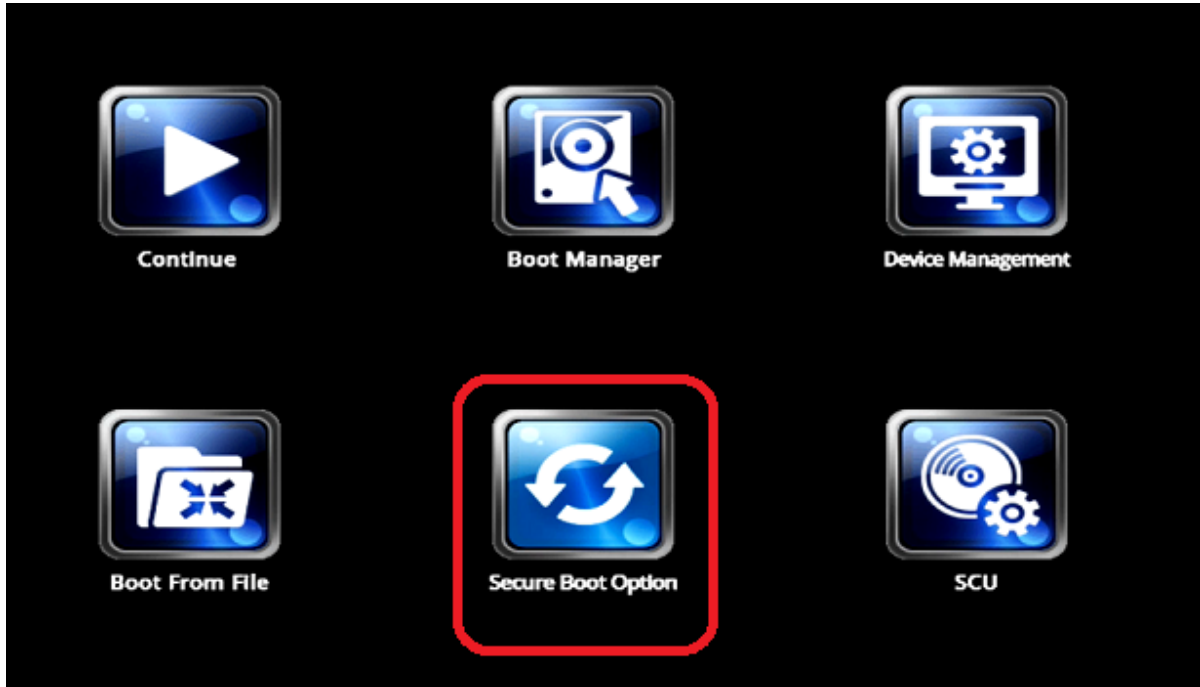

- In the screen **Administer Secure Boot**, you will find "Erase all Secure Boot Settings" and "Restore Secure Boot to Factory Settings" set to <Disabled>.

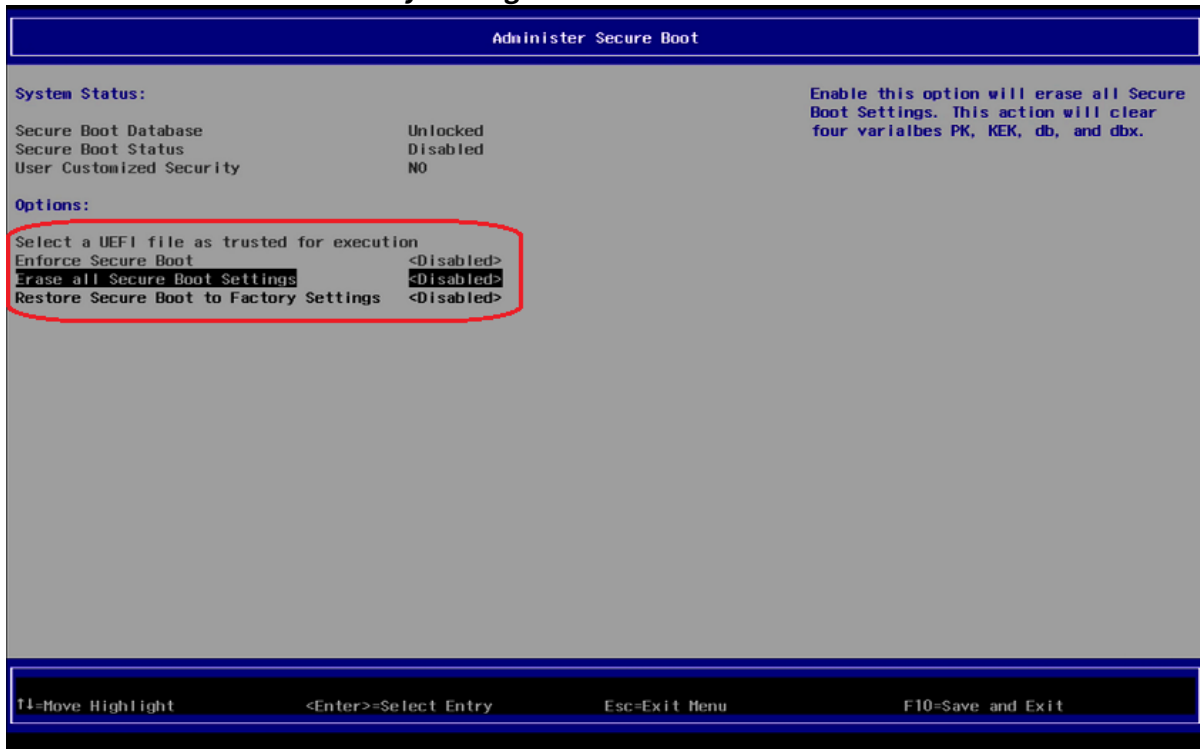


- In the screen **Administer Secure Boot**, set **"Erase all Secure Boot Settings"** and **"Restore Secure Boot to Factory Settings"** to **<Enabled>**.

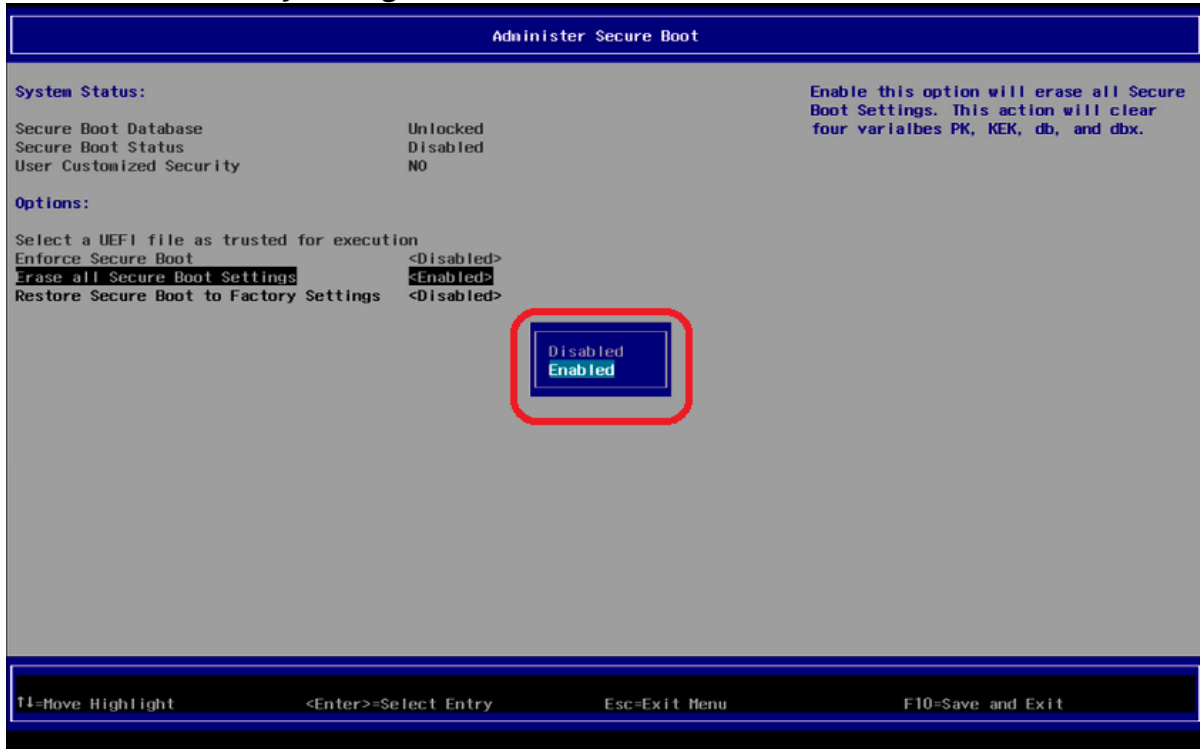


- "Erase all Secure Boot Settings"** and **"Restore Secure Boot to Factory Settings"** are now set to **<Enabled>**.

If **"Enforce Secure Boot"** is not grayed out as in the picture below, change that option to as well.

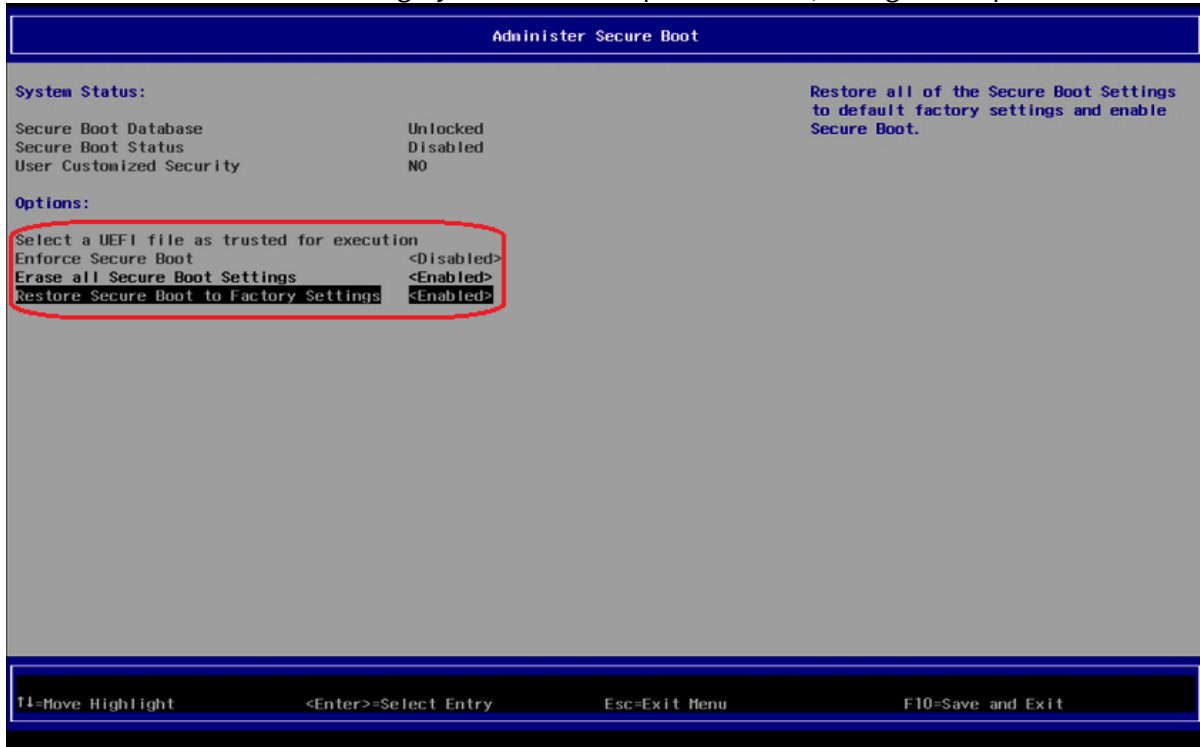

7. Save the changes. To do this, press [F10] and confirm **Exit Saving Changes?** with [Yes].

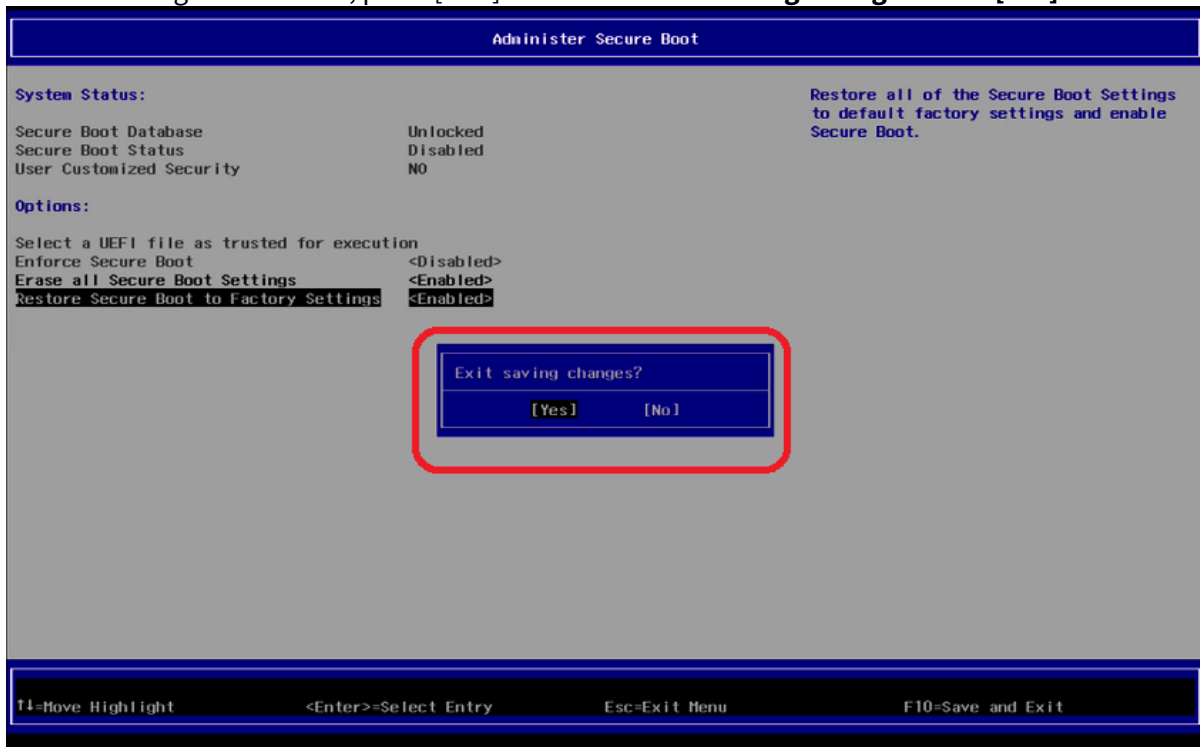

The changes will be saved and the device will be rebooted.




8. As a last step, verify that Secure Boot is working, see [Verifying that UEFI Secure Boot is enabled](#).




## Enabling UEFI Secure Boot in UD7-LX 10

### Prerequisites

- IGEL OS 10.04.100 or higher


 The version of IGEL Linux can be found in the **About** window.

 UD7-LX 10 supports UEFI Secure Boot by default and no BIOS update is necessary.


 **It is crucial to set a BIOS password to prevent users from disabling Secure Boot.**

### Activating the Secure Boot Feature

1. Turn on (or restart) the IGEL device.
2. During boot, hold the [DEL] key until you see the **Front Page** screen shown below.

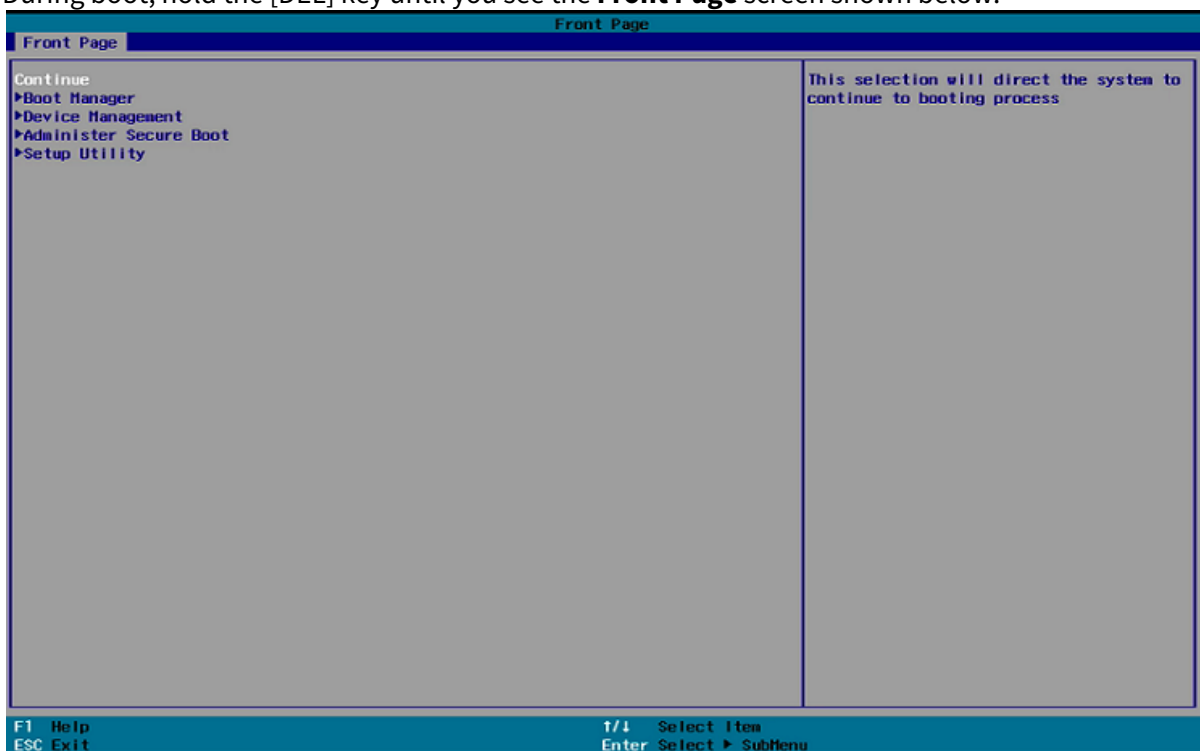


- In the **Administer Secure Boot** screen, you will find **"Erase all Secure Boot Settings"** and **"Restore Secure Boot to Factory Settings"** set to **<Disabled>**.

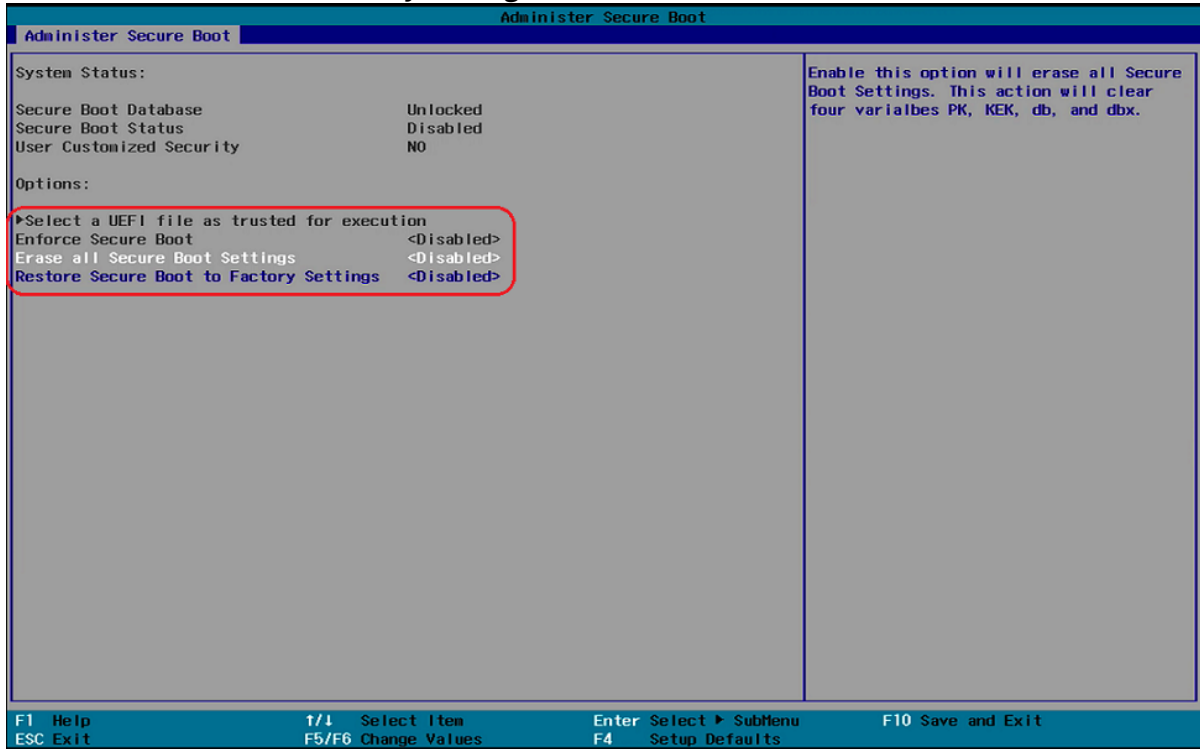


- Change both **"Erase all Secure Boot Settings"** and **"Restore Secure Boot to Factory Settings"** to **<Enabled>**.

If **"Enforce Secure Boot"** is not grayed out as in the picture below, change that option to as well.

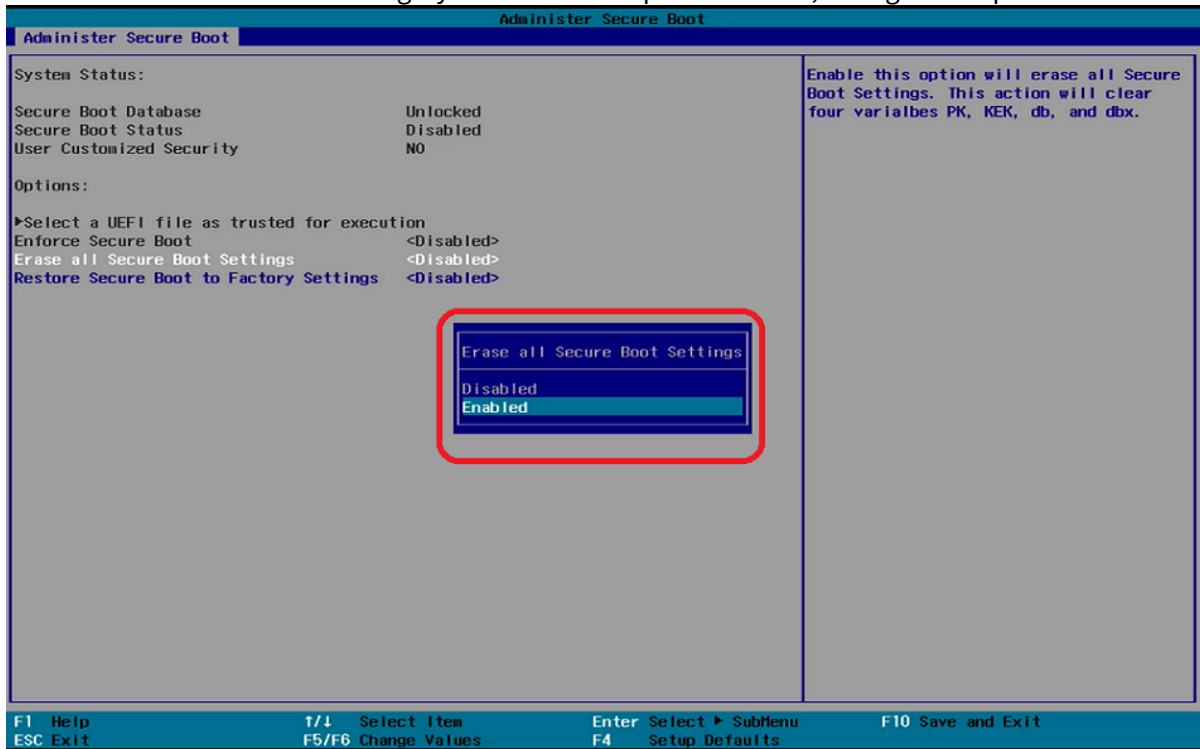

5. Save the changes. To do this, press [F10] and confirm **Exit Saving Changes** with [Yes].

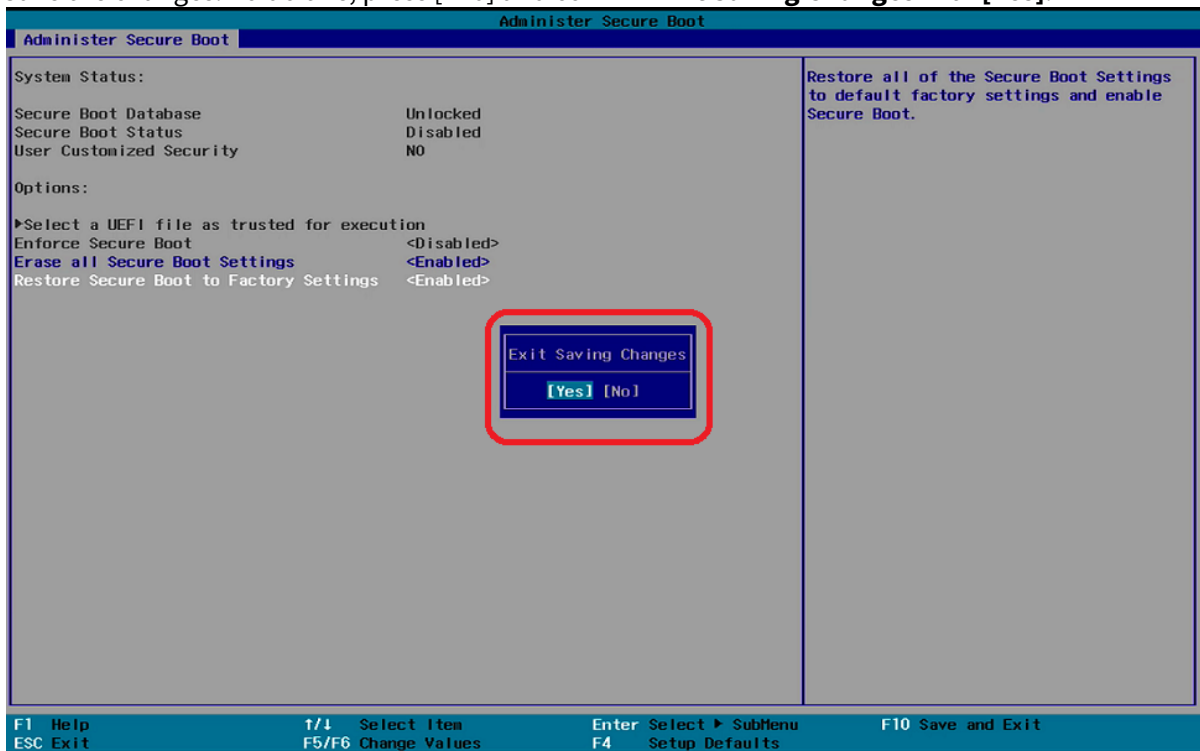


The changes will be saved and the device will be rebooted.




6. As a last step, verify that Secure Boot is working, see [Verifying that UEFI Secure Boot is enabled](#).



## Enabling UEFI Secure Boot in UD7-LX 20

 UEFI Secure Boot is already a default setting in UD7-LX 20.

 If you have disabled secure boot, you will need to reverse the settings you made.



## Microsoft Windows 10 IoT

- [Enabling UEFI Secure Boot in UD3-W10 51](#) (see page 167)
- [Enabling UEFI Secure Boot in UD6-W10 51](#) (see page 174)
- [Enabling UEFI Secure Boot in UD7-W10 10](#) (see page 181)

## Enabling UEFI Secure Boot in UD3-W10 51

### Prerequisites


- Microsoft Windows IoT 4.03.100 or higher
- BIOS version 3.A. 13-11202017 or higher

**i** To check the BIOS version, open the InsydeH20 Setup Utility as described below (step 3). Press [F9] to open the **System Information** window. In the **System Information** window, check that the BIOS version corresponds to *3.A. 13-11202017* or newer.


**!** It is crucial to set a BIOS password to prevent users from disabling Secure Boot.

### Changing the Device's Boot Type to UEFI Boot


1. Turn on (or restart) the IGEL device.
2. During boot, hold the [DEL] key until you see the menu shown below.
3. Using the arrow keys, navigate to the option **SCU** and press [ENTER]. This will open the InsydeH20 Setup Utility.

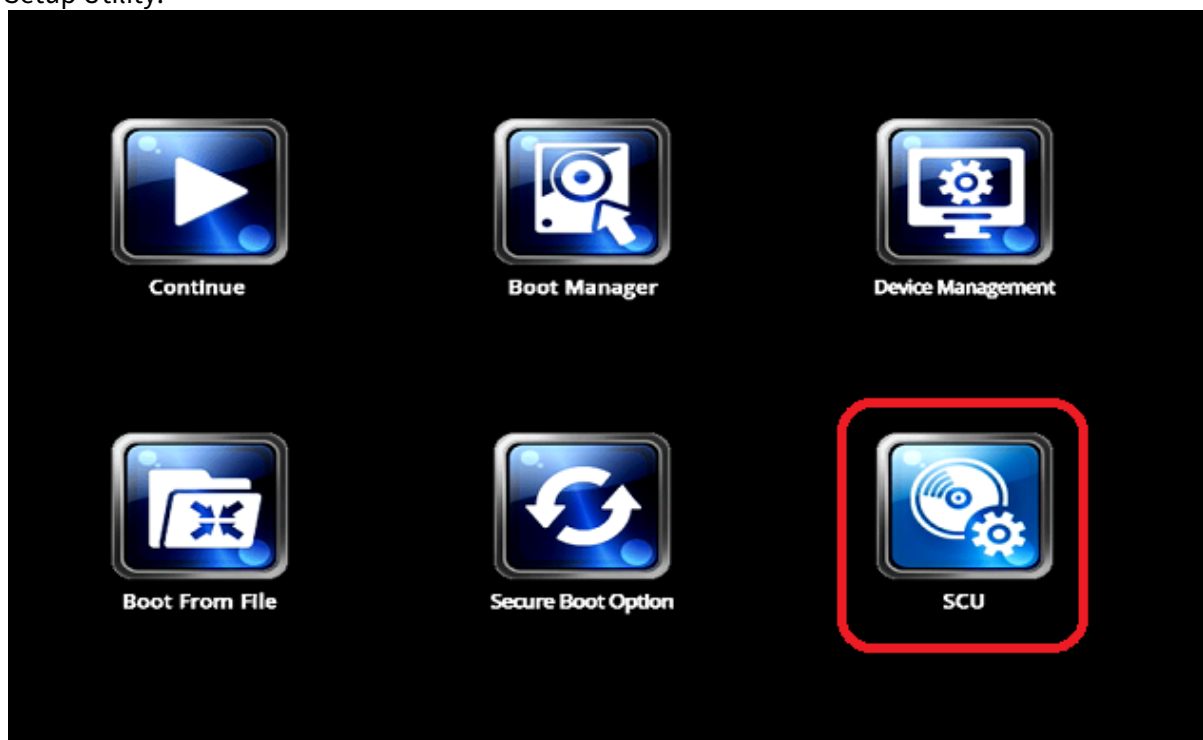

- Using the arrow keys, move to the tab **Boot**. You will find **Boot Type** set to **<Dual Boot Type>**.

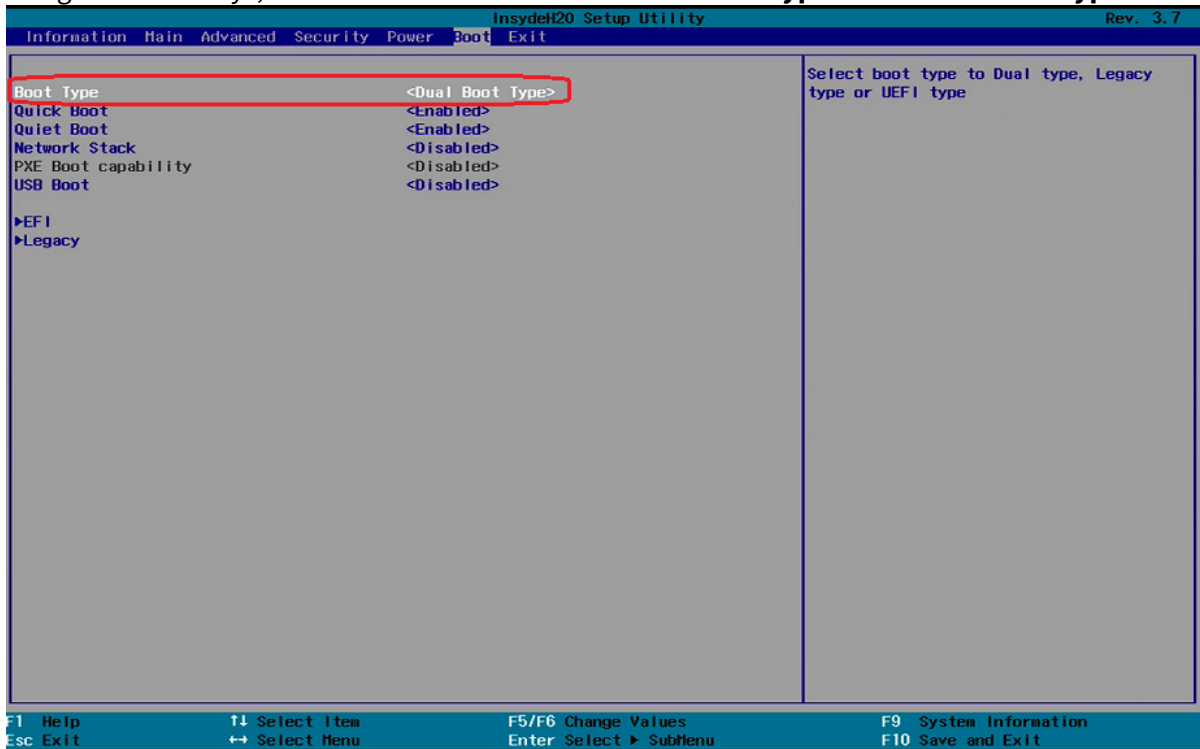


- Change **Boot Type** to **<UEFI Boot Type>**.

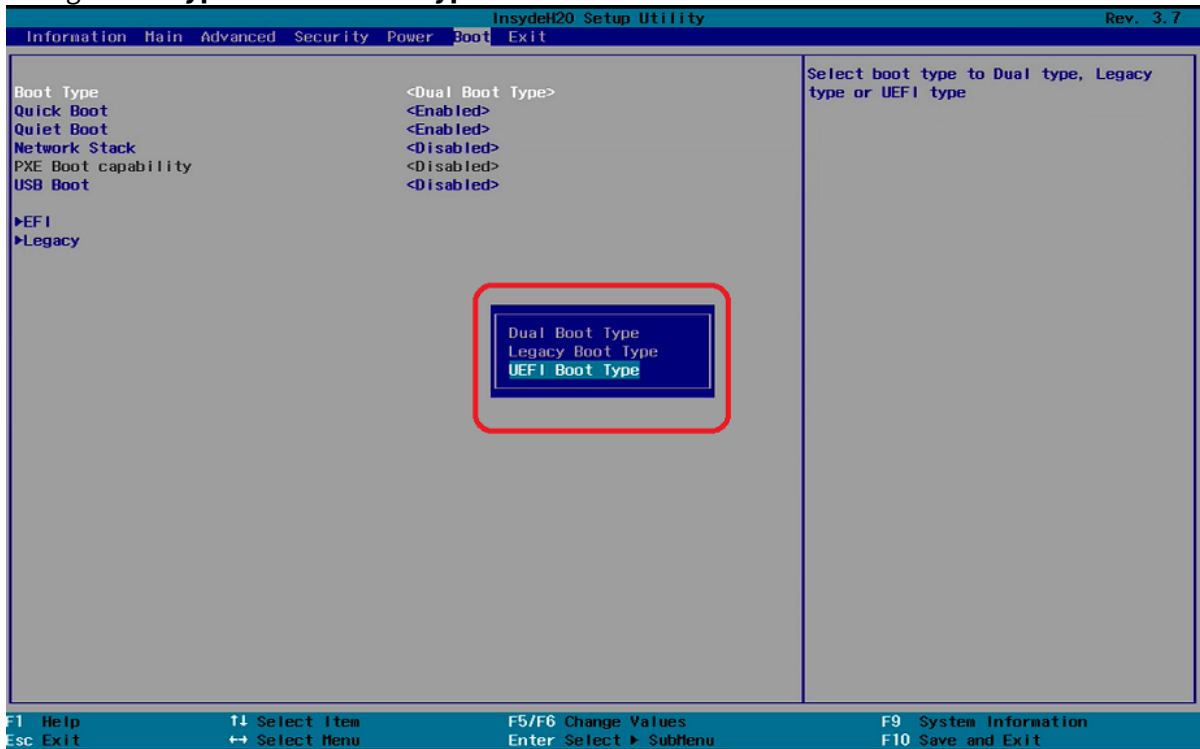



6. Save the changes. To do this, press [F10] and confirm **Exit Saving Changes?** with [Yes].

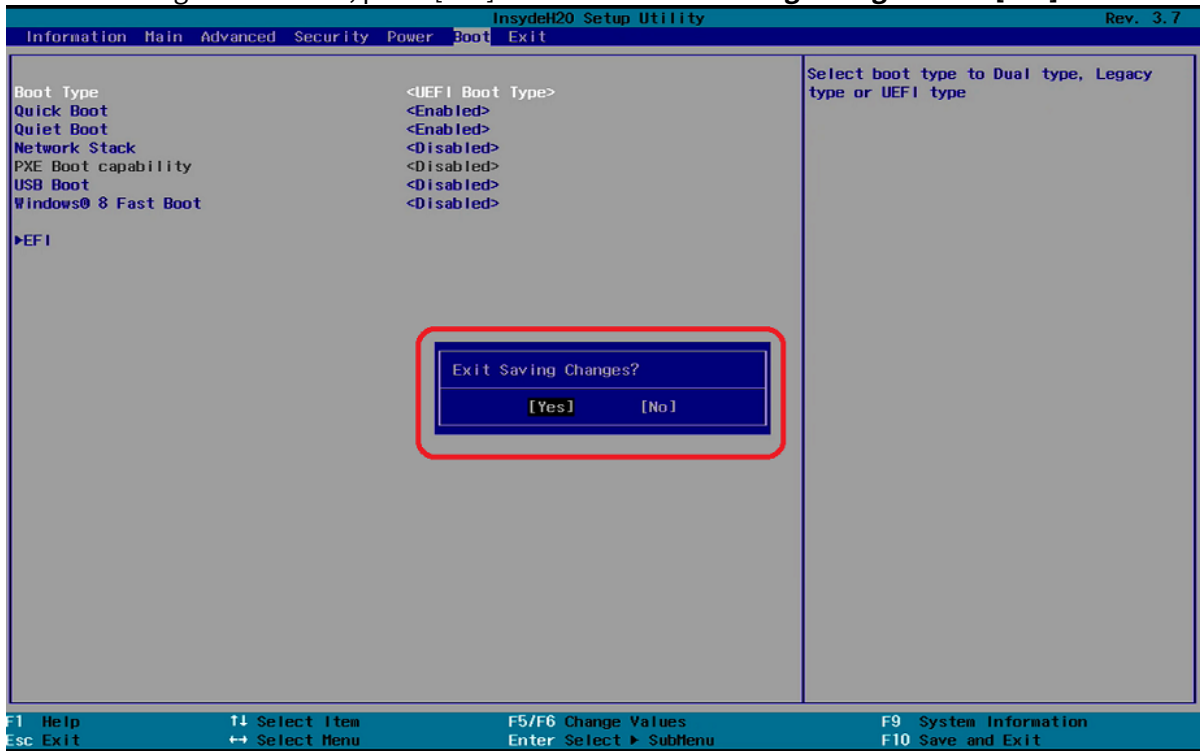


The changes will be saved and the device will be rebooted.


### Activating the Secure Boot Feature

1. Turn on (or restart) the IGEL device.

- Using the arrow keys, move to **Secure Boot Option** and press [ENTER]. The BIOS screen **Administer Secure Boot** will open.

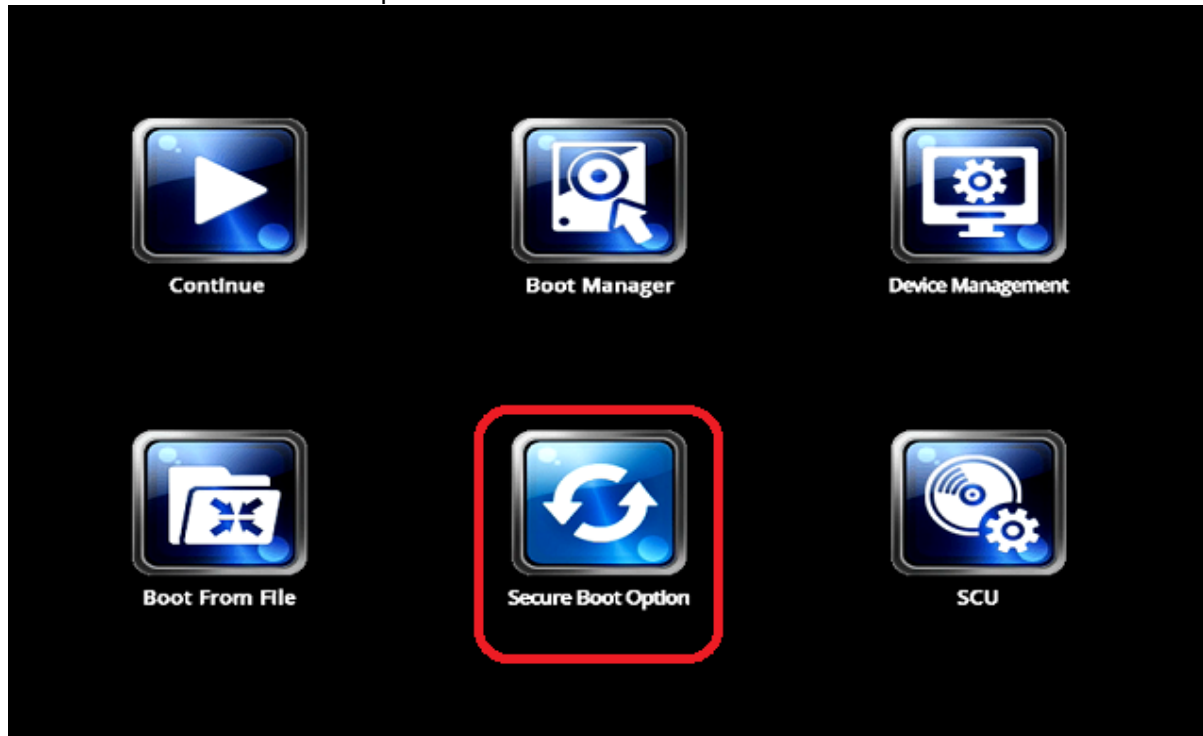


3. In the screen **Administer Secure Boot**, you will find **Erase all Secure Boot Settings** and **Restore Secure Boot to Factory Settings** set to **<Disabled>**.

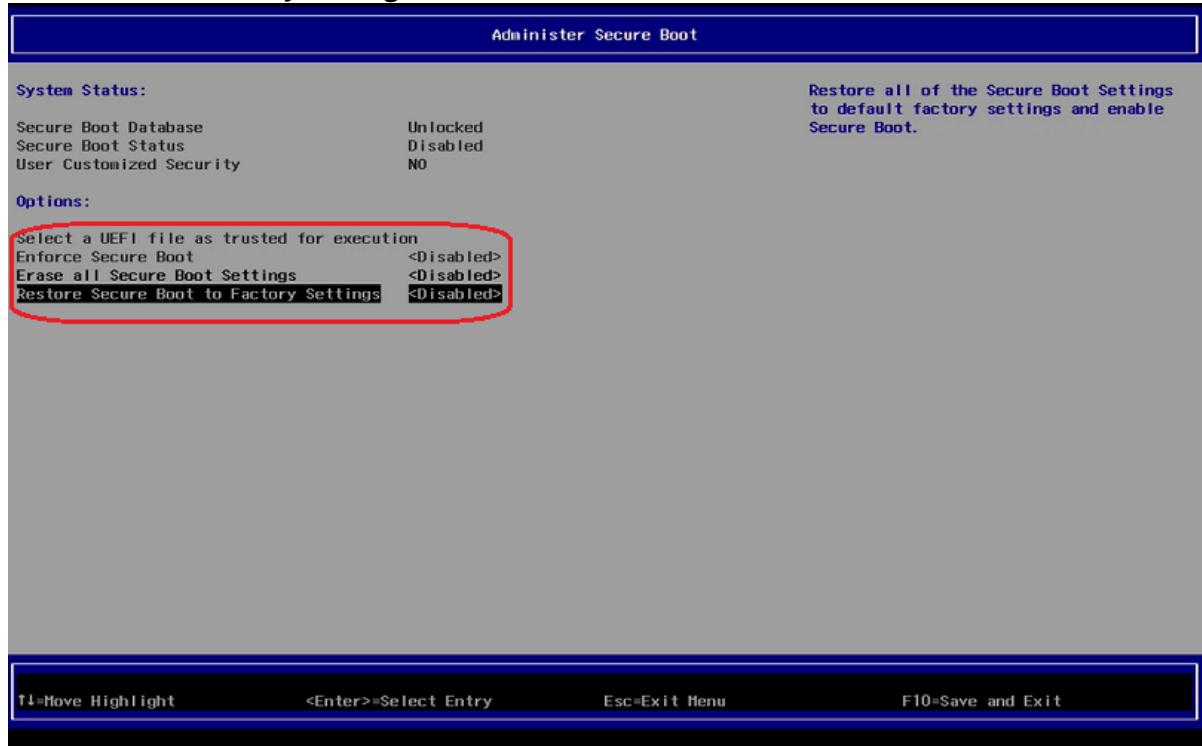


4. Change **Erase all Secure Boot Settings** and **Restore Secure Boot to Factory Settings** to **<Enabled>**.

If **Enforce Secure Boot** is not grayed out as in the picture below, change that option to as well.

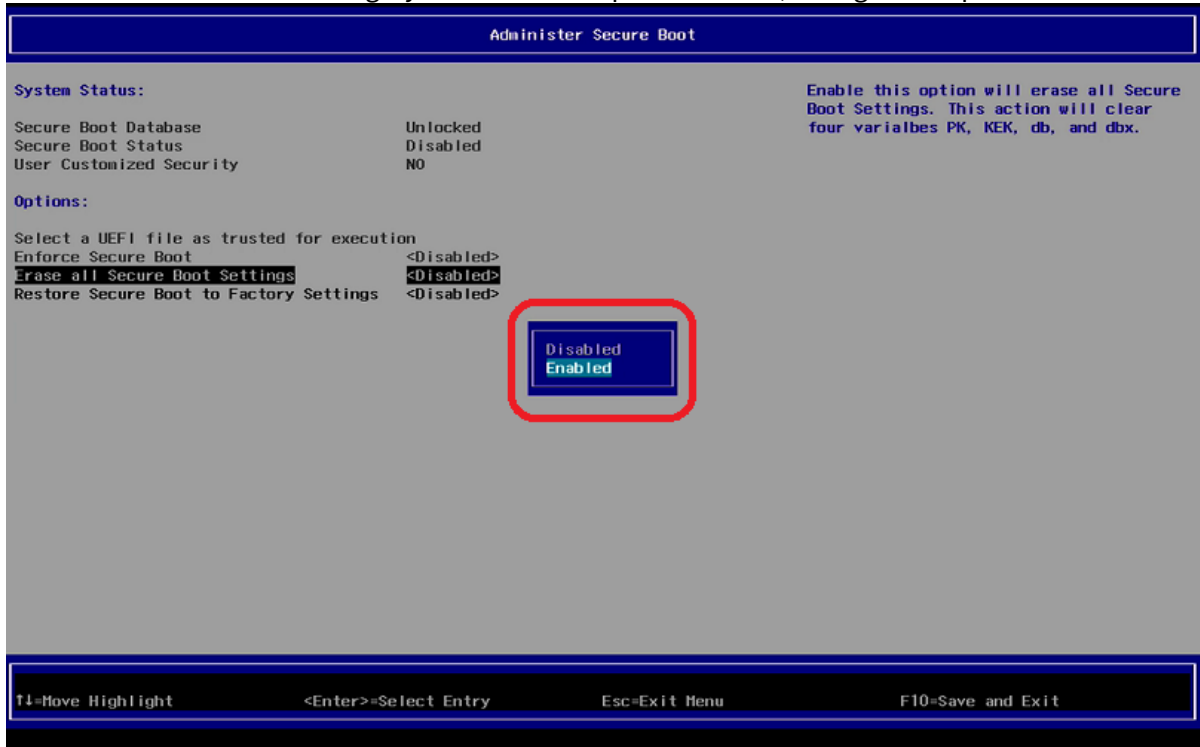

5. Save the changes. To do this, press [F10] and confirm **Exit Saving Changes?** with [Yes].

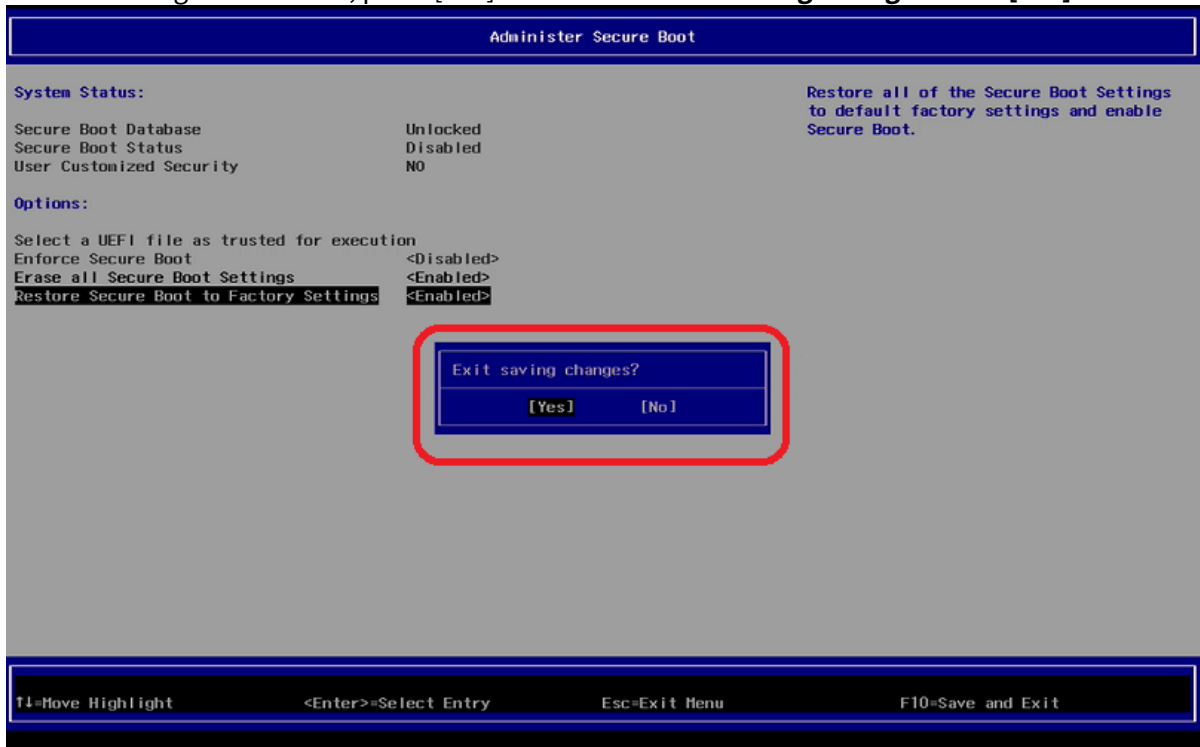

The changes will be saved and the device will be rebooted.



6. As a last step, verify that Secure Boot is working, see [Verifying that UEFI Secure Boot is enabled](#).

## Enabling UEFI Secure Boot in UD6-W10 51

### Prerequisites


- Microsoft Windows 10 IoT 4.03.100 or higher
- BIOS version 3.9. 13-02202017 or higher

**i** To check the BIOS version, open the InsydeH20 Setup Utility as described below (step 3). Press [F9] to open the **System Information** window. In the **System Information** window, check that the BIOS version corresponds to *3.9. 13-02202017* or newer.


**!** It is crucial to set a BIOS password to prevent users from disabling Secure Boot.

### Changing the Device's Boot Type to UEFI Boot


1. Turn on (or restart) the IGEL device.
2. During boot, hold the [DEL] key until you see the menu shown below.
3. Using the arrow keys, navigate to the option **SCU** and press [ENTER]. This will open the InsydeH20 Setup Utility.

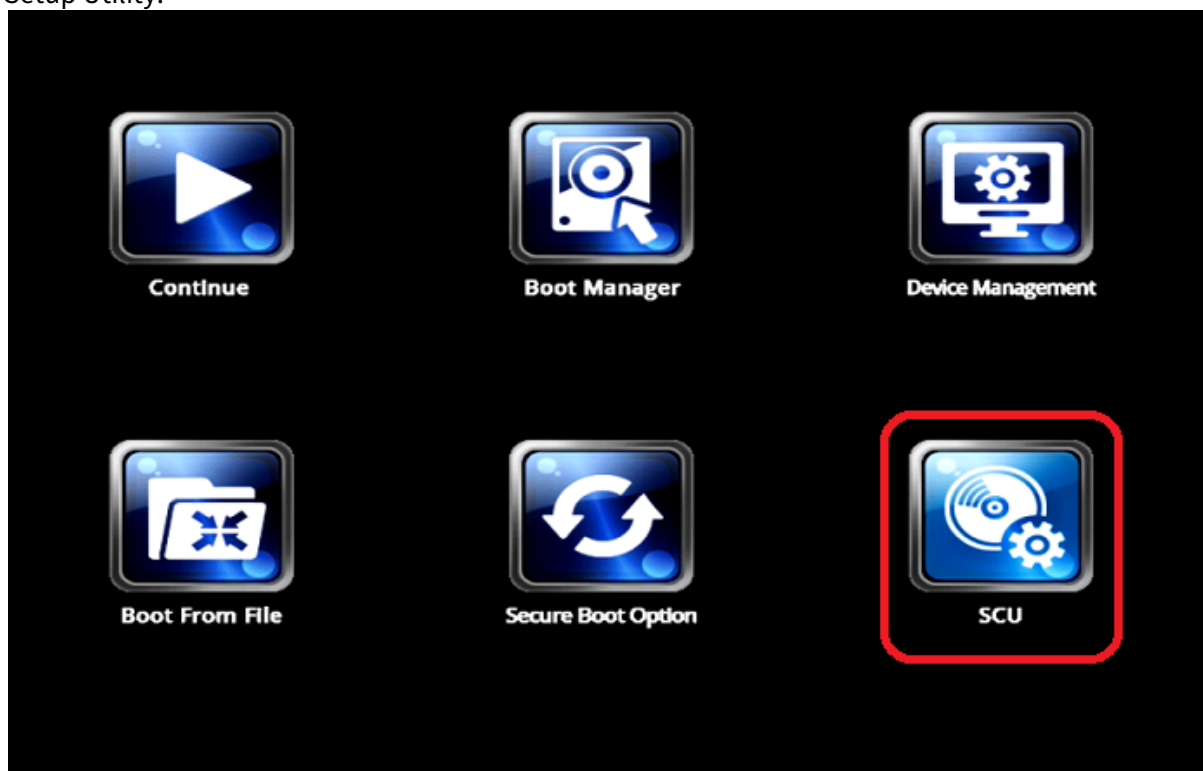


- Using the arrow keys, move to the **Boot** tab. You will find **Boot Type** set to **<Dual Boot Type>**.

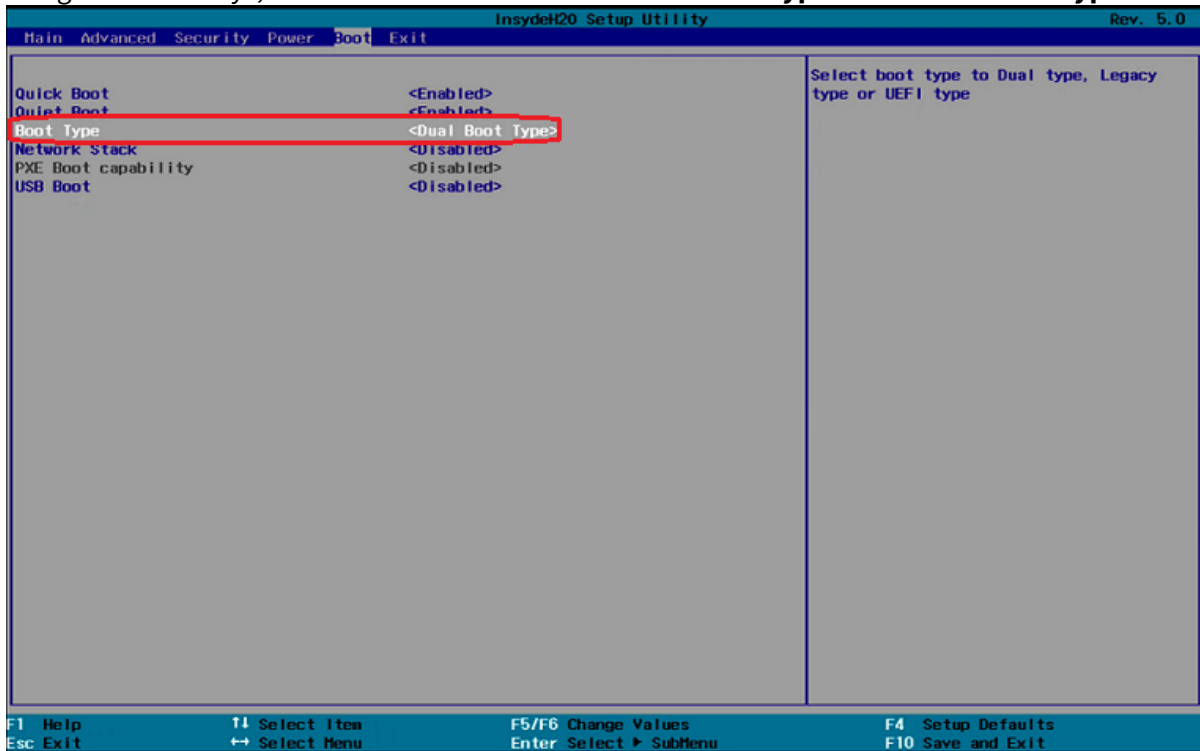

- Change **Boot Type** to **<UEFI Boot Type>**.

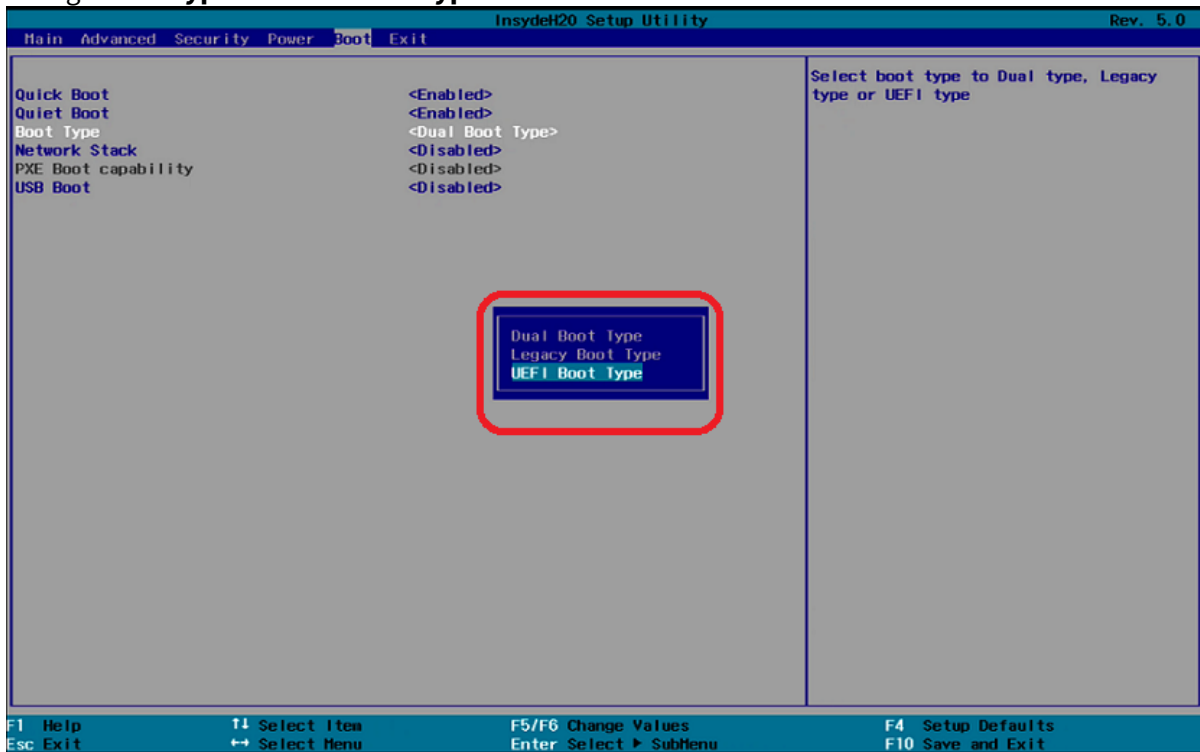

6. Save the changes. To do this, press [F10] and confirm **Exit Saving Changes?** with [Yes].

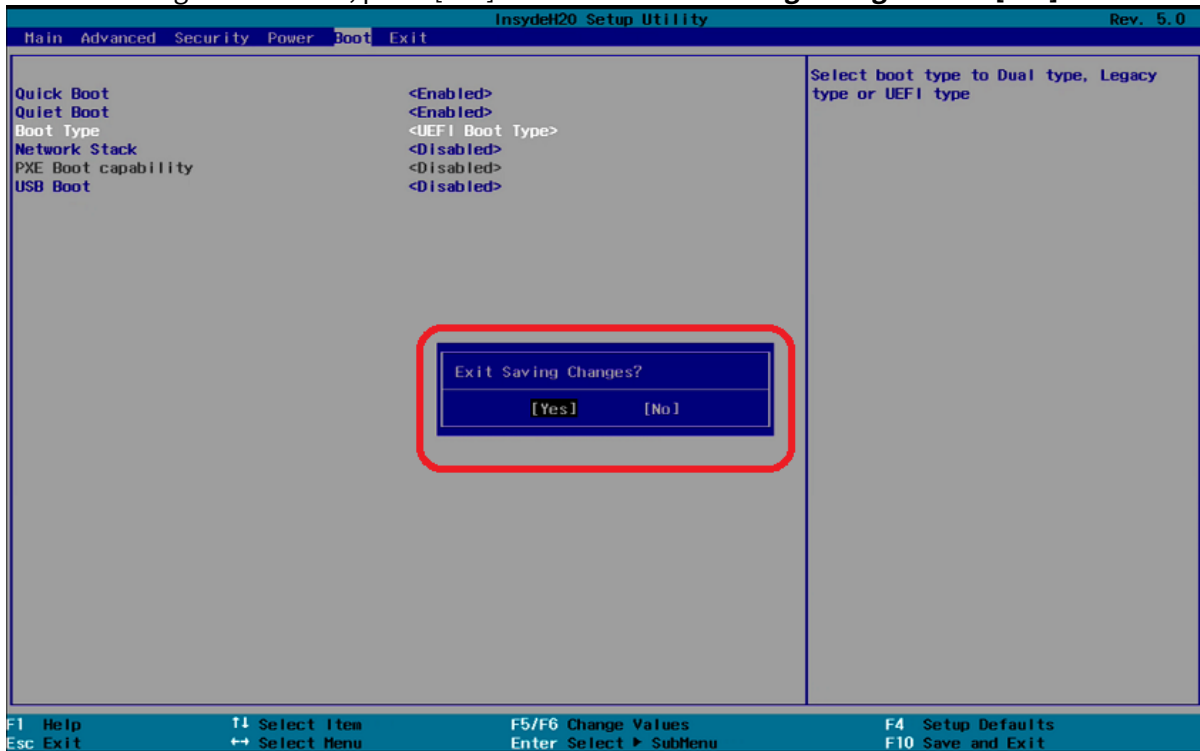


The changes will be saved and the device will be rebooted.

### Activating the Secure Boot Feature


1. Turn on (or restart) the device.
2. During boot, hold the [DEL] key until you see the screen shown below.




- Using the arrow keys, move to the option **Secure Boot Option** and press [ENTER]. This will open the the screen **Administer Secure Boot**.

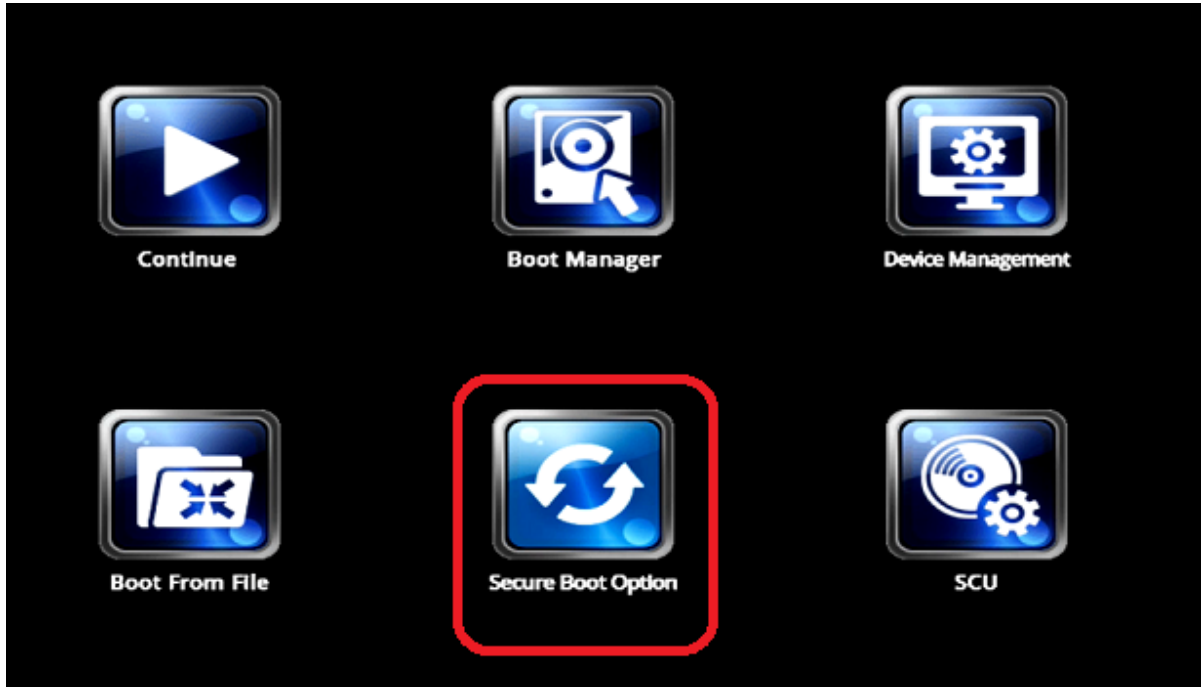

- In the screen **Administer Secure Boot**, you will find **Erase all Secure Boot Settings** and **Restore Secure Boot to Factory Settings** set to **<Disabled>**.

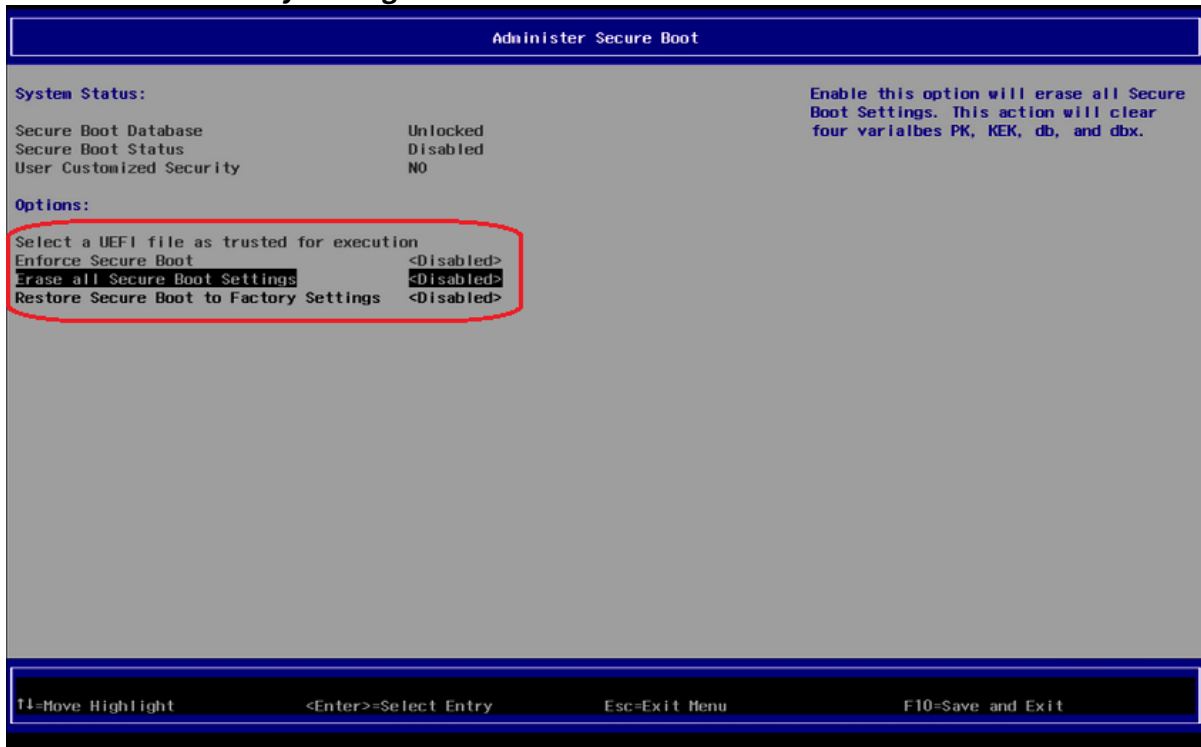


- In the screen **Administer Secure Boot**, set **Erase all Secure Boot Settings** and **Restore Secure Boot to Factory Settings** to **<Enabled>**.

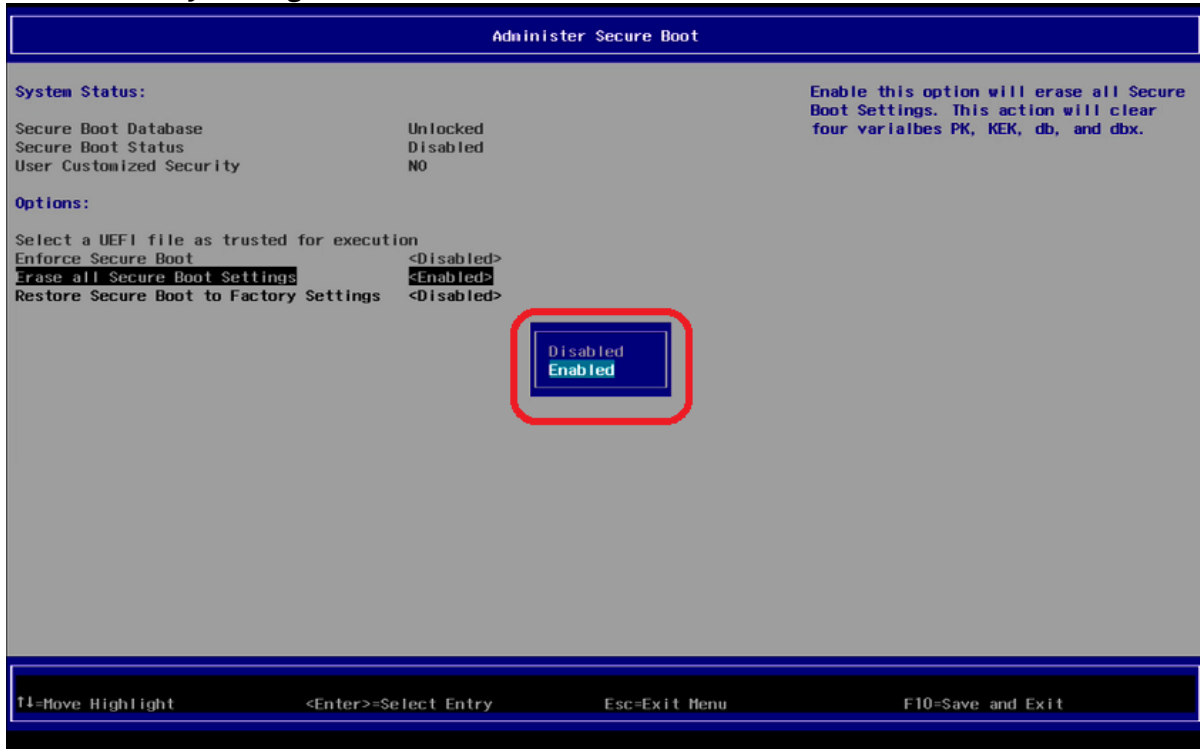


- Erase all Secure Boot Settings** and **Restore Secure Boot to Factory Settings** are now set to **<Enabled>**.

If **Enforce Secure Boot** is not grayed out as in the picture below, change that option to as well.

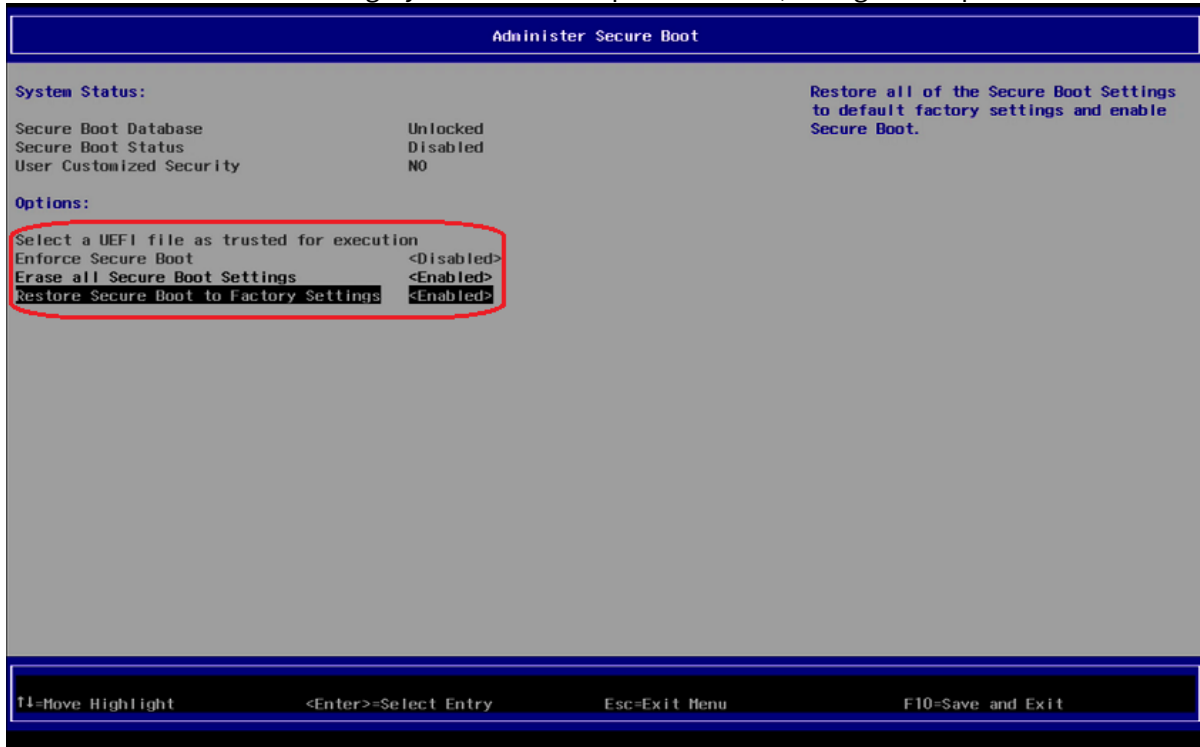

7. Save the changes. To do this, press [F10] and confirm **Exit Saving Changes?** with [Yes].

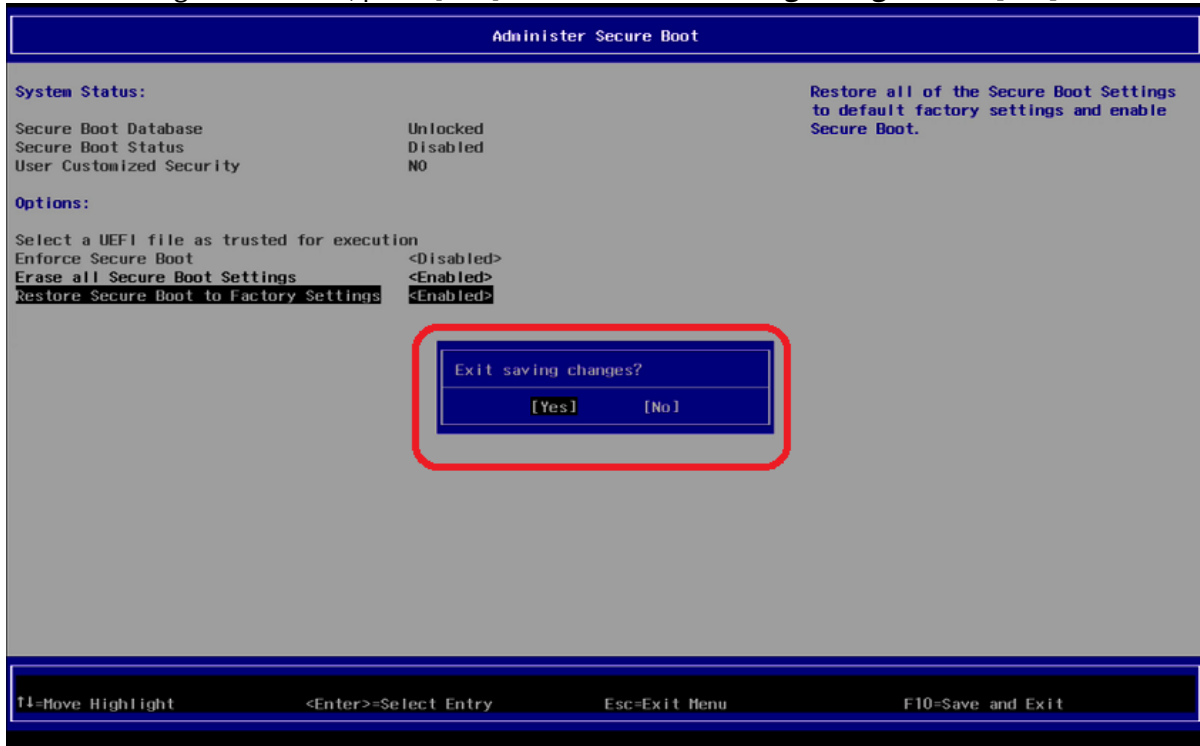

The changes will be saved and the device will be rebooted.



8. As a last step, verify that Secure Boot is working, see [Verifying that UEFI Secure Boot is enabled](#).

## Enabling UEFI Secure Boot in UD7-W10 10

### Prerequisites


- Microsoft Windows IoT 4.03.100 or higher

UD7-W10 10 supports UEFI Secure Boot by default and no BIOS update is necessary.


**It is crucial to set a BIOS password to prevent users from disabling Secure Boot.**

### Activating the Secure Boot Feature

1. Turn on (or restart) the IGEL device.
2. During boot, hold the [DEL] key until you see the **Front Page** screen shown below.

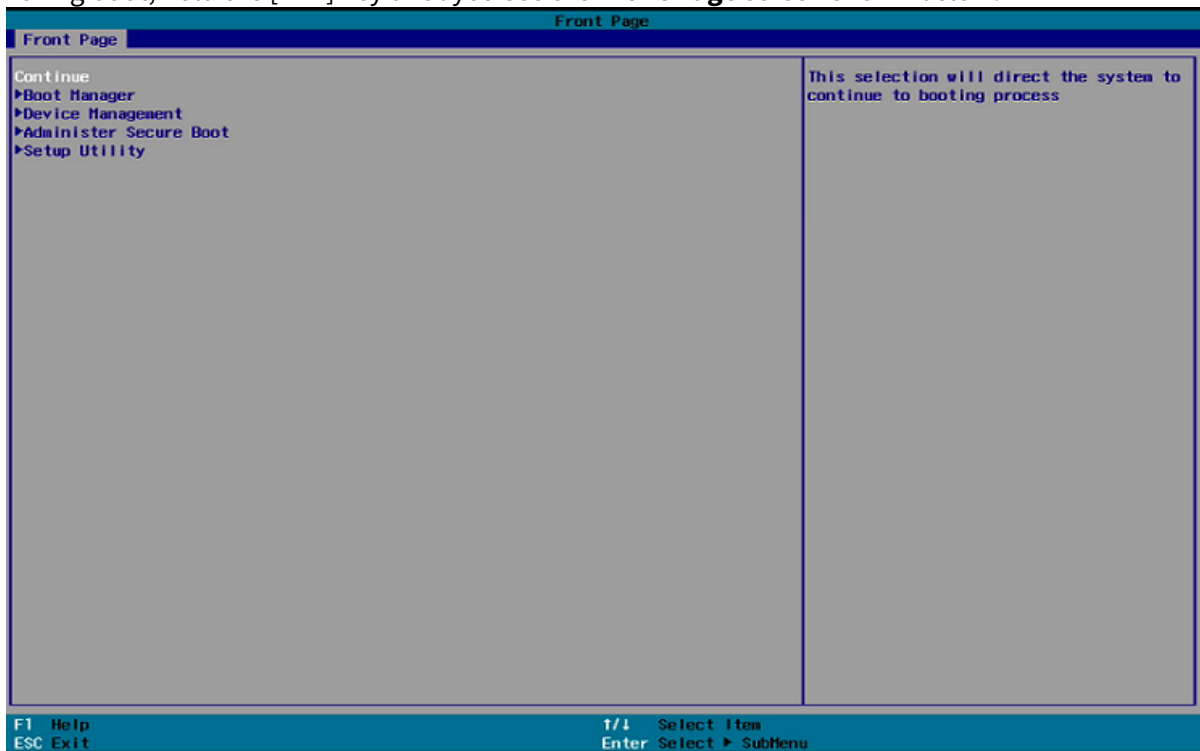


- In the **Administer Secure Boot** screen, you will find **Erase all Secure Boot Settings** and **Restore Secure Boot to Factory Settings** set to **<Disabled>**.

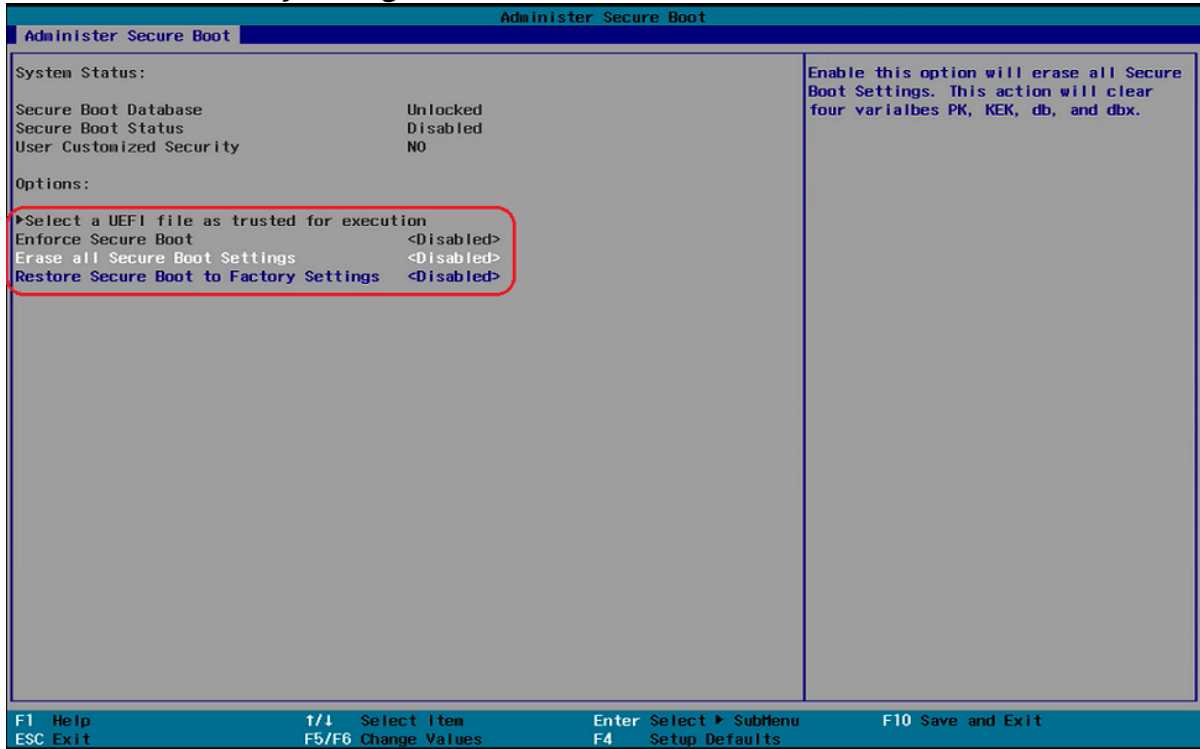


- Change both **Erase all Secure Boot Settings** and **Restore Secure Boot to Factory Settings** to **<Enabled>**.

If **Enforce Secure Boot** is not grayed out as in the picture below, change that option to as well.

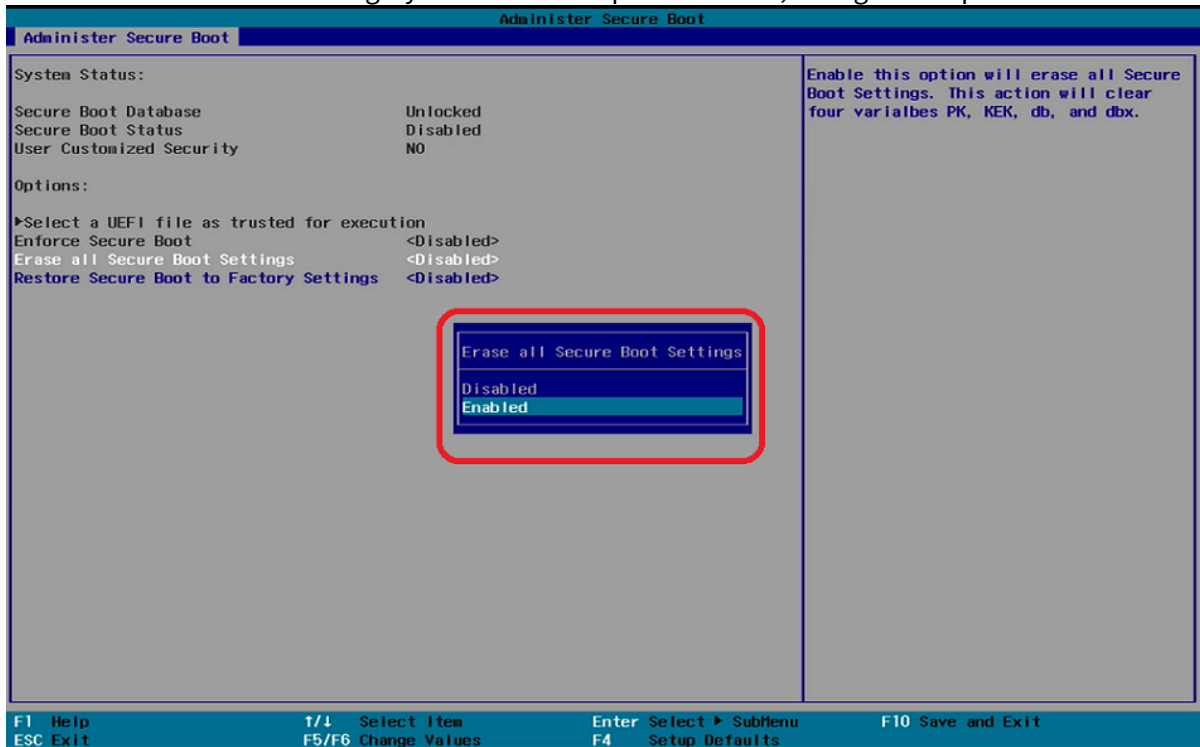

5. Save the changes. To do this, press [F10] and confirm **Exit Saving Changes** with [Yes].

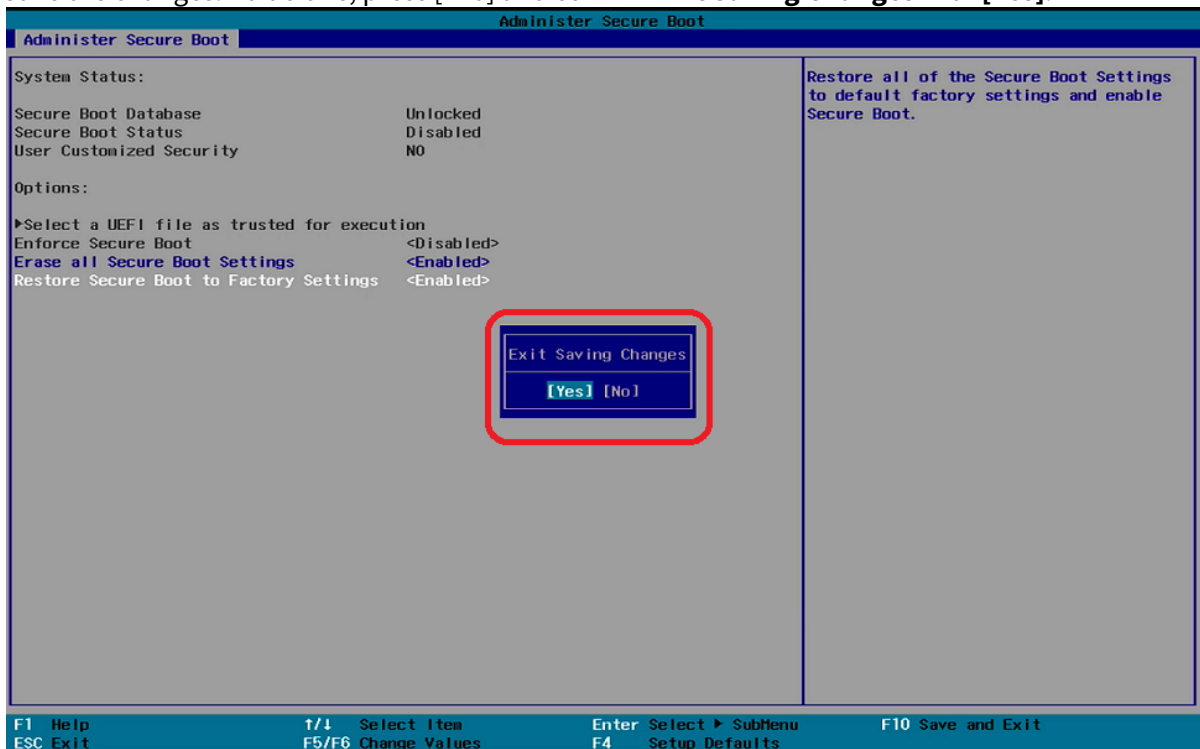

The changes will be saved and the device will be rebooted.



6. As a last step, verify that Secure Boot is working, see [Verifying that UEFI Secure Boot is enabled](#).



## Verifying that Secure Boot is Enabled


 **It is important to verify that UEFI Secure Boot has been properly enabled.**

UEFI Secure Boot support is available in IGEL OS 10.04.100 or higher as well as Windows 10 IoT 4.03.100 or higher.

Check the following points to see whether UEFI Secure Boot has been properly enabled.

### On IGEL OS 12.01 and Higher

- In the **About** window, **Boot Mode** is set to the value **Secure Boot EFI**.

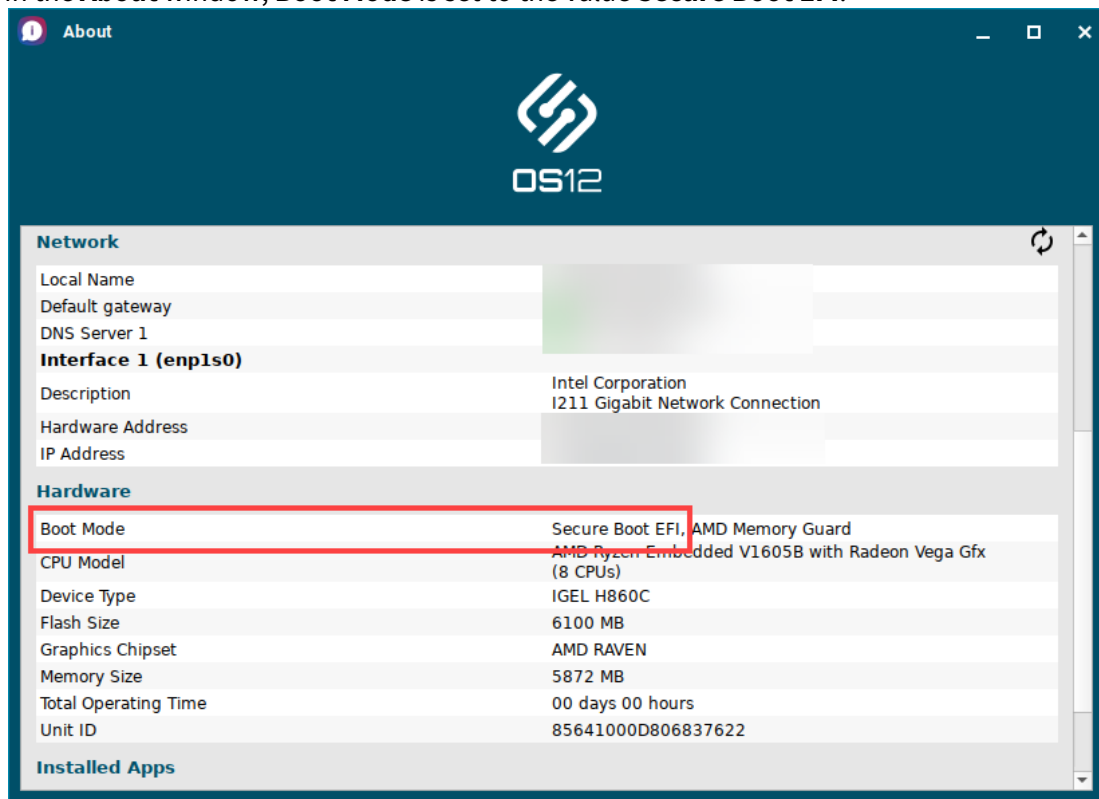

### On IGEL OS 11.01.100 and Higher

- The boot splash contains a lock symbol.



- In the About window, **Boot Mode** is set to the value **UEFI Secure Boot**.




On IGEL OS 10.04.100 - 10.05.500

- The boot splash contains a lock symbol.



- In the About window, **Boot Mode** is set to the value **UEFI Secure Boot**.

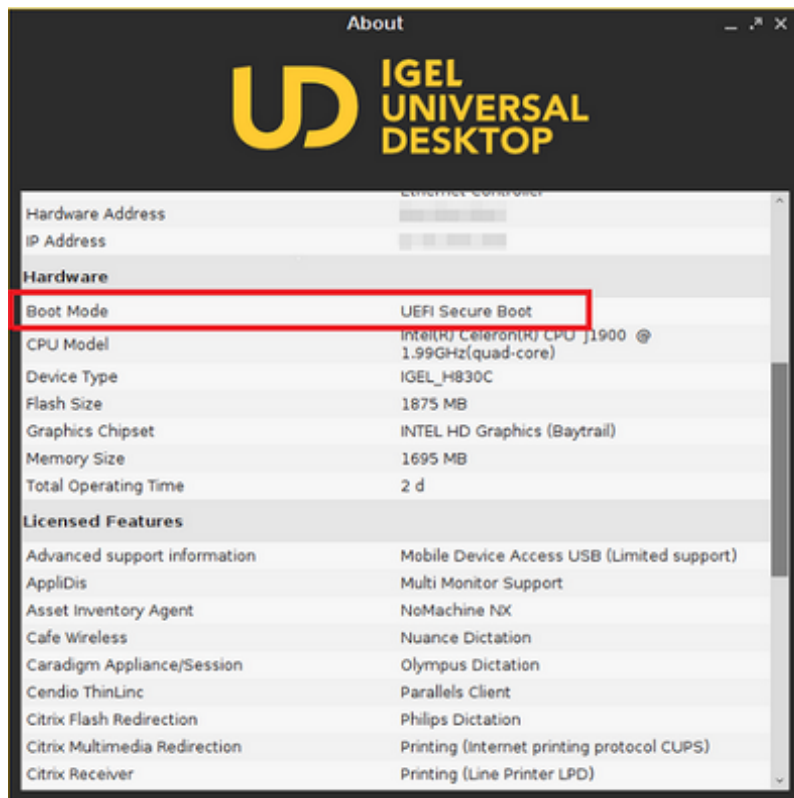

## On Microsoft Windows 10 IoT

- The boot splash contains a lock symbol.



- In the IGEL Device Information tool, in the **Hardware** tab, **Boot Mode** is set to the value **UEFI Secure Boot**.

| Name                   | Description                             |
|------------------------|---|
| CPU Version            | Intel(R) Celeron(R) CPU J1900 @ 1.99GHz |
| CPU Speed              | 1993 MHz                                |
| RAM                    | 3796 MB                                 |
| Disk Capacity          | 30529 MB                                |
| Current Chipset Driver | Intel(R) HD Graphics                    |
| Product                | H830C                                   |
| Boot Mode              | UEFI Secure Boot                        |


The screenshot shows the 'Hardware' tab of the IGEL Device Information tool. It contains a table with two columns: 'Name' and 'Description'. The 'Boot Mode' row is highlighted with a red rectangular border. Below the table are navigation arrows and several tabs: 'Licensed Features', 'Updates', and 'Windows Activation'.


## Secured-Core PCs: Microsoft 3rd-Party UEFI Certificate for Secure Boot

On modern computers such as secured-core PCs (see e.g. <https://www.microsoft.com/en-us/windows/business/devices?col=secured-core-pcs>), there may be a BIOS setting related to Secure Boot that allows the use of Microsoft's 3rd party UEFI Secure Boot Certificate. The usual description of such a BIOS setting is "Allow Microsoft 3rd Party UEFI CA". This setting must be set to enabled, as IGEL uses the 3rd party certificate to support UEFI Secure Boot.

If UEFI Secure Boot is enabled, but "Allow Microsoft 3rd Party UEFI CA" is not enabled, you may be unable to boot IGEL OS Creator or UD Pocket. Similarly, if the setting "Allow Microsoft 3rd Party UEFI CA" is disabled after a previous installation of IGEL OS, IGEL OS will fail to boot.

Examples:

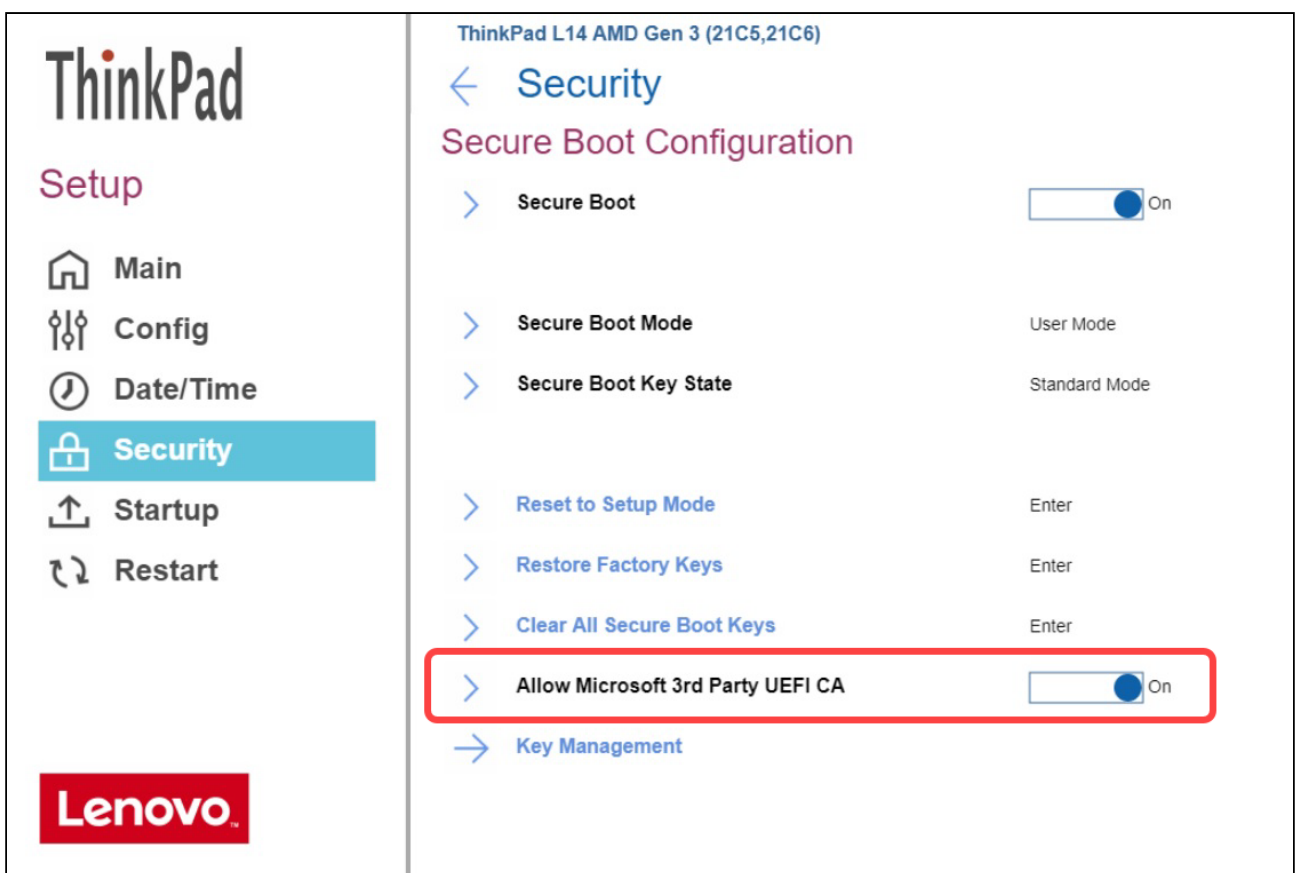

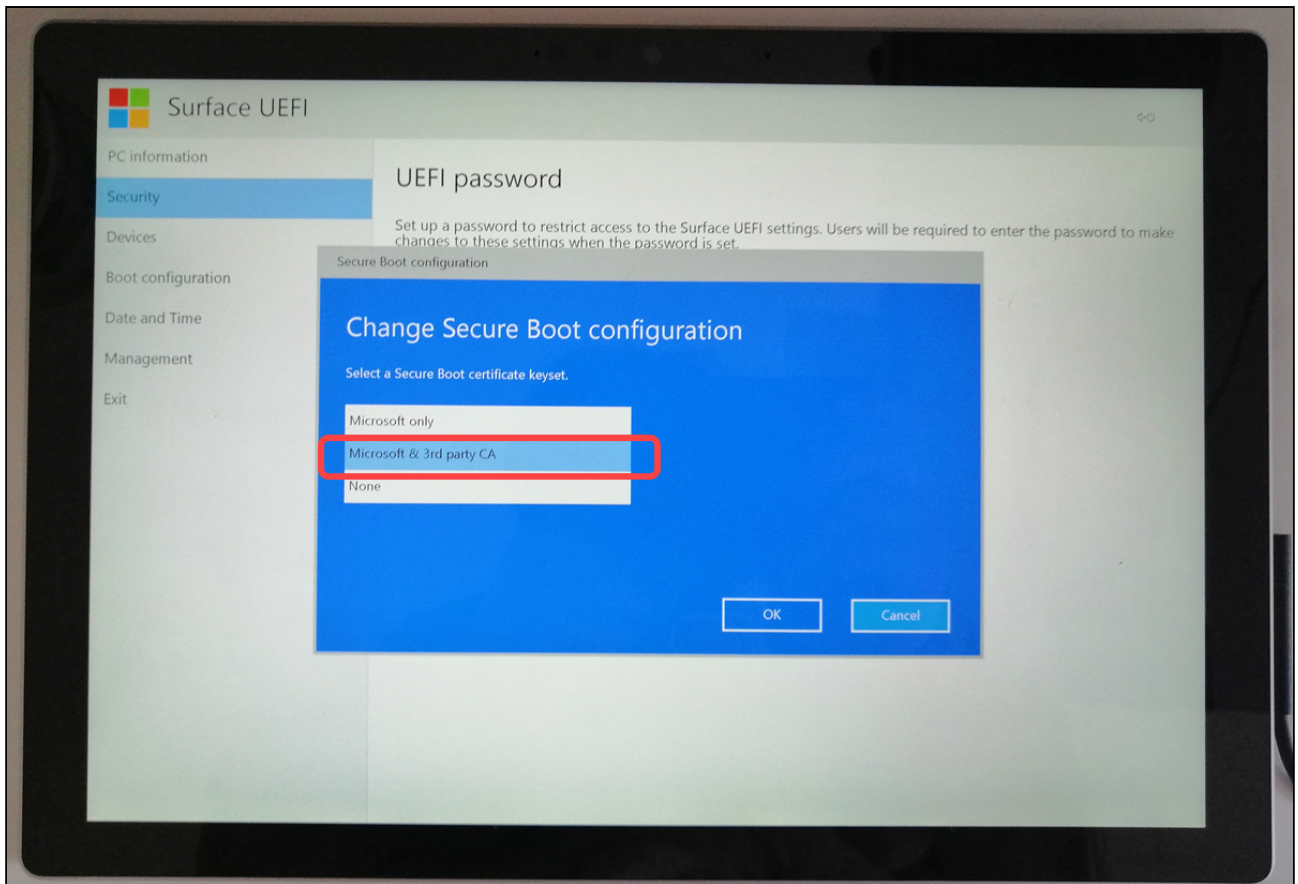

## AMD Secure Processor

To enhance the security at the hardware level, IGEL implements the AMD Secure Processor technology. The AMD Secure Processor is a built-in dedicated security system that checks if the BIOS has a valid signature and thus secures the next step in the boot process. This ensures that only devices with a signed BIOS will boot.

For more information about the AMD Secure Processor, visit the AMD website <https://www.amd.com/en/technologies/>.

## IGEL Devices with the Integrated AMD Secure Processor

- UD3 Model M350C
- UD7 Model H860C
- [UD7 Model H850C \(see page 192\)](#)

## UD7 Model H850C

As from December 2019, IGEL UD7 model H850C is equipped with the [AMD Secure Processor](#) (see page 191).

**i** H850C devices manufactured before December 2019 do not include the AMD Secure Processor and cannot be upgraded.

**i** The implementation of the AMD Secure Processor technology required mainboard and UEFI modification; backward compatibility is not supported.

**i** The AMD Secure Processor technology increases the system boot time between 3 and 4.5 seconds.


## Features Distinguishing H850C Devices with the AMD Secure Processor

The following features distinguish H850C devices with the integrated AMD Secure Processor from H850C devices without it:

- BIOS version 3.9.13-10092019 and higher


### How to find out your BIOS version...

- Turn on (or restart) your UD7 device.
- During boot, hold the [DEL] key until you see the **Front Page** screen shown below.

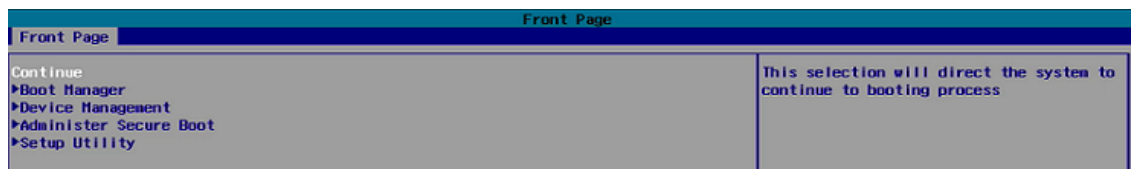

- Choose **Setup Utility**.  
The **InsydeH20 Setup Utility** opens.
  - Press [F9] to open the **System Information** window.
  - In the **System Information** window, check **BIOS Version**.
- Hardware ID "LX-11", introduced with IGEL OS version 11.03.
  - A black dot in the right bottom corner of the device label, which you can see if you pull out the black label holder located at the rear of the device:



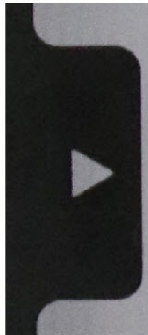

 Thin Client 精簡型電腦 www.igel.com

產品型號(Model Name): IGEL-H850C  
輸入規格 (Input Rating): +12V  $\Rightarrow$  5A  
製造商(Manufacturer): IGEL Technology GmbH  
地址(Address): Hanna-Kunath-Str.31  
28199 Bremen, Germany  
Use only power supplies listed in the user manual.  
CAN ICES-3(B)/NMB-3(B)  
Made in China 中國製造 Designed in Germany 德國設計




## AMD Memory Guard


With AMD Memory Guard, IGEL enhances the security capabilities of the UD3 model M350C and UD7 model H860C.

AMD Memory Guard enables real-time memory encryption, which helps to protect against physical attacks and to secure data stored in RAM. The encryption is done on the basis of the randomly generated AES 128-bit encryption key and performed as such by the [AMD Secure Processor](#) (see page 191) integrated in the IGEL device.

For more information about AMD Memory Guard, see <https://www.amd.com/system/files/documents/amd-memory-guard-white-paper.pdf>.

### Activation / Deactivation


- AMD Memory Guard is available and activated by default as of BIOS version 3.5.13A-07222020.
- The activation/deactivation status is indicated in the **About** window, accessible via the icon , as of IGEL OS 11.04.100.

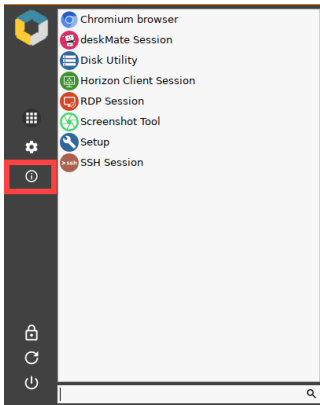

- AMD Memory Guard can be deactivated in BIOS under **Setup Utility > Security**.


#### How to deactivate AMD Memory Guard

- Turn on (or restart) your device.
- During boot, hold the [DEL] key until you see the **Front Page** screen shown below.

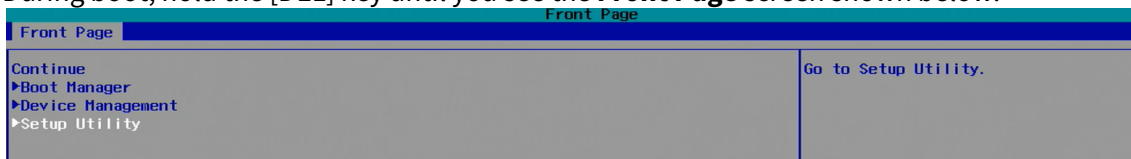

- Choose **Setup Utility**.  
The **InsydeH20 Setup Utility** opens.
- Go to **Security**.

e. Select **AMD Memory Guard** and change the settings.

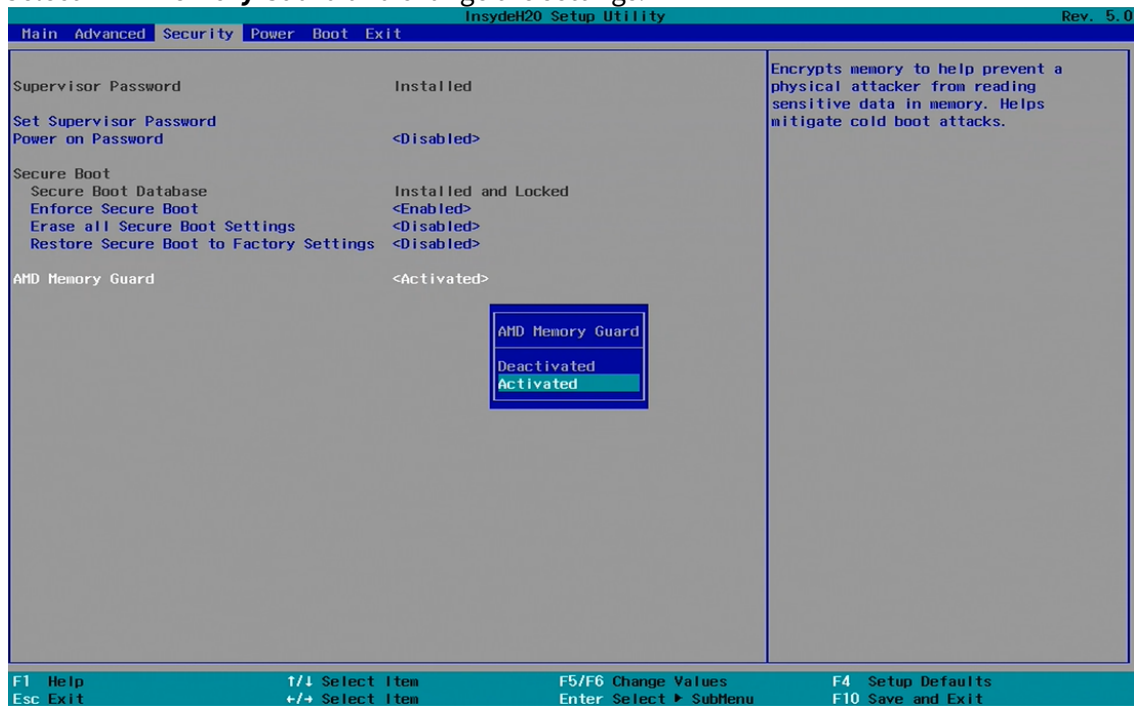

f. Press [F10] to save the changes.

**i** As AMD Memory Guard has only a minor impact on system performance – e.g. on M350C, the reduction equals to 1-1.5% – it is advisable to leave the feature activated.

## **BSI Grundschatz**

This document is available in German only.

## Anleitung zum IT-Grundschatz-konformen Betrieb von IGEL OS 11.03.100

This document is available in German only.

## Über dieses Dokument

This document is available in German only.

## Grundsätzliche Vorgaben zur Administration

This document is available in German only.

## Fernwartung

This document is available in German only.



## Zugriffskontrolle

This document is available in German only.

## Absicherung des Bootvorgangs

This document is available in German only.

## Schutz bei Diebstahl oder Defekt

This document is available in German only.

## Schutz vor Manipulation

This document is available in German only.

## Einschränken der Benutzerumgebung

This document is available in German only.

## Logging and Log Evaluation

### Prerequisites

Teleworking computers should have a logging function and should have a log evaluation function.

### Note

IGEL recommends leaving logging enabled by default (authentication, kernel, and daemons) and limiting the desired parameters by filtering during evaluation.

### Action: Forward Logs to Log Analyzer


Use a log collector and analyzer, which allows the archiving and analysis of logs according to many aspects, such as Graylog, Splunk or the Elastic-Logstash-Kibana-Stack (ELK). Their evaluation function must be able to differentiate according to the types of data required for logging (for example, filtering all unauthorized access to all resources in a given period of time). The evaluation function must generate evaluable (readable) reports so that no security-critical activities are overlooked.

Such solutions can receive log data via rsyslog interface with TLS encryption. In IGEL OS, configure the forwarding as follows:

#### Installing the Certificate


If the X.509 certificate of your log collector is not signed by a CA known to IGEL OS, install the CA root certificate of the signer as follows:

1. Create a **new file** in the UMS Console under **Files** by right-clicking.

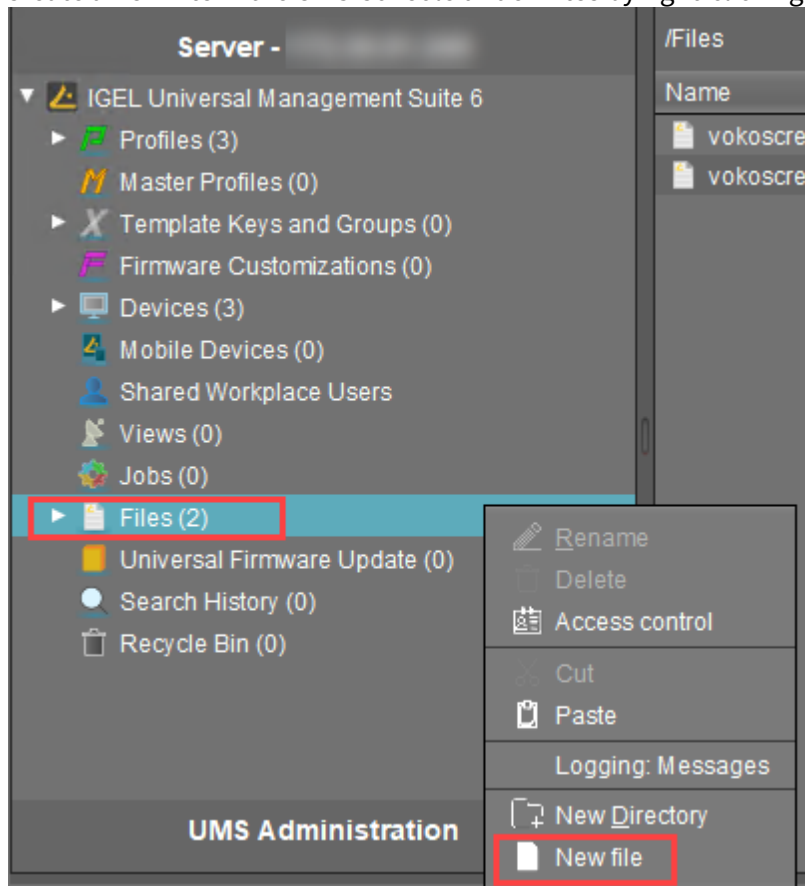

2. Under **Local file**, select the CA root certificate file `ca.pem` in PEM format and upload it.
3. Under **Classification**, select "Undefined".
4. Enter `/wfs/ca-certs/` for the **Device file location**.

5. Enable read and write permission for the **Owner**, read permission for **Others** and set the **Owner** to **Root**.

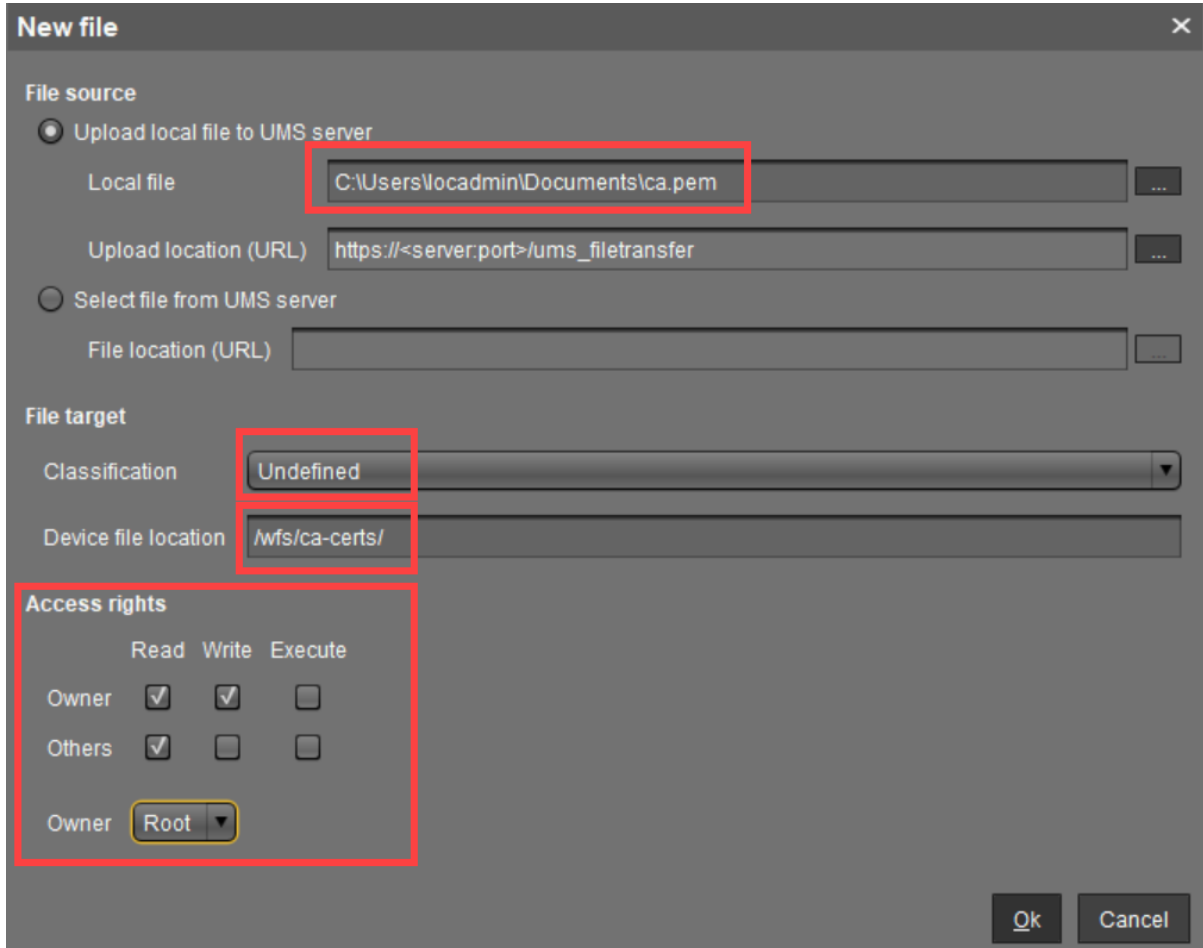

**New file** [X]

**File source**

Upload local file to UMS server

Local file: C:\Users\locadmin\Documents\ca.pem

Upload location (URL): https://<server:port>/ums\_filetransfer

Select file from UMS server

File location (URL):

**File target**

Classification: Undefined

Device file location: /wfs/ca-certs/

**Access rights**

|        | Read                                | Write                               | Execute                  |
|--------|-------------------------------------|-------------------------------------|--------------------------|
| Owner  | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input type="checkbox"/> |
| Others | <input checked="" type="checkbox"/> | <input type="checkbox"/>            | <input type="checkbox"/> |

Owner: Root

Ok Cancel


6. Click **Ok**.
7. Assign the file object to the desired devices.

#### Configuration of Log Forwarding on IGEL OS


As of IGEL OS 11.06.100, you can configure the log forwarding with TLS encryption as follows:



1. In the UMS, create a new profile. See Creating Profiles.

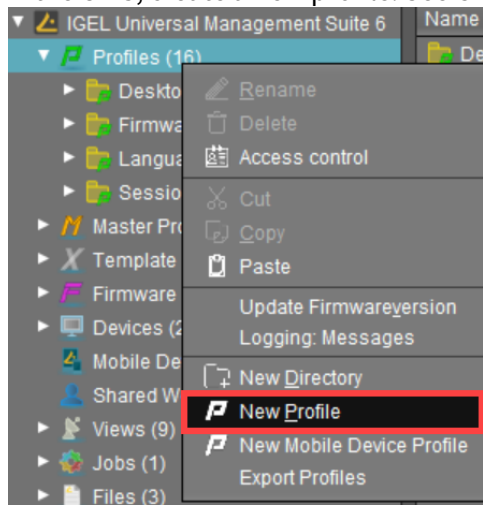

2. In the configuration dialog, go to **System > Logging**.
3. Set **Remote mode** to "Client".
4. Click the **Add** button.
5. Make the required settings and activate **TLS enabled**.
6. Under **CA certificate**, specify the path to the CA root certificate you have installed previously, e.g. `/wfs/ca-certs/ca.pem`.

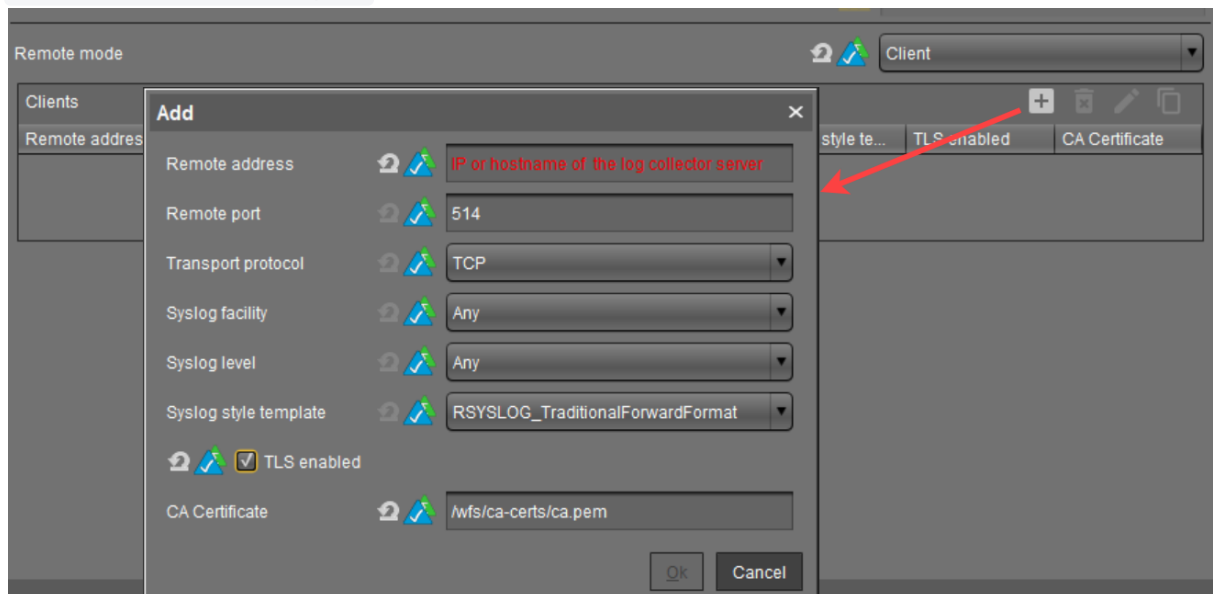

7. Save the changes and assign the profile to the desired devices.
8. Reboot the devices to make the change effective.


### Instructions for IGEL OS before 11.06.100

In IGEL OS before version 11.06.100, configure the log forwarding with TLS encryption as follows:

1. Create a text file `50-tlslog.conf` with the following content:

```
global(DefaultNetstreamDriverCAFile="/wfs/ca-certs/ca.pem")
*. * action(type="omfwd" protocol="tcp"
Target="<IP address or DNS name of the log collector>" port="<Port
of the log collector>"
StreamDriver="gtls" StreamDriverMode="1"
StreamDriverAuthMode="anon"
template="RSYSLOG_TraditionalFileFormat")
```

2. Create a **new file** in the UMS Console under **Files** by right-clicking.
3. Under **Local file**, select the file `50 - tlslog.conf` and upload it.
4. Under **Classification**, select "Undefined".
5. Enter `/wfs/` under **Device file location**.
6. Enable read permission for the **Owner** and for **Others** and set the **Owner** to **User**.

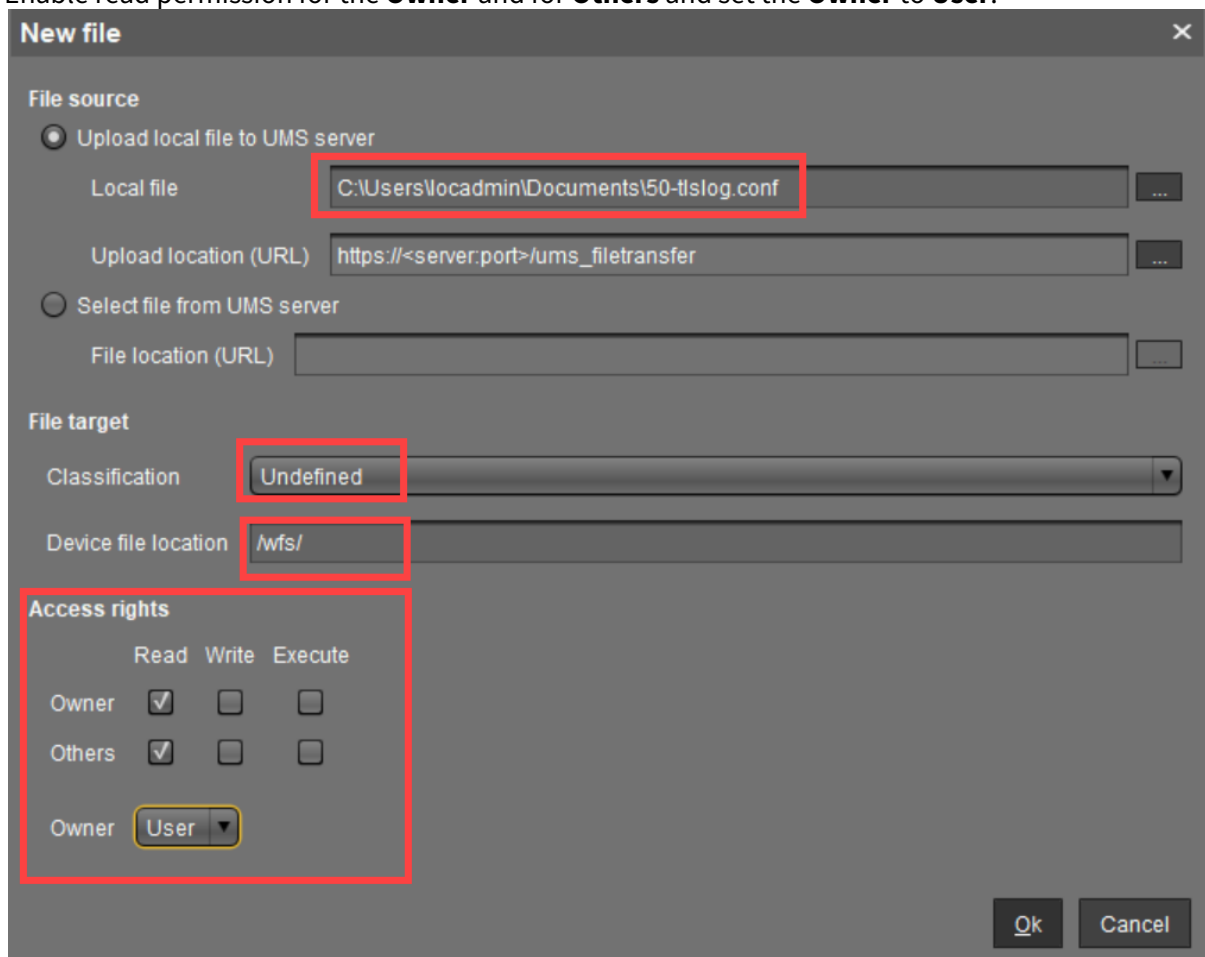

**New file**

**File source**

Upload local file to UMS server

Local file:

Upload location (URL):

Select file from UMS server

File location (URL):

**File target**

Classification:

Device file location:

**Access rights**

|        | Read                                | Write                    | Execute                  |
|--------|-------------------------------------|--------------------------|--------------------------|
| Owner  | <input checked="" type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| Others | <input checked="" type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |

Owner:

7. Click **Ok**.
8. Assign the file object to the desired devices.

9. Create a profile with the following content:
  - a. In the configuration dialog, go to **System > Firmware Customization > Custom Commands > Basic**.
  - b. Enter the following line in the **Initialization** field:

```
cp /wfs/50-tlslog.conf /etc/rsyslog.d/
```
10. Assign the profile to the desired devices.
11. Reboot the devices to make the change effective.

### Action: Analyze Configuration Changes

In addition, various log entries for administrative activities can be searched in the Universal Management Suite:

- Choose **System > Logging > Log Messages** to see when settings and commands were sent to which device.
- Choose **System > Logging > Event Messages** to see changes to objects in the Universal Management Suite.
- Choose **System > Logging > Remote Access** to find out when which UMS user has shadowed which device using **Secure Shadowing**.

## Datensicherung

This document is available in German only.

## Verschlüsselung

## Virenschutz


## Systempflege

## Zusätzliche Anforderungen aus SYS.2





## Xz Backdoor (CVE-2024-3094) Does Not Affect IGEL OS 11 and OS 12

 IGEL OS 11 and IGEL OS 12 do not contain an xz package version that is vulnerable to the xz backdoor (CVE-2024-3094).  
IGEL OS customers do not need to take any measures.  
Customers running IGEL Universal Management Suite (UMS) on Linux or running IGEL Cloud Gateway (ICG) should check with their host OS vendor whether their OS version is vulnerable.

### References

CVE-2024-3094: <https://nvd.nist.gov/vuln/detail/CVE-2024-3094>